



Infotainment Navigation Columbus Owner's Manual



Structure of this Owner's Manual (explanations)

This Owner's Manual has been systematically designed to make it easy for you to search for and obtain the information you require.

Chapters, table of contents and subject index

The text of the Owner's Manual is divided into relatively short sections which are combined into easy-to-read **chapters**. The chapter you are reading at any particular moment is always specified on the bottom right of the page.

The **Table of contents** arranged according to chapter and the detailed **Subject index** at the end of the Owner's Manual help you to rapidly find the information you are looking for.




Direction indications

All direction indications such as "left", "right", "front", "rear" relate to the direction of travel of the vehicle.

Units of measurement



All values are expressed in metric units.

Explanation of symbols

-  Denotes a reference to a section with important information and safety advice in a chapter.
-  Denotes the continuation of a section on the next page.
-  Denotes a registered trademark.

Examples of the information listed in the Owner's Manual

Press the button  →  → **Sound**.

This information means that the first the button  on the device and then the function key  on the device screen is to be operate and then the menu is to be confirmed by pressing the function key **Sound**

The "→" symbol indicates the next step.

Example of the menu, the available menus, menu items or functions.

- **xyz** - the first menu level
 - **xyz** - the second menu level
 - **xyz** - the third menu level
- **xyz** - the first menu level

Notes

WARNING

The most important notes are marked with the heading **WARNING**. These **WARNING** notes draw your attention to a **serious risk of accident or injury**.

CAUTION

A **Caution** note draws your attention to the possibility of damage to your vehicle (e.g. damage to gearbox), or points out general risks of an accident.

For the sake of the environment

An **Environmental** note draws your attention to environmental protection aspects. This is where you will, for example, find tips aimed at reducing your fuel consumption.

Note

A normal **Note** draws your attention to important information about the operation of your vehicle.



Preface

You have chosen a ŠKODA vehicle, which is fitted with the Infotainment Navigation Columbus (hereafter called the unit) - we thank you for your confidence in us.

The new operating concept allows you to configure vehicle settings and to operate some electronic systems centrally from the unit.

In addition to this Owner's Manual, please also carefully read the Vehicle Manual, because operation in accordance with these instructions is a prerequisite for proper use of the vehicle.

If you have any questions about your unit, please contact a ŠKODA Partner.

Your ŠKODA AUTO a.s. (hereinafter referred to as ŠKODA)



5E0012720 GD

Table of Contents

Abbreviations

Familiarization with the unit

Introductory information	4
Important notes	4
Unit overview	5
Unit operation	7
Concerning the device screen operation	7
Operation through the MAXI DOT display	9
Voice control	13
Unit settings	17
Setup menu	17

Audio/Video/Images

Radio	21
Operation	21
Radio settings	24
Media	26
Operation	26
signal sources	29
DVD video	34
Images	35

Phone

Communication	37
Telephones and two-way radio systems	37
Connect to the device to the mobile telephone	40
Telephone functions	43

Navigation

Description of the navigation system	47
Preface to navigation	47
Settings	48
Operating the map	50
Extra window	52
Navigation	55
Enter new destination	55
Entry of saved destinations	57
POI	58
POI categories	60
Route guidance	61
traffic reports	63
My tour	65
Destination management	66

Vehicle

Vehicle systems	68
Vehicle settings	68

Index

Abbreviations

Abbreviation	Definition
A2DP	a software profile for the one-way audio data transfer via Bluetooth®
ACC	Adaptive cruise control
AF	Alternative frequencies for the current radio station
AM	Amplitude modulation - denomination of the radio frequency range
TCS	Traction Control of the drive wheels
AVRCP	a software profile for the transfer of audiovisual data using Bluetooth®
AV	an audio-visual signal, typical for a DVD player or TV tuner
BT	Bluetooth® - wireless communication for reception and transmission of voice and data information
DAB	Digital radio reception
DRM	a system for monitoring or restricting the use of digital media content
ESC	Electronic Stability Control
exif	additional information data for an image file
FM	Identification of the radio-frequency range
HFP	- a software profile for data transfer via Bluetooth®, which allows for communication between a mobile phone and the in-vehicle hands-free equipment
GPS	Satellite system for position determination
GSM	Global System for Mobile communication, the most popular standard for mobile phones
ID3 tag	an additional feature of a music file, which allows for the display of artist, title, album name, etc.
KESSY	keyless unlocking, starting and locking
mp3	compressed audio format
NTSC	Coding standard of the audiovisual signal in North and Central America and some countries in South East Asia
PAL	Coding standard of the audiovisual signal in most European countries

Abbreviation	Definition
PI	Station identification of the RDS system, for example when setting a different radio station
RDS	System for the transmission of additional information for FM radio reception
TMC	Service for transmitting traffic information to the driver
TP	Identification of a traffic information station
vCard	File format (vcf) - for the personnel data exchange (especially electronic business cards)
VIN	Vehicle identification number
wma	compressed audio format

Familiarization with the unit

Introductory information

Important notes

Introduction

This chapter contains information on the following subjects:

Declaration of conformity	4
Component protection	4

These operating instructions describe **all possible equipment variants** without identifying them as special equipment, model variants or market-dependent equipment.

Consequently, this vehicle does **not need to contain all of the equipment components** described in these operating instructions.

The level of equipment of your vehicle refers to your purchase contract of the vehicle. More information is available from the ŠKODA Partner¹⁾ where you bought the vehicle.

Please note that these instructions are meant only as an addendum to the information presented in the Owner's Manual of the vehicle. Therefore, they can be used only in conjunction with the latest manual for this vehicle. For a detailed description of some functions listed in these instructions, see the Vehicle Manual for your vehicle.

The **illustrations** can differ in minor details from your unit; they are only intended for general information.

WARNING

- Concentrate fully at all times on your driving! As the driver you are fully responsible for the operation of your vehicle.
- Only use the device in a way that you are in full control of your vehicle in every traffic situation – there is the risk of accidents!

WARNING (Continued)

- Adjust the volume to ensure that acoustic signals from outside, e.g. sirens from vehicles which have the right of way, such as police, ambulance and fire brigade vehicles, can be heard at all time.
- High volumes can cause hearing damage!

Declaration of conformity

 **Read and observe  on page 4 first.**

ŠKODA AUTO a.s. hereby declares that the ŠKODA Infotainment systems meet the basic requirements and additional provisions of Directive 1999/5/EC with reference to radio equipment and telecommunications devices.

ŠKODA AUTO a.s. hereby declares that the "connection and the use of this communication device is granted by the Nigerian Communications Commission."

Component protection

 **Read and observe  on page 4 first.**

Some electronic control units are factory-equipped with component protection.

Component protection serves as a protection mechanism for the following:

- for the impairment of factory- or garage-fitted control units after installation in another vehicle (for example, after a theft);
- for the impairment of components operated outside of the vehicle.
- for the possibility of a legitimate installation or change of control units for repairs at a ŠKODA¹⁾ specialist garage.

When component protection is enabled, the following message appears on the unit display **Component theft protection: the infotainment system is not fully available at present. Please switch on the ignition.**

If the component protection does not activate by switching on the ignition, please contact a ŠKODA specialist garage.

¹⁾ Terms used » manual, chapter Preface.

Unit overview

Introduction

This chapter contains information on the following subjects:

Description of the unit	5
Touch screen	5
Switching the unit on/off	6
Unit menus	6
Adjusting volume	6

First and foremost, pay attention to the safety instructions » page 4, Important notes.

This chapter deals with the unit, the unit's buttons and their functions. It also covers switching the unit on and off, the main menus and adjusting the volume on the unit.

Description of the unit

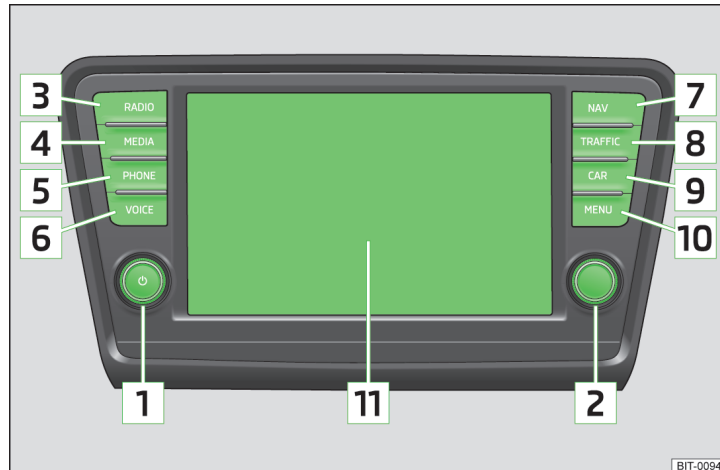


Fig. 1 Description of the device

Description of the device

- 1 - Control for switching on/off, volume adjustment
- 2 - Menu button for calls and confirmations
- 3 - Menu **Radio** » page 21
- 4 - Menu **Media** » page 26
- 5 - Menu **Telephone** » page 37
- 6 - Voice control » page 13
- 7 - **Navigation** menu » page 47
- 8 - List of traffic reports » page 63
- 9 - Vehicle systems settings » page 68
- 10 - Displays the unit menus » page 6
- 11 - Touch screen » page 7

Touch screen

The unit is equipped with a so-called touch screen » Fig. 1 on page 5 which can only be operated by the touch of a finger.

! CAUTION

- The screen can be operated by a slight touch of a finger. Do not apply pressure to the screen - risk of damage!
- Do not use any objects to operate the screen - risk of damage!
- Do not use solvents such as benzene or turpentine for cleaning, since they may damage the screen surface.

i Note

- Use a soft cloth and, if necessary, methylated spirits, to remove fingerprints from the screen. When doing so, ensure that you do not cause damage to other parts of the interior.
- It is not possible to operate the screen with your fingernails or while wearing gloves.
- Do not affix anything to the area of the unit below the screen. This could affect the functioning of the sensors for the zoom effect.
- To protect the screen, you can use a suitable screen protector for touchpads that does not affect its functionality.
- The brightness of the screen is adjusted automatically depending on the brightness of the interior lighting. The automatic setting can be adjusted manually » page 18.

Switching the unit on/off

➤ Press the  knob to switch the device on or off.

When the device is switched on, the audio source and operating mode that were active before switching off the device will be restored.

If **Telephone** mode was active before you switched off the unit and the ignition and Bluetooth® function is not switched on, the screen displays the message » page 38. Switch on the ignition or the Bluetooth® function» page 20.

If the vehicle key is pulled out of the ignition lock while the unit is switched on, the unit will switch off automatically. After switching on the ignition, the unit is turned on automatically.

If the device was switched off using the  knob, then the device will not switch on automatically after switching on the ignition.

The unit will switch off automatically after the engine is switched off and the door is opened if your vehicle is fitted with the KESSY system. If you open the driver's door before switching off the engine, the device will also switch off.

When the ignition is switched off, the device switches off automatically after approx. half an hour (discharge protection of the vehicle battery).

Unit menus

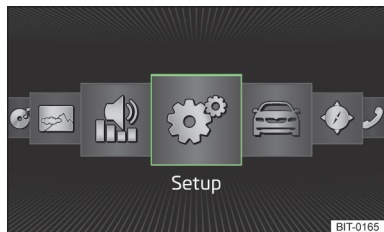





Fig. 2
Unit menus


Call up the main menu

➤ Press the  button.


Function keys in the MENU main menu

-  **Radio** - Menu **Radio** » page 21
-  **Media** - Menu **Media** » page 26
-  **Pictures** - Menu **Pictures** » page 35

 **Sound** - Sound settings » page 18

 **Setup** - Unit settings » page 17


 **Vehicle** - Vehicle system settings » page 68

 **Navigation** - Menu **Navigation** » page 47


 **Telephone** - Menu **Telephone** » page 37

Adjusting volume

Increase the volume

➤ Turn the  knob to the right.


Reduce the volume

➤ Turn the  knob to the left.

Muting

➤ Set the volume to 0 using the  knob.

Note

- The change in volume is displayed on the screen of the unit.
- The following symbol appears in the display when the sound is muted : .
- High volumes can cause sound resonance in the vehicle.
- The car speakers may be damaged if the volume is set too loud or is distorted.
- The loudspeakers in the vehicle are designed for a power output of the device of 4x20 W.
- When equipped with a sound system the speakers are matched for a total power amplifier output of 570 W.

Unit operation

Concerning the device screen operation

Introduction

This chapter contains information on the following subjects:

Operation	7
Input screen with keyboard for searching	8
Input screen with keyboard for storing information	8
Input screen with numeric keypad	8

First and foremost, pay attention to the safety instructions » page 4, Important notes.

This chapter covers the instrument operation and the work with the touch screen and with various types of input keyboards.

Operation

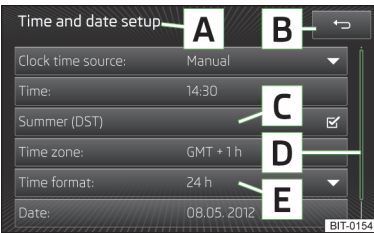


Fig. 3
Screen display

Explanation of graphic

- A** Currently selected menu
- B** - Return to the higher-level menu
- C** Function with "checkbox"
- D** Scroll bar - Shows the position in the menu; touch the scroll bar to navigate the menu
- E** Menu item with "pop-up window" ▼

Screen areas which confirm a function or a menu are called "function keys".

White or green function keys are active.

Greyed out function keys are not active.

Proximity sensors

At the bottom of the device there are proximity sensors. When approaching to the screen using the hand, the device changes the display mode in the operating mode and the function keys are highlighted.

Status line

In the main menu of some operating modes, the upper screen area contains a status line displaying time details and the external temperature, as well as information on the currently selected operating mode.

Function keys in the main menu

The lower screen area in the main menu of some operating modes contains function keys with symbols for functions or menus.

Selecting menu/menu item

- › Drag your finger over the screen in the required direction
- › Turn the menu knob **2** » Fig. 1 on page 5

If you make the selection by turning the menu knob **2**, the currently selected menu is highlighted in green.

Confirming menu/menu item

- › Touch the function key with your finger
- › Press the menu knob **2**

Returning to higher-level menu

Context-dependent

- › By pressing **↶**
- › By pressing the relevant button next to the screen
- › By touching the screen outside of the pop-up window with your finger

Switching function on/off with "checkbox"

Press the relevant function key

- › or - Function is switched on
- › or - Function is switched off

Set value

- › by touching the function keys with the symbols ▼/ ▲, ◀/ ▶, -/ +
- › Touch or move your finger over the scale

i Note

For some menus or menu items, the current setting is displayed, e.g. **Distance: km** or **Distance: mi**.

Input screen with keyboard for searching

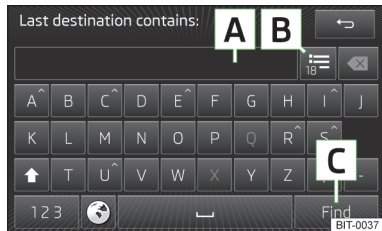


Fig. 4
Input screen for the search

The input screen with keypad is used to find entries in the unit memory (e.g. phone contacts, addresses, etc.).

Description of the function keys

- ↶ - Return to the higher-level menu
- ☰ - Display the menu with selected contacts, information on the number of relevant contacts
- ✕ - Delete characters in the entry line
- ⇄ - Toggle upper case to lower case and vice versa
- 🌐 - Menu display with keys in the selected language, including diacritics » page 19
- 123 - Switch to numbers and special characters
- §& - Switch to special characters
- ABC - Switch to letters
- - Blank entry
- OK - Confirmation of the text written in the command line or using **C** to start finding a stored entry

By pressing the keyboard function key on the input screen the required character appears in text line **A**.

Only those letters or symbols making up a logical entry will be available. Do not forget to enter a space for terms made up of more than one word, such as Lorem Ipsum. The entries can be entered without special characters (diacritics).

A search of the most relevant terms ensues as soon as letters are entered, so it is not necessary to enter the entire entry name.

In addition to the text line **A**, the number of matching entries is shown in the function key **B**.

The numbers 1-99 indicate the quantity of matching entries that were found. If even more entries were found, ** is indicated instead of a number. If less than 6 entries were found, a list of the found entries opens automatically.

Input screen with keyboard for storing information

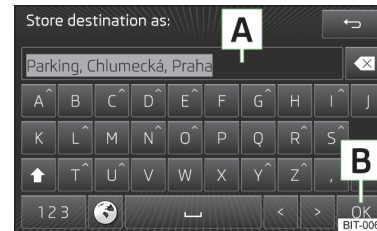


Fig. 5
Input screen for storing

For the entry procedure and the description of the function keys, see » page 8, *Input screen with keyboard for searching*.

The input screen with keyboard is used for free text entry (e.g. for entering a name).

If there is already an entry in the text line **A**, it can be edited before storing.

- ▶ The entry is stored in the unit memory by pressing the function key **B**.
- ▶ The function buttons with the symbols </> are used to move the cursor within the text line.

Input screen with numeric keypad



Fig. 6 Input screen with numeric keypad

The input screen with keypad is used for number input.

A - Input screen in the **Telephone** menu » page 44.

B - Input screen in the **Navigation** menu » page 55

Operation through the MAXI DOT display

Introduction

This chapter contains information on the following subjects:

Operate with the control lever buttons _____ 9

Operation with the buttons and wheels on the multifunction steering wheel - Audio _____ 9

Operation with the buttons and wheels on the multifunction steering wheel - Telephone _____ 11

Operation with the buttons and wheels on the multifunction steering wheel - Navigation _____ 12

First and foremost, pay attention to the safety instructions » page 4, Important notes.

Some of the device's features are also displayed in the MAXI DOT display¹⁾. Depending on the equipment, these features can be operated as follows.

- With the buttons on the operating lever
- With the buttons and wheels on the multifunction steering wheel

Operation with the buttons and wheels on the multifunction steering wheel - Audio

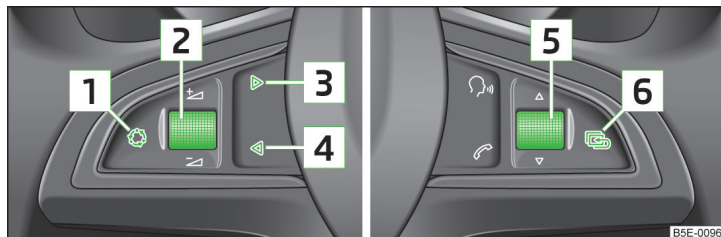


Fig. 8 Multifunction steering wheel - Audio menu

i Note

If the ignition and the side light are switched on, the buttons and dials on the multifunction steering wheel will also be illuminated.

Operate with the control lever buttons

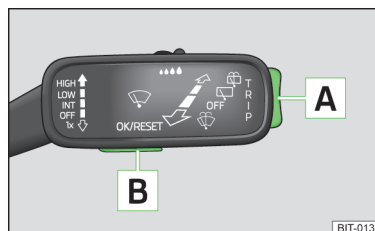


Fig. 7
Buttons on the control lever

The separate menus and menu items displayed in the MAXI DOT display can be operated as follows with the buttons on the control lever.

- A** Press and hold - open main menu
- A** Press briefly - select individual menu items or menus
- B** Press briefly - select menu item or menu

The Maxi DOT display the menu **Audio** displayed menu items can be operated with the buttons / dials on the multifunction steering wheel.

The information shown on the MAXI DOT display (depending on the menu selected)

- **Radio**
 - current frequency band of the radio station;
 - currently playing station of receivable radio stations in the given frequency band if less than 5 are receivable;
 - if more than 5 stations can be received, a list of receivable radio stations is displayed with an option to choose one of them;
 - TP traffic announcements.

¹⁾ The display in the MAXI DOT is described in the » Manual, chapter Information system

- Media/DVD video
 - Name

Buttons and wheels of the Radio or Media menus/DVD video

Button/ wheel » Fig. 8	Action	Function		
		Radio	Media	DVD video
1	Press briefly	Change source (change frequency bands and connected sources)		
1	Press and hold button	Switch between the Radio and Media menus or DVD video and open the last context status (e.g. the last radio station or track to be played) ^{a)}		
2	Press briefly	Switch off/on tone ^{b)}	Switch off sound and stop track playback or switch on sound and continue track playback	
2	Turn upwards	Increase volume of the current source ^{c)}		
2	Turn downwards	Lower volume of the current source ^{c)}		
3	Press briefly	Go to the next saved radio station in the station list or go to the station stored in the preset list ^{d)} Stop traffic report	Skip to next track ^{a)}	Skip to next chapter ^{e)}
3	Press and hold button	Stop traffic report	Fast forward ^{a)}	
4	Press briefly	Go to the previous stored radio station in the station list or go to the station stored in the preset list Stop traffic report	Go to the previous track when pressed within 3 s from the change of track, and to the beginning of the track when pressed 3 s after track change ^{a)}	Skip to start of chapter ^{e)}
4	Press and hold button	Stop traffic report	Fast rewind	
5	Press	Stop traffic report	No function	
5	Turn upwards	Display list of available stations Scroll upwards	Go to the previous track when pressed within 3 s from the change of track, and to the beginning of the track when pressed 3 s after track change ^{a)}	Skip to start of chapter ^{e)}
5	Turn downwards	Display list of available stations Scroll downwards	Skip to next track ^{a)}	Skip to next chapter ^{e)}


Button/ wheel » Fig. 8	Action	Function		
		Radio	Media	DVD video
[6]	Press briefly	Return to a previous level on menu		
[6]	Press and hold button	Return to Main Menu		

- a) Does not apply for AUX.
- b) The sound is turned on again by pressing or turning wheel [2]. Playback of navigation announcements is not turned off.
- c) If the system plays audible messages in voice mode dialogues of the device, the volume of the audible message is affected.
- d) Context-dependent selection.
- e) Applies to DVD video. Operation through the multifunction steering wheel works only if the **Audio** menu is selected in the information display of the instrument cluster.

i Note

For safety reasons, the video display is switched off at speeds over 5 km/h. The unit continues to play the soundtrack.

Operation with the buttons and wheels on the multifunction steering wheel - Telephone

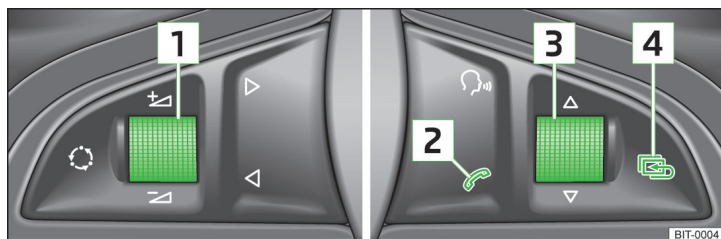

BIT-0004

Fig. 9 Multifunction steering wheel - Phone menu

Items in the MAXI DOT display **telephone** menu can be operated with the buttons / dials on the multifunction steering wheel.

- » In the main menu of the instrument cluster information display select the menu point **Telephone**

Buttons and wheels of the Phone menu




Button/wheel » Fig. 9	Action	Function
[1]	Press briefly	MUTE
[1]	Turn upwards	Increase the volume
[1]	Turn downwards	Reduce the volume
[2]	Press briefly	Accept call, end call, entry in the main menu of the telephone, call list, call the dialled contact
[2]	Press and hold button	Reject call, redial last call
[3]	Turn up/down	Call list, previous/next menu item
[3]	Press briefly	Confirm selected menu item

Button/wheel » Fig. 9	Action	Function
4	Press briefly	Return to a previous level on menu
4	Press and hold button	Return to Main Menu

Telephone call function in the MAXI DOT display

Depending on the context, the following functions can be carried out in the instrument cluster display:




Incoming call

-  **Answer** - Answer a call
-  **Reject** - Reject a call
-  **Ignore** - Ignore a call



Outgoing call



-  **Stop** - End a call

Current call

-  **Hang up** - End a call
-  **Mic. off** - Microphone off
-  **Mic. on** - Microphone on

Symbols in the MAXI DOT display

Symbol	Meaning
	Charge status of the telephone battery ^{a)}
	Signal strength ^{a)}

Symbol	Meaning
	A phone is connected to the unit
	Missed calls (if there are several missed calls, the number of calls is shown next to the symbol)


 

^{a)} This function is only supported by some telephones.

Call list

In the MAXI DOT display, only the call list can be displayed and used.

If the call list includes no entries, the following message appears in the MAXI DOT display **No entries available**.

The following symbols are displayed next to each entry in the call list.

Symbol	Meaning
	Incoming call
	Outgoing call
	Missed call

Operation with the buttons and wheels on the multifunction steering wheel - Navigation

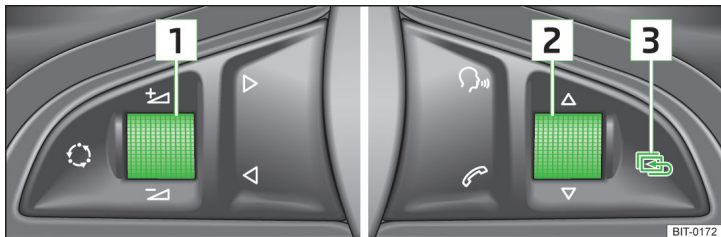



Fig. 10 Multifunction steering wheel - Navigation menu

Each item in the **Navigation** menu displayed in the MAXI DOT display can be operated with the buttons/wheels on the multifunction steering wheel.

- In the main menu of the instrument cluster information display select the menu point  **Navigation**

Navigation is in progress

Graphical navigation instructions and other route and destination information are displayed.

Navigation is not in progress

A compass/vehicle icon is shown to display the current vehicle position in relation to the compass.

Turn setting wheel **[2]** » Fig. 10 on the multifunction steering wheel to display the **Last destinations** menu.

The menu shows the **Home address** menu item and a list of recent destinations.

When you select one of the menu items, the destination name and the following items are displayed:

- **OK** - Start navigation
- **Cancel** - Return to the **Navigation** menu - the compass/vehicle symbol will be displayed

Buttons and wheels of the Navigation menu

Button/ wheel » Fig. 10	Action	Function
[1]	Press	Interrupt current navigation announcement
[1]	Turn upwards	Increase volume of navigation announcements
[1]	Turn downwards	Reduce volume of navigation announcements
[2]	Press briefly	Repeat or clarify the last navigation announcement or confirm a menu item in the list of recent destinations
[2]	Turn upwards	
[2]	Turn downwards	Show the option to stop navigation or display the list of recent destinations
[3]	Press briefly	Return to a previous level on menu
[3]	Press and hold button	Return to Main Menu

Voice control

Introduction

This chapter contains information on the following subjects:

Function requirements	14
Switching on/off	14
Help for voice control	15
Operation	15
not recognizing a voice command	15
Correction possibility of a voice command input	15
Stop/restore voice command input	15
Not in the help voice commands	16

If the home address is not defined when the menu item **Home address** is selected, the following message appears: **Please enter the home address on the infotainment system.**

First and foremost, pay attention to the safety instructions » page 4, Important notes.

Some equipment functions can be operated using voice commands. Thus, the use of the device is accelerated and increased comfort while driving.

Voice control can be used in the **Radio, Media, Telephone** and **Navigation** menus.

The voice control system can be operated either by the driver or by the front passenger. ▶

! WARNING

- Please pay attention to the traffic first and foremost! As the driver you are fully responsible for road safety. Only use the system so that you are in full control of your vehicle in every traffic situation - risk of accident!
- Do not use the voice control system when under stress or in an emergency. Your voice commands may not be recognized in such situations. The telephone connection may not be established or the connection may take too much time to complete. The emergency number should be dialled manually!

Function requirements

📖 Read and observe ! on page 14 first.

Function requirements for voice control.

- ✓ The ignition is switched on.
- ✓ The unit is switched on.
- ✓ No phone call is in progress.
- ✓ The parking aid is not active.

Requirements for optimum voice command recognition.

- Only give voice commands when the symbol is displayed on the device screen or in the information display. 🗣️
- Speak with a normal tone of voice without intonation and excessive pauses.
- Avoid a bad pronunciation.
- Close doors, windows and the sliding roof, in order to prevent external disturbances affecting recognition of the voice commands.
- It is recommended to speak louder at higher speeds, so that the tone of your voice is louder than the increased surrounding noise.
- During voice control, limit additional noise in the vehicle, e.g. passengers talking at the same time.

! CAUTION

For some languages, there is no voice control available. This device indicates this fact through a text message that is displayed after setting the device language screen » page 17.

i Note

- During voice control, no navigation announcements and traffic announcements are played.
- Some voice commands must be spelled out when pronouncing depending on the selected language of communication, such as the Source Selection "SD" card one.

Switching on/off

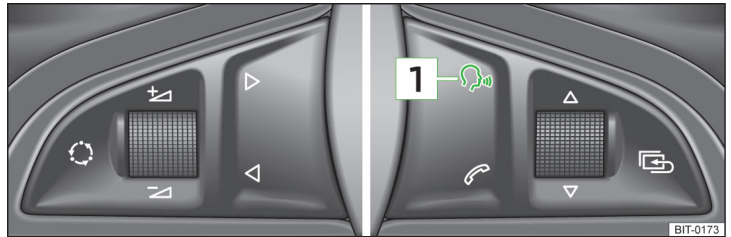


Fig. 11 Multifunction steering wheel

📖 Read and observe ! on page 14 first.

Switching on voice control

- Briefly press the **(VOICE)** button on the device.
- Briefly press the symbol key 🗣️ 1 on the multifunction steering wheel.

Activation of voice control is indicated by an acoustic signal and the device screen will display a collection of basic voice commands for the current menu.

The menu display as well as the acoustic signal can be enabled or disabled » page 20 .

Switching off voice control

- Press the **(VOICE)** button on the device for a long time or press it twice.
- With a long or double press the symbol key 🗣️ on the multifunction steering wheel.
- Touch the screen with your fingers (any part of the screen with the exception of the function key 🗣️).
- Press a button on the device (except for a short pressing of the **(VOICE)** button).
- Utter the voice command **Cancel voice control**.

Help for voice control

📖 Read and observe **!** on page 14 first.

Start introduction

When you give the voice command **Start tutorial**, the unit plays one of the seven parts of the voice control tutorial.

Individual parts of the introduction can be called separately by the saying the voice command **Introduction part ...** and the number 1 through 7.

Help

When you give the voice command **Help**, the unit displays a menu containing possible context dependent voice commands. In some cases after repeating the voice command **help** another part of the help is reproduced with a menu of possible voice commands.

The help does not contain all possible commands.

Operation

📖 Read and observe **!** on page 14 first.

The voice control system can usually be operated through the method "**say what you see.**"

Say the descriptions of the green highlighted function keys. For example, the function key **select no.** can be accessed via the voice command "**select number**".

Voice control settings » [page 20](#).

Icons in the voice control menu

- 🔊 a voice output is played
- 🔇 a voice command is awaited
- 🔇 a voice command entry is stopped » [page 15](#)
- 🗨️ a voice command is recognized

It is not necessary to wait for the end of message playback when the system is playing a voice output. The message can be ended by briefly pressing the **(VOICE)** button or the symbol key **🗨️** on the multifunction steering wheel. This cancels voice output and causes the system to wait for a new voice command.

not recognizing a voice command

📖 Read and observe **!** on page 14 first.

If a voice command is not recognised, the system answers with **Pardon?** and you can give a new command.

If the system does not recognise the second voice command, the help message is provided again and you can give a new command.

If the system does not recognise the third voice command, the system plays the **Voice control cancelled** message and the dialogue is ended.

Correction possibility of a voice command input

📖 Read and observe **!** on page 14 first.

A voice command can be corrected, modified or re-entered by briefly pressing the **(VOICE)** button on the device or the symbol key **🗨️** on the multifunction steering wheel. However, this is only possible if the symbol **🔇**

You do not have to wait until the voice command is recognized by the system.

Stop/restore voice command input

📖 Read and observe **!** on page 14 first.

In some menus, the procedure for entering voice commands can be stopped by turning the knob **[2]** » [Fig. 1 on page 5](#).

The symbol displayed on the unit screen or in the information display then changes from **🔇** on **🗨️**.

Restore entry

- by pressing the function key **🗨️**;
- by pressing the **(VOICE)** button on the device;
- Press the symbol key **🗨️** on the multifunction steering wheel.

Not in the help voice commands

📖 Read and observe **I** on page 14 first.

Voice commands to call control menus, folders and directories in each menu.

Function	Voice command
Return to the higher-level menu ↩	back
Scroll through the menu / list / directory	next page
	previous page
	first page
	last page


 

 
 
Voice commands for navigation parameters

Function	Voice command
Switch navigation announcements on/off	Turn on navigation prompts
	Turn off navigation prompts
Switch navigation guidance assisted by TMC traffic messages on or off	Turn on dynamic route
	Turn on dynamic navigation
	Turn off dynamic route Turn off dynamic navigation
Switch traffic sign display in the unit screen on/off » page 51	Show traffic signs in map
	Turn off traffic sign in map
Show or hide lane guidance in the unit screen » page 63	Turn on lane guidance
	Turn off lane guidance
Show or hide favourites icons in the map	View favorites
	Turn off favorites





Voice commands for querying route information

Function	Voice command
Information concerning distance to the destination	Remaining distance
Information concerning time of arrival at destination	Arrival time
Information about the travel time to the destination	Driving time

Voice commands for the symbols in the Settings menu for map display

Symbol	Voice command
	Map "2 D"
	Map "3 D"
	Map with elevations
	Destination map
	Overview map

Voice commands for the symbols to operate the map display

Symbol	Voice command
	Orientation zoom
	Position map
	Autozoom
	Scale ... > Meter Kilometre Yards Miles e.g. Scale five kilometres

You can define the target address in one step by speaking the city, the street and the house number. The navigation data must contain the house number.

The house number and a further address supplement in the form of a number can be said where necessary. The system will then offer the number combination it has found if the house number and the further address supplement, where appropriate, exists in the street entered.

Unit settings

Setup menu

Introduction

This chapter contains information on the following subjects:

Main menu	17
Sound settings	18
Screen settings	18
Time and date settings	19
Keyboard settings	19
Additional keypad language settings	19
Unit settings	19
Voice control settings	20
Restore factory settings	20
Bluetooth® settings	20

First and foremost, pay attention to the safety instructions » page 4, Important notes.

This chapter covers the basic settings of the device.

Additional settings are described in the individual menus

- Radio » page 24
- Media » page 28
- DVD video » page 35
- Images » page 36
- Phone » page 39
- Navigation » page 48
- Vehicle system settings » page 68

¹⁾ The correct display of country-specific characters (e.g. ID3 tag information) cannot always be guaranteed.

Main menu

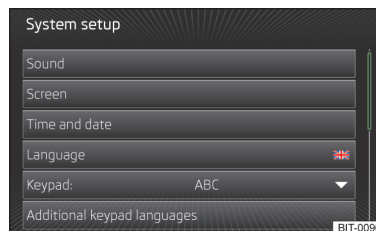


Fig. 12
Unit settings: Main menu

From the main menu, the basic parameters of the device can be set.

Call up the main menu

► Press **(MENU)** → the function key with the symbol .

Menus in the main menu for unit setup

- **Sound** - Sound settings » page 18
- **Screen** - Screen settings » page 18
- **Time and date** - Time and date settings » page 19
- **Language** - Setting the device language¹⁾
- **Keypad:** - Keypad display for text entry » page 19
- **More keypad languages** - Enables you to enter characters other than those available for the selected language » page 19
- **Units** - Unit settings » page 19
- **Voice control** - Voice control settings » page 20
- **Remove SD card 1 safely** - Safe removal of the SD card from slot 1
- **Remove SD card 2 safely** - Safe removal of the SD card from slot 2
- **Remove USB device safely** - Safe removal of USB device
- **Factory settings** - Reset to factory settings » page 20
- **Bluetooth** - Settings for the Bluetooth® function » page 20
- **System information** - Displays system information
 - *Device part number: ...* - Part number of the device
 - *Hardware: ...* - Version of the hardware used
 - *Software: ...* - Version of the software used
 - *Navigation database: ...* - Version of the navigation data
 - *Gracenote database: ...* - Multimedia database version

- **Media Codec: ...** - Media codec version
- **Update software** - Manual software update (for more information see the SKODA Website www.infotainment.skoda-auto.com)
- **Copyright** - Information on licences and copyrights are only available in English

Sound settings



Fig. 13 Sound settings / Balance - fader settings

➤ Press the button **MENU** → **Settings** → **Sound**.

- **Volume** - Volume settings
 - **Traffic report** - Sets the volume for the traffic program alerts (TP)
 - **Nav. announcements** - Sets the volume of the navigation announcements
 - **Voice control** - Sets the volume for the voice control
 - **Maximum switch-on volume** - Sets the maximum volume after switching on
 - **Speed-dependent volume adjustment** - Speed-dependent volume increase
 - **iPod volume** - Sets the volume for the connected iPod (on the USB media input)
 - **Quiet** - Low volume
 - **Medium** - Medium volume
 - **Loud** - High volume
 - **AUX volume** - Sets the volume for the device connected through AUX
 - **Quiet** - Low volume
 - **Medium** - Medium volume
 - **Loud** - High volume


- **Bluetooth audio** - Sets the volume of the Bluetooth® device connected
 - **Quiet** - Low volume
 - **Medium** - Medium volume
 - **Loud** - High volume
- **Audio lowering:** - Setting the reduction of the volume when the park distance control is active
 - **Off** - switches off
 - **Weak** - weak reduction
 - **Medium** - medium input sensitivity
 - **Strong** - strong reduction
- **Bass - Mid - Treble** - Sets the bass, mid and treble
- **Balance - Fader** - Sets the balance between left and right, front and rear
- **Confirmation tone** - Switch on/off confirmation tone when a function key is pressed
- **No navigation sound during call** - Switches on or off the navigation prompts during a telephone conversation
- **Subwoofer** - Subwoofer volume settings
- **CANTON advanced setup** - Setup of the Canton®-Sound system
 - **Select equaliser sound** - Equaliser settings
 - **Music** - Sound ranges adjusted for listening to music
 - **Speech** - Subwoofer operation is suppressed to highlight the speech sound range
 - **Sound focus:** - Set the sound perception for different zones in the vehicle interior
 - **Off** - Settings apply to the whole vehicle
 - **Front** - Optimised setting for the front seat occupants
 - **Driver** - Optimised setting for the driver
 - **CANTON surround** - virtual Canton®-surround system (active during media playback)

Screen settings

➤ Press the button **MENU** → **Settings** → **Screen**.

- **Switch off screen (in 10 seconds)** - Activate/deactivate energy-saving mode for the display¹⁾
- **Brightness:** - Adjusts the brightness of the screen
 - **Brightest** - brightest level
 - **Brighter** - brighter level
 - **Medium** - medium level
 - **Darker** - darker level
 - **Darkest** - darkest level
- **Confirmation tone** - Switch on/off confirmation tone when a function key is pressed
- **Animation when finger near screen** - Switches on or off hiding of the bottom menu bar
- **Show clock in standby mode** - Time and date displayed on the screen when the ignition is switched on and the unit is switched off

Time and date settings

- Press the button **MENU** →  → **Time and date.**
- **Clock time source:** - Type of time settings
 - **Manual** - Manual setting
 - **GPS** - Take the values from the GPS signal received
- **Time:** - Time settings
- **Summer (DST)** - Switches the summer time setting on/off
- **Time zone:** - Select the time zone
- **Time format:** - Set the time format
 - **12h**
 - **24h**
- **Date:** - Date settings
- **Date format:** - Set the date format
 - **DD.MM.YYYY** - Day - Month - Year
 - **YYYY-MM-DD** - Year - Month - Day
 - **MM-DD-YYYY** - Month - Day - Year

Keyboard settings


- Press the button **MENU** →  → **Keyboard:**

- **ABC** - keys arranged alphabetically
- **QWERTY** - Arrangement of the keys as per the QWERTY system (in accordance with computer keyboard arrangement)

Additional keypad language settings

- Press the button **MENU** →  → **More keypad languages.**

In this menu, the keyboard character arrangement for the chosen language can be selected, and with this the option for fast entry of the characters used in the selected language.

It is then possible to swap between the languages in the input screen showing a keyboard by pressing.  » [page 8](#).

Unit settings



- Press the button **MENU** →  → **Units.**

- **Distance:** - Distance units
 - **km** - Kilometres
 - **mi** - Miles
- **Speed:** - Speed units
 - **km/h** - Kilometres per hour
 - **mph** - Miles per hour
- **Temperature:** - Temperature units
 - **°C** - Degrees Celsius
 - **°F** - Degrees Fahrenheit
- **Volume:** - Volume units
 - **l** - Litres
 - **gal (US)** - Gallons (US)
 - **gal (UK)** - Gallons (UK)
- **Consumption:** - Consumption units
 - **l/100km** - Litres per 100 kilometres
 - **km/l** - Kilometres per litre
 - **mpg (US)** - Miles per gallon (US)
 - **mpg (UK)** - Miles per gallon (UK)



¹⁾ If after 10 seconds, the screen is not activated by approaching, touching the screen or operating the menu button **2** » [Fig. 1 on page 5](#), the screen turns black. You can switch the display back on again by approaching it with your hand, touching it, or operating the menu knob **2**.

- **Gas consumption:** - Gas consumption units
 - **kg/100km** - Kilograms per 100 km
 - **km/kg** - Kilometres per kilogram
 - **m³/100km** - Cubic metres per 100 kilometres
 - **km/m³** - Kilometres per cubic metre
- **Pressure:** - Pressure units for tyre pressure
 - **kPa** - Kilopascal
 - **bar** - bar
 - **psi** - Pounds per square inch

Voice control settings




- › Press the button  →  → **Voice control**.
- **Dialogue style:** - Setting the dialogue style
 - **Long** - Long dialogue (the system plays complete acoustic messages)
 - **Short** - Short dialogue (the system shortens some acoustic messages or substitutes them with an acoustic signal)
- **Display available commands** - Switch on/off the menus containing basic voice commands when voice control is activated
- **Voice control session start tone** - Switch on/off the audible signal that is output when voice control is activated
- **Voice control session end tone** - Switch on/off the audible signal that is output when voice control is ended
- **Input tone in voice dialogue** - Switch on/off the audible signal that is output to signal that voice control is waiting for a command

Restore factory settings

- › Press the button  →  → **Factory settings**.
- *Reset all settings and data*
 - **Restore factory settings** - Reset all factory settings
- *Reset individual settings/data*
 - **Sound** - Restore default settings for sound
 - **Radio** - Restore default settings for radio
 - **Vehicle** - Restore default settings for the vehicle systems
 - **Telephone** - Restore default settings for phone
 - **Media** - Restore default settings for media
 - **Voice control** - Restore default settings for voice control

- **Navigation** - Restore default settings for navigation
- **System** - Restore the system default settings

Bluetooth® settings

- › Press the button  →  → **Bluetooth**.
- **Bluetooth** - Switch on/off Bluetooth® function
- **Visibility:** - Switch on/off the visibility of the Bluetooth® device for other devices
 - **Visible** - Visibility is always on
 - **Hidden** - Visibility is off
 - **At start-up** - Turns on visibility for 5 minutes after switching on the ignition or until the driving speed has exceeded 5 km/h
- **Name:** - Open the input screen with keyboard - Change the device name
- **Paired devices** - Display the list of paired Bluetooth® devices; connect or delete a paired device; delete the list of paired devices
 - **Delete all** - Delete all paired Bluetooth® devices
 -  - Delete the paired Bluetooth® device
- **Find devices** - Searches for available external devices with enabled Bluetooth® functions and activated visibility » [page 41](#)
- **Bluetooth audio (A2DP/AVRCP)** - Switch on/off the connection option for Bluetooth® profiles A2DP and AVRCP¹⁾

¹⁾ A2DP and AVRCP are Bluetooth® profiles that support multimedia functions.

This chapter contains information on the following subjects:

Mainmenu	21
List of available stations	22
Search for radio stations and store	22
Search available stations (Scan)	23
Station logos	23
Traffic programme	23
Station information (DAB)	24

First and foremost, pay attention to the safety instructions » page 4, Important notes.

The device allows analogue radio reception of FM and AM frequency ranges as well as DAB digital radio reception.

Radio reception DAB allows multiple stations to be transmitted in a single frequency in the form of a so-called ensemble. It also allows for the transmission of additional data and information (e.g. messages, sport, weather, warnings, etc.).

! CAUTION

- Car parks, tunnels, tall buildings or mountains can interfere with the radio signal even causing it to fail completely.
- In countries where the RDS function is not supported sufficiently, we recommend turning off the AF and RDS settings. Otherwise, these settings can affect the functionality of the radio.
- For vehicles with window antennas, if the windows have foil stuck to them or metal-coated stickers this may cause you to experience some interference.

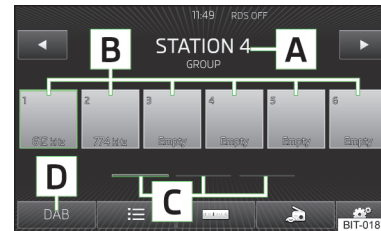


Fig. 14
Radio: Main menu

Read and observe ! on page 21 first.

Explanation of graphic » Fig. 14

A The selected radio station (frequency or identifier)

B Station keys

C Storage groups of the preset buttons

D Choice of radio range (FM / AM / DAB)

☰ List of available stations » page 22

⏮ manual / semi-automatic station search » page 22

◀▶ Changing channels either in the list of available stations or the station buttons depending on the settings of the menu **Arrow buttons**: » page 24, Settings

⚙ Radio settings

📡 Information for radio station (DAB) » page 24

For each broadcasting range (FM / AM / DAB) there are 18 preset buttons to store the radio stations. These preset buttons are divided into three memory groups.

Call up the main menu

➤ Press the **(RADIO)** button.

Choose broadcasting range

➤ Press the **(RADIO)** button repeatedly.

or

➤ Press the function button **D** » Fig. 14, and select the desired range. ▶

Information symbols in the display

Symbol	Meaning
TP	Traffic information station
no TP	Traffic information signals are not available or the selected station is not a traffic information station
RDS OFF	RDS function is switched off (FM)
AF OFF	AF Alternative frequency is switched off (FM)

List of available stations

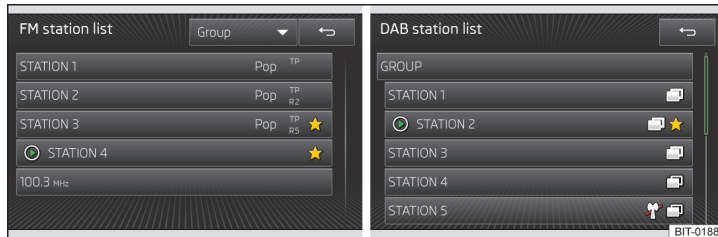


Fig. 15 Example, the list of available stations: FM / DAB

Read and observe **[!]** on page 21 first.

All stations with sufficient reception, which is available at the given location, are in the **list of available stations**. The device examines these stations automatically.

Show stations list

Press the function key in the **Radio** main menu **[☰]**.

Information symbols in the display

Symbol	Meaning
☆	Radio station, which is stored under a preset button
▶	Currently selected radio station
TP	Traffic information station
Pop (e.g.)	Type of program being broadcast (FM)
R2 (e.g.)	Type the regional broadcast (FM)

Symbol	Meaning
✖	Signal is not available (DAB)
🖼️	Radio stations with picture representation (slideshow) (DAB)

Update station list

The station list is continually updated automatically.

Sorting types of radio stations in the station list (FM)

- **Alphabet** - alphabetical order according to station name
- **Group** - Sort by transmitted-type program

Search for radio stations and store

Read and observe **[!]** on page 21 first.

A radio station can also be searched and stored under a preset button as follows.

Automatic station search

Automatically set stations are in the list of available stations.

Semi-automatic station search

- In the **radio** menu, press the function key **[⏏]**.
- Press the function key **<** or **>**.

The device scans the broadcasting range until the first receivable station is tuned.

Manual station search

- In the **radio** menu, press the function key **[⏏]**.
- Select the desired station using the function keys **</>** or adjusted by moving the slider across the screen.

Store radio stations under a preset button

Press the desired station in the list of available stations and hold down.

A list of station buttons **[B]** will be displayed » Fig. 14 on page 27.

Press the station button **[B]** where you want to save the desired station.

or

- set the desired radio station manually or semi-automatically.
- Press and hold the desired station button **[B]** until you hear an acoustic signal.

You can switch between memory groups of individual preset buttons using the function keys **[C]**

Search available stations (Scan)


 **Read and observe**  on page 21 first.

This function plays all the receivable stations in succession for a few seconds each.

Switching on

➤ Press the menu knob **[2]** » *Fig. 1 on page 5.*

or

➤ In the **radio** menu, press the function key  → **Scan**.

Switching off

➤ Press the menu knob **[2]**.

or

➤ press any function key in the device screen.

After switching off the function, the device plays the station at which the function was cancelled.

Station logos

 **Read and observe**  on page 21 first.

The present buttons **[B]** » *Fig. 14 on page 21* can be linked to logos (images) of the radio stations.

Store station logos automatically (FM / DAB)

➤ **Before you store the** radio station to a station button function key press in the **Radio** menu the function key  → Activate **Advanced settings**.

➤ Activate the menu item **Auto-save station logos** » *page 24, Advanced Settings (FM)* and » *page 25, Advanced Settings (DAB)* .

When you save the station to a station button, the station is assigned a logo from the device memory if the logo is available in the memory.

Storing station logos manually

A logo can be assigned manually for the **previously stored** stations.

➤ The function key  Press → **Station logos**.

A menu with preset buttons for radio stations is displayed.

➤ Press the preset button for the station, which a logo is to be assigned to.

A menu of media (CD, SD card, USB) is displayed.

➤ In the relevant media select the image you want to have.

By selection of the image it is assigned to the relevant station button.

Note

- The following image formats are supported: jpg, gif, png, bmp.
- We recommend a resolution of up to 500 x 500 pixels.

Traffic programme

 **Read and observe**  on page 21 first.

Switching on/off

➤ In the **radio** menu, press the function key  .

➤ Enable or disable the menu item **Traffic programme (TP)**

Traffic news

During a traffic announcement, the following menu is displayed.

- **Cancel** - interruption of the current traffic report. The TP function remains activated.
- **Deactivate** - Exit the current traffic report and turn off TP function.

Note

Some radio stations misleadingly identify themselves as traffic programs. It is therefore not an error with the unit that there is no traffic news with these stations.

- During playback in the **media** menu the traffic information from the last selected radio station is received.
- Should this radio station not transmit traffic reports or the signal is not available, then the device automatically searches for a TP station.

Station information DAB)



Fig. 16
Station information

Read and observe on page 21 first.

DAB allows the transmission of various additional information. The display options for this information can be adjusted on the screen in the following menu.

› In the **radio** menu, press the fbutton .

- **Preset list** - Display **only stored** DAB stations
- **Station info.** - Displays DAB station information, accompanying text (radio text) and images (e.g., artist name or programme and image type where these are broadcast)
- **Radio text** - Displays one radio text
- **Slide show** - Displays one image; (the image will switch to full-screen view until you switch the screen back on by moving your hand towards it)

Note

If you touch the screen in the area where the accompanying text (radio text) is displayed, the screen will only display this information. If you touch the screen in the area of the displayed image, only images will be displayed on the screen.

Radio settings

Introduction

This chapter contains information on the following subjects:

Settings	24
Advanced Settings (FM)	24
Advanced Settings (DAB)	25

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

The basic setting of the radio functions is the same for all broadcast ranges. The **Advanced setup** menu is different for FM and DAB. The AM broadcast area does not have this menu.

Settings

› In the **radio** menu, press the fbutton .

- **Sound** - Sound settings » page 18, *Sound settings*
- **Scan** - Auto-play all stations in the current frequency band, each station for around five seconds.
- **Arrow buttons:** - Set the station select function in the **Radio** menu
 - **Preset list** - only switch preset radio stations (Preset buttons)
 - **Station list** - Switches all radio stations currently in range for the selected frequency band
 - **Traffic programme (TP)** - Switches traffic programme on/off
 - **Delete presets** - Deletes the stored stations (preset buttons)
 - - Delete a certain radio station (preset button)
 - **Delete all** - Deletes the stored stations (preset buttons)
 - **Station logos** - manual assignment of station logos » page 23
 - **Radio text** - Switching the text display radio (FM and DAB) on and off
 - **Advanced setup** - another setting that is different depending on the selected broadcasting range (FM and DAB)


Advanced Settings (FM)

› In the **radio** menu, press the function key .

- **Advanced setup**
 - **Alternative frequency (AF)** - Switching on/off the search for alternative frequencies of the station currently being heard, when you turn off **AF off** is displayed on the device screen
 - **Radio Data System (RDS)** - Switches on/off the RDS function ▶

- **RDS Regional:** - Switch on/off the automatic tracking of related regional stations
 - **Fixed** - Maintains the selected regional station continuously. When the signal is lost, another regional station must be set manually.
 - **Automatic** - Auto-selects the station with the best reception at the moment. If you lose reception the region, the unit will automatically set another available region.
- **Auto-save station logos** - Auto save the station logo according to the PI code of the radio station » [page 23](#)

Advanced Settings (DAB)

➤ Select the DAB band in the **Radio** menu, and press the function key  → Activate **Advanced settings**.

- **Advanced setup**
 - **DAB traffic announcements** - Switch on/off DAB announcements
 - **Other DAB announcements** - Switch on/off other announcements (e.g., warnings, regional weather, sports reports, financial news)
 - **DAB - DAB station tracking** - Switch on/off automatic DAB station tracking in other station groups
 - **Automatic DAB - FM switching** - Switch on/off auto-switching from DAB to the FM frequency band if the DAB signal is lost
 - **L-Band** - Switch on/off the automatic DAB station search in L-band
 - **Auto-save station logos** - Automatic association of the logo with station detected » [page 23](#)

DAB programme tracking

If a DAB station is a member of several sender groups, when the signal is poor, the same station is searched in a different sender group.

Auto-change DAB -FM

If the DAB signal is poor, the unit will try to find a corresponding FM station for the DAB station you are currently listening to.

For auto-change to work, the DAB and FM stations must send a sender ID.

- While the station is being received on the FM band, (**FM**) is displayed after the station name. The () marker disappears when the relevant DAB station can be received again **FM**).
- If a DAB station is also not available in the FM band due to poor reception, the device will be switched to mute.
- If you do not want automatic station change (e.g. when driving through tunnels, when reception may be lost temporarily), you can deactivate this function.

L-band

For the DAB radio reception in different countries, different frequency ranges are used. In some countries the DAB radio reception only in the so-called L-band.

- If you have any problems with the DAB wireless reception it is necessary to ensure that the DAB Automatic tuning in L-band is on.
- If no L-band DAB radio reception is possible in the country then it is better to leave this menu item turned off. The channel scan is therefore faster.

Media

Operation

Introduction

This chapter contains information on the following subjects:

Main menu	26
Title / folder list	27
Track/folder database	27
Playback	28
Media settings	28

First and foremost, pay attention to the safety instructions » page 4, Important notes.

You can use the unit to play audio and video files in different formats » page 29, connect different signal source types, or store audio files in the internal memory of the Jukebox.

When the signal source has been connected, the device starts to automatically play audio files in alphabetical order.

Types of device operation » page 7.

- › On the device via the operating elements.
- › Using the function keys on the device screen.
- › Using the Maxi DOT display.

Main menu

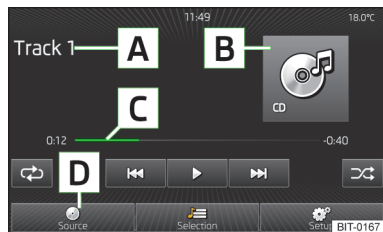


Fig. 17
Media: Main menu

Call up the main menu

- › Press the **MEDIA** button.

Explanation of graphic

- A** Information for the current file (e.g., artist, track title)
 - B** selected source / display of the album image ¹⁾ (cover art), with only your finger over the surface of the function key, you can scroll the album list
 - C** Display of the playing time / remaining time and the playing time axis is possible within the track (file) by moving the slider or by touching the desired location on the time axis
 - D** Signal source selection
- ≡ Track/folder list
 - ⚙ Media settings » page 28

Select input source

The function key menu **D** » Fig. 17 .

- 📀 **CD/DVD** - Changes to a CD/DVD in the player » page 31
- 💿 **SD card 1** - Changes to a memory card inserted in SD 1 » page 32
- 💿 **SD card 2** - Changes to a memory card inserted in SD 2 » page 32
- 🔌 **USB** - Changes to a data medium connected to the USB input » page 33
- 📱 **iPod** - Changes to an iPod (iPhone, iPad) connected at the USB input » page 33
- 🔊 **AUX** - Changes to an external audio source connected to the AUX input » page 33
- 📶 **BT audio** - Changes to a Bluetooth® player » page 31
- 📀 **Jukebox** - Changes to the Jukebox » page 30

¹⁾ So long as this is in the Gracenote® database or part of the file is being played (ID3 tag).

Title / folder list



Fig. 18 Track/folder list

Menu display

► Press the function key in the menu **Media** \equiv .

Explanation of graphic

A Displays the folder structure, function keys of higher-level folders

B Change to track/folder database » page 27

► Play the source or folder selected

⌘ Play the tracks in the source or folder selected in random order

↺ Repeat playback of the source or folder selected

SCAN Auto-play function for 10 seconds » page 28

Where the source is **SD card 1**, **SD card 2** or **USB 1**, you can change between **Folder** display or **Database** display.

It is only possible to change the display of the basic overview of the files/folders for the source concerned. The status line **A** shows the source currently selected.

i Note

- In the title / folder list a maximum of 1000 files / folders are displayed alphabetically.
- If the file format is not supported by the unit or the file is damaged and cannot be played the title / folder list displays a struck-through icon.

¹⁾ The popularity of titles such as ★ is determined by the setting the ID3 tag properties for the various titles.

Track/folder database

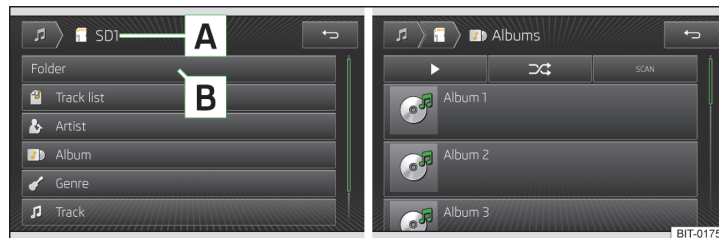


Fig. 19 Track/folder database

The unit is capable of classifying files according to the information in the ID3 tag file properties into the various categories of **Database**.

Explanation of graphic

A Displays the folder structure, function keys of higher-level folders

B Change to track/folder database » page 27

► Play the source or folder selected

SCAN Auto-play function for 10 seconds » page 28

Where the source is **SD card 1**, **SD card 2** or **USB 1**, you can change between **Folder** display or **Database** display.

It is only possible to change the display of the basic overview of the files/folders for the source concerned. The status line **A** shows the source currently selected.

By pressing the function key with the symbol \equiv is a **Database** or a **list** of titles / folders displayed in the currently selected track will be played.

To sort the files in the Database on the current source by the following categories:

Track list - Track lists by popularity ¹⁾/playback frequency

Artist - Sorted by artist's name

Album - Sorted by album name

Genre - Sorted by the genre assigned to the tracks

🎵 **Track** - Sorted by the track title

📺 **Video** - Files containing a video recording

i Note

- In the title / folder database a maximum of 1000 files / folders can be displayed alphabetically.
- If the file format is not supported by the unit or the file is damaged and cannot be played the title / folder database displays a struck-through icon.

Playback

The device plays the files in alphabetical order.

Description of the playback keys

Button	Action	Function
▶/	Press	Play / Pause
◀◀	Press briefly ^{a)}	Play the previous title
◀◀	Press briefly ^{b)}	Plays the current track from the start
◀◀	Press and hold button ^{c)}	Fast-reverse of the track
▶▶	Press briefly	Play the next title
▶▶	Press and hold button ^{c)}	Fast-forward of the track
↻	First press	Turn on the track repeat 🔄
	Second press	Turn on the repetition of the entire folder / source of signal 🔄
	Third press	Switch off the repetition
🎲	Press	Turn on / off the random playback of the folder / source (mix mode)
SCAN	First press	Automatic play from the folder / source
	Second press	Turn off the function SCAN

^{a)} Within about 3 seconds after the start of the track playback.

^{b)} After about 5 seconds after the start of playback of the track.

^{c)} The longer the button is pressed, the faster the fast forward/reverse.

Scan function



The **Scan** function can also be started/stopped in the main **Media** menu by pressing button [2] » Fig. 1 on page 5.

The **scanning** feature can also be cancelled by switching to another file / signal source or a function key is pressed for playback.

i Note

The function keys listed in the table are different depending on the currently selected menu screen.

Media settings

➤ Press the button in the menu **Media**  .

- **Sound** - Sound settings » page 18, *Sound settings*
- **Manage jukebox** - Save/delete supported audio/video files in the internal unit memory » page 30
- **Mix/repeat/scan including subfolders** - switching the song playback in the following modes (Shuffle / Repeat / Automatic play) **including subfolders in the current folder**
- **Bluetooth** - Settings for the Bluetooth® function » page 20
- **Video setup (files)** - Set the parameters of the video being played back from a file
 - **Format:** - Set the screen width/height ratio
 - **Automatic** - adjust the picture to the screen size
 - 16:9
 - 4:3
 - 14:9
 - 47:20
- **Video (DVD) settings** - Set the parameters of the video being played back from a DVD source » page 31
- **Traffic programme (TP)** - Switches traffic programme on/off
- **External AUX device** - Activate/deactivate the input of the external AUX audio source
- **Reset codec to system settings** - Codec default settings
- **Remove safely** - safe removal of the source connected
 - *Select device*
 - SD card 1
 - SD card 2
 - USB 1

signal sources

Introduction

This chapter contains information on the following subjects:

Sources and file formats supported	29
Requirements and restrictions	30
Jukebox	30
Bluetooth® player	31
CD/DVD	31
SD memory card	32
USB-, AUX inputs	33

First and foremost, pay attention to the safety instructions » page 4, Important notes.

! WARNING

- Never place external signal sources close to the airbags. Loose objects could hit a deployed airbag and injure occupants – danger of death!
- Never place external signal sources on the console panel. Loose objects can be thrown forward during a sudden manoeuvre or in case of an accident and can injure the occupants or other road users.
- Do not hold external sources while driving in your hand or on your knees. Loose objects can be thrown forward during a sudden manoeuvre or in case of an accident and can injure the occupants or other road users.
- Always route the connection cable of the external signal source such that it does not restrict you when driving in any way.

! CAUTION

We recommend that you do not save any important data to the Jukebox, to CD /DVD media, Bluetooth® players, to SD memory cards or connected external signal sources. The ŠKODA Partner is not responsible for damage due to the loss of data stored on these storage devices.

i Note

With some signal sources, the output level can be changed at source.

Sources and file formats supported

Read and observe **!** and **!** on page 29 first.

Supported signal sources

Signal sources	SD memory card	SD, SDHC, SDXC
	USB devices	USB stick, USB MP3 player, HDD (without special software)
	Other external sources	Portable player (e.g., iPod®, iPad®, iPhone®, MTP player, Bluetooth® player
	CD/DVD drive:	Audio CD (up to 80 min), CD-R and CD-RW (with a capacity of up to 700 MB), DVD ± R / RW; conventional DVD, DVD video and DVD audio
Specification	SD memory card	File system FAT16, VFAT, FAT32, exFat, NTFS
	USB devices	USB 1.x and 2.x or higher, supported by USB 2.x (the speed of data transmission then corresponds to the maximum speed of USB 2.x.) Max. speed of 480 Mb/s File system FAT16, VFAT, FAT32, NTFS
	Bluetooth®-Player	Bluetooth protocols A2DP and AVRCP (1.0 - 1.3)
	CD/DVD	ISO9660, Joliet (Level 1,2,3), UDF 1.x, UDF 2.x

Formats of audio files

Codec type (File formats)	MPEG-1/2 (layer 3)	Windows Media Audio 7, 8, 9 and 10	MPEG-2/4	FLAC, WAV, OGG
File suffix	mp3	wma asf	aac	flac wav ogg
Playlists	m3u, pls, wpl, m3u8; asx			

File properties	Bitrate	max. 320 kb/s
	Sampling rate	max. 48 kHz
Album covers (Pictures on the album covers)	Image resolution up to 500 x 500 pixels (200 kb) (jpg, jpeg, png, bmp, gif), depending on the availability of album covers are (images on the record covers) are displayed of the respective media or from the Gracenote® database ^{a)} .	

^{a)} Gracenote® is a database stored in the unit containing information and album covers.

Video file formats

Codec type (File formats)	MPEG-1/2	ISO-MPEG4; DivX 3, 4 and 5; Xvid	ISO-MPEG4 H.264 (MPEG4 AVC)	Windows Media Video 9
File suffix	mpg mpeg ps avi	avi divx mp4 m4v	mp4 m4v mov	wmv
File properties	Bitrate	max. 2000 kb/s		
	Resolution	max. 720 x 576 pixel		
	Frame rate	max. 25 fps (or 30 fps when using b-frames)		

! CAUTION

- At the time of publication, the device has been tested with most products and media available in the various markets up to a size of max. 32 GB. However, it is possible that some external devices, media or files are unreadable or unplayable.
- The GPT Standards (GUID Partition Table) method structured signal sources are not supported by the device.

Requirements and restrictions

📖 Read and observe ! and ! on page 29 first.

- > The name of the artist, the album and the title of the file being played can be displayed if the information is available as an ID3 tag. If no ID3 tag is available, only the folder name is displayed.
- > For a good playback, we recommend using compressed MP3 files with a bit rate of at least 160 kb / s.

- > The remaining playback time indicated does not correspond to the actual remaining playback time for audio files with variable bitrates.
- > Files that are protected by Digital Rights Management (DRM) technology cannot be played back by the device.

Jukebox

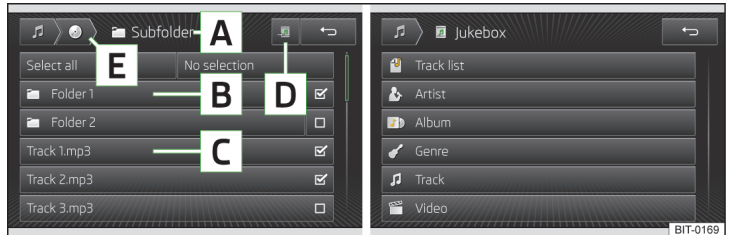


Fig. 20 Importing files into the Jukebox / Jukebox database

📖 Read and observe ! and ! on page 29 first.

Files can be imported from connected sources into the internal memory of the Jukebox and then played back.

There is approximately 10 GB free memory available and you can save 3 000 files.

The files are then classified in the **Database** according to the ID3 tag file information » page 27. If this information is not available, then the files are only filed in the category 🎵 **Track**.

Select files/folders for import

- A** Shows the source/folder overview, function keys for higher-level sources/folders
- B** Folder
- C** File
- D** Function key to import files to the Jukebox
- E** Function keys for higher-level folders

Display memory capacity

- > To display the level of the internal device memory, press ⚙️ **Manage jukebox**.

The following information is displayed:

- **Free:** - Amount of memory used
- **In use:** - Amount of memory free
- **Free files:** - Number of files that can be imported (maximum 3000)

The current memory capacity is displayed on the screen when files are being imported or deleted.

Import files

Supported audio/video files » [page 29](#) can be imported from the sources currently connected into the internal memory.

- Press the button → **Manage Jukebox** → **Import**.
- A menu of available sources is displayed.
- Select the source desired.
- Select folders or files .
- Press the symbol button .
- The **Import completed. (... from ... file (s)). Import completed successfully.** message indicates that import of the folder or files selected has been completed.
- Press the button **OK** and close the file import window.

Delete files

The function is available if there are any audio or video files in the Jukebox.

- Press the button → **Manage Jukebox** → **Delete**.
- A menu of available media is displayed.
- Select the available medium for deletion.
- Select folders or files .
- Press the symbol button .
- Press **Delete**.
- The **Files have been deleted.** message indicates that the folders/files selected were successfully deleted.
- Press the button **OK** and close the delete files window.

Note

- It is not possible to copy the contents of copyright protected CDs or DVDs to the Jukebox.
- Files that have already been copied are recognized and cannot be copied again (shown in grey).
- It is not possible to copy files while simultaneously playing back audio or video files in the CD/DVD drive.

Bluetooth® player

Read and observe and on page 29 first.

The device makes a wireless connection (pairing) to the Bluetooth® player possible.

- Follow the same instructions as for pairing the device with a telephone » [page 40](#).

CAUTION

Do not connect an Apple device to the device via Bluetooth® and USB at the same time, as this may result in a malfunction.

Note

- We recommend adjusting the volume on the portable player to the maximum level.
- The volume can also be adjusted by setting the input sensitivity of the unit for Bluetooth® player » [page 18](#), *Sound settings*.
- The supported media functions are dependent on the type of Bluetooth® player used.

CD/DVD

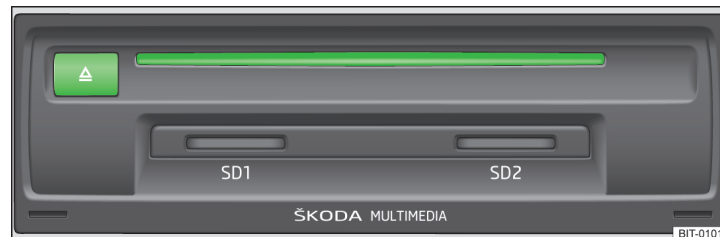


Fig. 21 CD/DVD case

Read and observe and on page 29 first.

The CDslot is located in the glove box on the front passenger side.

Inserting/ejecting a CD/DVD

- Insert a CD/DVD into the CD slot with the label facing up until it is automatically drawn in. The play function will start automatically. ▶

➤ Press the symbol button  - the CD/DVD is ejected.

If the ejected medium is not taken out within 10 seconds, it will be retracted again for safety reasons. However, the unit will not change to the CD/DVD source.


WARNING

- The CD/DVD player is a laser product.
- On the manufacturing date, this unit was classified as a class 1 laser product in accordance with the national/international standards DIN EN 60825-1: 2008-05 and DHHS Rules 21 CFR, Subchapter J classed as a class 1 laser product. The laser used in this class 1 laser product is so weak that there is no risk of danger when operated correctly.
- This product is designed such that the laser is restricted to the inside of the unit. However, the installed laser could be classified in a higher class were the housing to be removed. For this reason, never remove the housing of the unit.

CAUTION

- Be sure to wait until the CD/DVD has been fully ejected before you try to insert a new CD/DVD. Otherwise you can damage the drive inside the unit.
- Only insert in the CD/DVD drive original audio CDs/video DVDs or standard CD-R/RWs or DVD±R/RWs.
- Do not affix anything to the CD/DVDs!
- Outside temperatures that are either too high or too low might cause the playback unit to turn off temporarily. The unit switches to the last active menu.

Note

- After pressing the symbol key  it takes a few seconds for the CD / DVD to be ejected.
- Poor or unsealed road surfaces and severe vibrations may cause the CD to jump.
- Damp (condensation) may affect the device in cold weather or after showers. This can lead to playback jumps or impair the play function. Wait until the moisture has evaporated if this happens.
- If the CD/DVD is physically damaged, is not readable or is inserted incorrectly, the following message is displayed: **Error: CD/DVD**. Check the CD/DVD and insert properly into the drive.
- It is possible under certain circumstances that copyright-protected CD/DVDs and home-burnt CD/DVDs will not be played back at all or only in a limited way.
- The national copyright laws that apply in your country must be observed.

SD memory card



Fig. 22 SD memory card slots

 Read and observe  and  on page 29 first.

The device makes it possible to play audio files from the SD memory card.



The SD memory card slots are located in the storage compartment on the front passenger side.

Insert the SD memory card

➤ Push the SD memory card into the SD memory card slot with the cut-off edge to the front right until it "locks into place". The play function will start automatically.

Remove the SD memory card

Depending on equipment fitted:

- Press the button  →  → **Remove SD card 1 safely** or **Remove SD card 2 safely**.
- Press the inserted SD memory card. The SD memory card "jumps" into the eject position.

SD memory card empty or data not readable

If an SD memory card is inserted, on which no data or no readable data is stored, then nothing is played back from the SD memory card.

Due to differing quality requirements from different card manufacturers, it is not always possible to guarantee the playback from SD memory cards.

Some files on the SD memory card or the complete SD memory cards cannot be replayed or their playback may be limited. ▶

! CAUTION

- Only use standard size SD cards. When using smaller SD cards with the adapter the SD memory card can fall out of the adapter while driving due to vehicle vibrations.
- We recommend using SD memory cards of class 4 and higher. This guarantees the fastest possible access to the audio files.
- Always store the SD cards in suitable cases to protect them from dirt, dust and other forms of damage.

USB-, AUX inputs



Fig. 23
USB and AUX inputs

📖 Read and observe **!** and **!** on page 29 first.

The device enables files from USB storage media as well as from external devices connected to the USB input such as Apple devices ¹⁾ to be played.

The device allows you to play the analog audio signal from external devices connected to the AUX input.

The USB and AUX inputs are located above the storage compartment at the front of the centre console » Fig. 23.

An external device or data media can be connected to the USB/AUX input either directly or via a connection cable from the ŠKODA range of original accessories.

AUX input

External signal sources connected to the AUX input **cannot** be operated from your device.

The standard 3.5 mm stereo jack plug is used for the AUX input. If the external audio source does not have this jack plug, you must use an adapter.

It is also possible to adjust the input sensitivity setting on the AUX input depending on the signal source connected » page 18, *Sound settings*.

If an external audio source is connected to the AUX input, which is equipped with an adapter for external power supply, the sound may be impaired. This depends on the quality of the adapter which is used.

USB input

External devices such as Apple devices connected to the USB input **cannot** be operated from your device²⁾.

Before removing the USB device, proceed as follows:

➤ Press the button **MENU** → → **Remove USB device safely**.

USB extension cables or adapters may affect the operation of the connected external device.

USB hubs are not supported.

Charge USB audio source

With the ignition on after connecting the USB audio source, the charging process is automatically started (applies for audio sources where charging via the USB connector is possible).

The charging efficiency can be different compared to the charging from the usual mains power supply. Connected audio sources can be supplied / loaded with a current of max. 500 mA.

Some connected audio sources may not be recognised and cannot be charged.

The charging of the connected audio source is automatically stopped after switching off the ignition.

! CAUTION

- The AUX input must only be used for audio sources!
- Do not connect an Apple device to the device via Bluetooth [®] and USB at the same time, as this may result in a malfunction. ▶

¹⁾ The video playback from an Apple device is not supported.

²⁾ Some operating options from an external device may not be supported.

Note

The operation of the external device and its connection with other devices can be seen in the operating instructions of the respective manufacturer.

DVD video

Introduction

This chapter contains information on the following subjects:

Main menu	34
video playback	34
Operation of DVD video	34
DVD video menu	35
Settings	35

First and foremost, pay attention to the safety instructions » page 4, Important notes.

Main menu

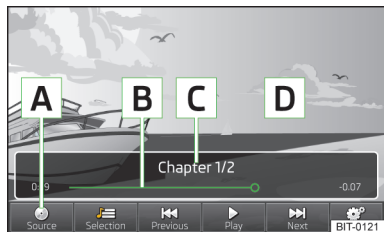


Fig. 24
DVD video: Main menu

The DVD video main menu is displayed when you select a source that contains playable video files.

Explanation of graphic

- A** Select the video source
- B** Display of the playing time / remaining time and the playing time axis is possible within the video by moving the slider or by touching the desired location on the time axis
- C** Information for the selected video file (e.g., video title, chapter)
- D** Video display area

☰ Open the DVD menu

⚙️ Video settings

CAUTION

- For safety reasons, the video display is switched off at speeds over 5 km/h and the following message is displayed: **The vehicle is in motion. The display has been switched off for your safety.** The unit continues to play the soundtrack.
- The regional code of the player corresponds to the location of sale. If the following is displayed: **Does not play. The DVD's country code does not match the system settings. Number of changes by the dealer possible:**, consult a ŠKODA Service partner.

video playback

➤ Video playback starts automatically once the medium is inserted in the CD/DVD slot.

or

➤ Press the button **⏸** → **⏪** → **A** » Fig. 24 on page 34.

- **Ⓢ CD/DVD** - Select the DVD inserted

Supported media and formats

- DVD video
- DVD audio
- DVD A/V

Operation of DVD video

But- ton » Fig. 24 on page 34	Action	Function
▶/⏸	Press	Play / Pause
⏪	Press briefly (within 3 seconds of the start of the video playback)	Play the previous video
⏪	Press briefly (3 seconds after the start of the video playback)	Play the current video from the start
⏪	Press and hold button ³⁾	Fast video reverse

But- ton » Fig. 24 on page 34	Action	Function
▶▶	Press briefly	Play the next video
▶▶	Press and hold button ^{a)}	Fast video forward

a) The longer the button is pressed, the faster the fast forward/reverse.

DVD video menu

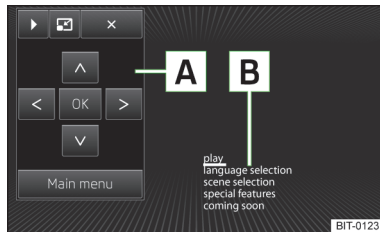


Fig. 25
DVD menu

Explanation of graphic

- A** Function keys for the DVD menu
- B** The displayed DVD menu

The DVD menu is displayed after the inserted DVD video medium has been read

or

after pressing $J \equiv$ displayed automatically during playback.

Settings

➤ Press the button **MENU** → \square → gear .

Depending on the selected source, the following setup menu can be displayed.

- **Sound** - Sound setup
- **Format**: - Set the screen width/height ratio
 - **Automatic** - Adjustment of the aspect ratio to the screen size
 - **16:9** - 16:9 format
 - **4:3** - 4:3 format

- **14:9** - 14:9 format
- **47:20** - 47:20 format
- **Audio channel**: - Select the audio channel from the menu displayed
- **Subtitles**: - Select the subtitles from the menu displayed
 - **No selection** - No subtitles
 - - Select the subtitles from the DVD menu

Images

Introduction

This chapter contains information on the following subjects:

Main menu	35
Operation	36
Select source	36
Settings	36

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

Main menu

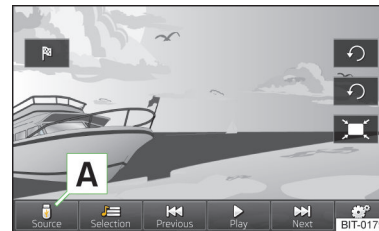


Fig. 26
Images: Main menu

Explanation of graphic

- A** Select the image source
- $J \equiv$ Select the images or folder from the list
- gear Image settings

Call up the main menu

➤ Press the button **MENU** → \square .

Supported file types

File type	Supported formats
Images	jpg, jpeg, png, bmp, gif

Operation

Displaying images





But-ton » Fig. 26 on page 35	Action	Function
⏪	Press	Display the previous image
▶/	Press	Switch on/off slideshow ^{a)}
▶▶	Press	Display the next image
↺	Press	Rotate the image 90° anticlockwise
↻	Press	Rotate the image 90° clockwise
📏	Press	Display the maximum image size while retaining the aspect ratio
📍	Press	guidance to GPS coordinates that are stored in the image EXIF metadata » page 66
2 » Fig. 1 on page 5	Rotate the image clockwise or anticlockwise	Enlarge/reduce the size of an image

^{a)} Presentation of selected photographs shown in succession at defined intervals.

You can adjust the size of the image by touching the screen with two fingers and pulling the fingers together or apart. You can move the image in the desired direction by touching and dragging it with your finger. By finger tapping on the screen image magnification or size reductions takes place.

Select source

» Press the button  →  → **A** » Fig. 26 on page 35.

-  **CD/DVD** - Changes to a CD/DVD in the player
-  **USB** - Changes to a data medium connected to the USB input
-  **SD card 1** - Changes to a memory card inserted in SD 1
-  **SD card 2** - Changes to a memory card inserted in SD 2

Settings

» Press the button  →  → .

- **Image view:** - Image view settings
 - **Full** - Display the maximum image size while retaining the aspect ratio
 - **Automatic** - Full screen display
- **Display time:** - Set the display time for the slideshow
 - 5 sec.
 - 10 sec.
 - 15 sec.
 - 30 sec.
- **Repeat slide show** - Switch on/off the slideshow repeat function. (After the last image is displayed, the slideshow restarts from the beginning.)

This chapter contains information on the following subjects:

Introductory information	38
Main menu	38
Problems with the Telephone function	38
Phonebox	39
Settings	39

The **Telephone** menu is available when the following conditions are met.

- ✓ The ignition is switched on.
- ✓ The Bluetooth® function on the device is switched on.
- ✓ The visibility of the mobile phone is switched on » [page 20](#).
- ✓ The visibility of the telephone is switched on.
- ✓ The phone is within range of the Bluetooth® signal.
- ✓ The phone is supported by the device.

After the device is switched on, the system attempts to connect to the most recently connected telephone¹⁾.

If a telephone is connected to the device and the device is turned off, the connection to the telephone is not lost. The connection is only lost after switching off the ignition (for vehicles with the system KESSY after switching off the ignition and opening the driver's door).

¹⁾ With some phones, it is necessary to set the connection to the device as "authorised" in order for the automatic connection to be successful. If this is not set, the system will prompt you for a confirmation each time you attempt to connect to the telephone.

WARNING

- The national regulations for using a mobile phone in a vehicle must be observed.
- If a mobile phone or a two-way radio system is operated in a vehicle without an external aerial or an external aerial which has been installed incorrectly, this can increase the strength of the electromagnetic field inside the vehicle.
- Two-way radio systems, mobile phones or mounts must not be installed on airbag covers or within the immediate deployment range of the airbags.
- Never leave a telephone in the deployment area of an airbag, on a seat, on the dash panel or in another area, from which it can be thrown during a sudden braking manoeuvre, an accident or a collision - risk of injury. There are storage compartments with lids and if necessary there is the multimedia storage compartments to hold this » *Vehicle owner's manual*, chapter *Practical equipment*.
- Before transport of the vehicle by air, the Bluetooth® function must be switched off by a specialist company.

CAUTION

- In areas with no signal and possibly in tunnels, garages and subways a telephone conversation can be interrupted and no telephone connection can be established - not even in an emergency!
- The range of the Bluetooth® connection to the hands-free system is limited to the vehicle interior. The range is dependent on local factors, e.g. obstacles between the devices and mutual interferences with other devices. If your telephone is in a jacket pocket, for example, this can lead to difficulties when establishing a connection with the device or transferring data.

Note

Available updates for Bluetooth® devices as well as information about the phone support can be obtained from the ŠKODA website www.infotainment.skoda-auto.com.

Introductory information

Read and observe and on page 37 first.

The device allows for a wireless connection to the telephone. Your telephone can be operated from the device.

ŠKODA permits the operation of telephones and two-way radio systems with a professionally installed external aerial and a maximum transmission power of up to 10 watts.

Please ask at a specialist workshop about installing and operating telephones and two-way radio systems that have a transmission power of more than 10 W.

Operating telephones or two-way radio systems may interfere with the functionality of the electronic systems in your vehicle.

The reasons for this are as follows:

- > no external aerial;
- > external aerial incorrectly installed;
- > transmission power greater than 10 watts.

Note

- We recommend that the installation of telephones and two-way radio systems in a vehicle be carried out by a specialist garage.
- The telephone functions are dependent on the mobile network operators, as well as the telephone being used. Further information is available from the mobile network operator or to refer to the manual of the telephone.
- In signal-free areas reception can be disturbed or a call may be disconnected.
- Most modern electronic equipment is shielded from RF signals. In exceptional cases, electronic equipment may not be shielded against the RF signals and telephone service may be disrupted.

Main menu



Fig. 27
Phone: Main menu

Read and observe and on page 37 first.

Explanation of graphic

- Name of the mobile network provider
- Name of the connected telephone, press to open a list of paired telephones
- Speed dial favourite telephone numbers » page 43
- Direct entry of a telephone number » page 44
- Display the telephone book » page 44
- Display of call list (there are new missed calls, the icon will appear here with the information about the number of missed calls) » page 45
- Menu settings for the **Telephone** » page 39

Call up the main menu

- > Press the button.

If a telephone is connected to the device, the **telephone** mode main menu is displayed » Fig. 27.

Symbols in the display

Symbol	Meaning
	Charge status of the telephone battery ^{a)}
	Signal strength ^{a)}
	Roaming (before the name of the mobile network provider) ^{a)}
	Missed call
	Current call

^{a)} This function is only supported by some telephones.

Problems with the Telephone function

Read and observe and on page 37 first.

If there are problems with the availability of the network or with the Bluetooth[®] function, the following messages appear on the device display screen. ►

Message	Importance
Network search...	The telephone searches for available GSM networks.
No network	The telephone is not connected to the GSM network.
Rejected by network.	The mobile phone network operator has rejected the connection (e.g. not enough mobile phone credit, SIM card blocked, roaming not available).
To use the Bluetooth function, please switch the ignition on.	Switch on the ignition.
Please switch on Bluetooth.	Switch on the Bluetooth® function.
No Bluetooth devices paired.	Connect the telephone with the device.

Phonebox

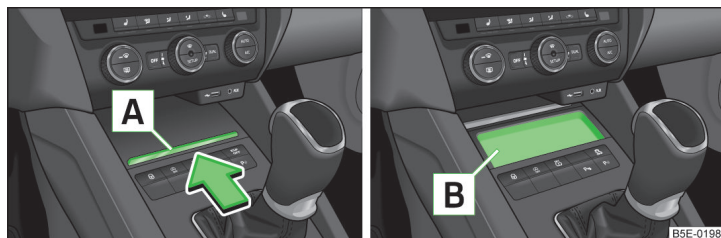


Fig. 28 Front centre console: Phonebox

📖 Read and observe **!** and **!** on page 37 first.

At the bottom of the storage compartment in the front center console is an induction plate connected to a GSM roof antenna roof - the Phonebox.

Function

When the telephone is inserted into the Phonebox, the telephone signal increases in strength by about 20%. This reduces the level of phone battery discharge and the electromagnetic radiation inside the vehicle.

Inserting the telephone into the Phonebox

- Press on the edge of the lid **A** in the direction of the arrow, and open the storage compartment.
- Place the telephone in the storage compartment **B** with its back on the induction panel.
- Press on the edge of the lid **A** in the direction of the arrow, and close the storage compartment» **!**.

The Phonebox cannot be used as an alternative to connecting the telephone with the device.

! WARNING

For safety reasons, the storage compartment must always be closed when driving.

! CAUTION

- Protective cases or cases around the telephone placed in the storage compartment may interfere with the telephone signal strength.
- Metallic objects such as coins or keys under the telephone can affect the telephone signal strength.

Settings

📖 Read and observe **!** and **!** on page 37 first.

➤ Press the button **PHONE** → **⚙️**.

- **Select telephone** - Search for available telephones/list of paired telephones/ select telephone
 - **Find telephone** - Search for a telephone
- **Bluetooth** - Bluetooth® settings » page 20
- **User profile** - User profile settings
 - **Manage favourites** - Assign function keys to allow speed dialling of contacts; you can also add and delete contacts here
 - **Mailbox number: Enter here** - Enter the phone number of the mailbox
 - **Prefix:** - Switch on/off the option to assign a prefix to a telephone number. Once this function is activated, the button for adding a prefix will be displayed with the symbol in some menus. **☞**
 - **Enter here** - Enter the prefix of a phone number
 - **Sort by:** - Sort the order of the telephone book
 - **Surname** - Sort by contact name
 - **Name** - Sort by contact first name

- **Import contacts** - Start the update of the phone book; the number of imported contacts and number of contacts stored in the phone is displayed
- **Delete other user profiles** - Delete up to three previous user profiles (contacts, order of calls, call lists, speed dial buttons assigned to contacts)
- **Reminder: remember your mobile phone** - Switch on/off the reminder for a connected telephone; the reminder is output when the ignition is switched off and the ignition key is removed (or the ignition is turned off and the driver's door opened in the case of vehicles with the KESSY system)
- **Select ring tone** - Selects the ring tone if the connected telephone does not support the in-band ringing function¹⁾
- **Show pictures for contacts** - Switch on/off the display of the image assigned to the contact in the telephone²⁾

Connect to the device to the mobile telephone

Introduction

This chapter contains information on the following subjects:

Conditions for successful pairing	40
Connect device with your telephone	41
Pair the mobile telephone with the device	41
Connection to another paired telephone	42
Switching on/off the Bluetooth [®] profile	42
Delete the mobile telephone from the list of paired devices	43
Disconnection	43

First and foremost, pay attention to the safety instructions » [page 4](#), *Important notes*.

The device is displayed in the telephone to be connected to as SKODA_BT_.

... is replaced with the last four symbols of the VIN vehicle identification number of your vehicle.

You can change the name of the device » [page 20](#).

WARNING

The device may require confirmation of certain features in the telephone when pairing. Therefore do not carry out the pairing process while driving - there is danger of accidents!

1 Note

- The maximum number of phones registered is 20. When the maximum number of paired telephones has been reached, the next one will cause the paired telephone that has not been used for the longest to be automatically deleted.
- In some countries the connection via the Bluetooth[®] function, may be limited. Further information can be obtained from local authorities.
- The range of the Bluetooth[®] connection to the system is restricted to the vehicle interior. This depends on local conditions and of interference with other devices.
- When pairing from the mobile telephone, follow the instructions in the owner's manual of the telephone.

Conditions for successful pairing

 **Read and observe**  on [page 40](#) first.

To connect a telephone with the device, the two devices must be paired.

Prerequisites for successful pairing:

- ✓ The ignition is switched on.
- ✓ The Bluetooth[®] function of the device » [page 20](#) and the mobile telephone is switched on.
- ✓ The visibility of the mobile phone is switched on » [page 20](#).
- ✓ The visibility of the mobile phone is switched on.
- ✓ The telephone that is to be connected to must have an active connection to another telephone.
- ✓ The phone is within range of the Bluetooth[®] signal.
- ✓ The phone is supported by the device.

The pairing can be initiated from the device or from the mobile telephone. ▶

¹⁾ The in-band ringing function makes it possible to use the ring tone of your telephone as the ring tone.

²⁾ This function is only supported by some telephones.

i Note

Available updates for Bluetooth® devices as well as information about the phone support can be obtained from the SKODA website www.infotainment.skoda-auto.com.

Connect device with your telephone

 **Read and observe**  on page 40 first.

A telephone is paired with the device

After switching on the ignition, the device attempts to automatically connect to the last connected telephone.

During the connection setup and depending on the telephone type the device screen displays may show ... **Would you like to connect?** and a menu will appear with the following function keys.



- **Connect** - pairing confirmation
- **Cancel** - stops the coupling process

If the connection cannot be established, the device will then attempt to connect to other previously paired telephones one by one.

If there is also no connection, then a telephone search is to be started.

No telephone is paired with the device

After switching on the ignition, on the device screen the message **Please search for and connect a mobile telephone.** appears and a menu with the following function keys.

-  **Find telephone** - search for available telephones with activated Bluetooth® function and visibility
-  - Opening of the settings menu » [page 39, Settings](#)

After completion of the search press the **Results** function key, a list of available telephones will be displayed (the function key is also available during the search).

Select the telephone you want from the list.

If the search fails, check that the conditions for successful pairing are met » [page 40, Conditions for successful pairing](#) and repeat the whole process.

¹⁾ For devices with Bluetooth® v2.1 and later the telephone quick pairing procedure (SSP Secure Simple Pairing) is used for pairing. This pairing method does not require the user to enter a PIN.

²⁾ For the name of the device refer to the Bluetooth® settings » [page 20](#).

Pairing confirmation

Depending on the telephone's Bluetooth®, conformation is in one of the following ways.

- Confirm the 6-digit PIN code¹⁾ displayed on the device screen and the telephone display within 30 seconds on both the device and the telephone.
- If required select the option in the telephone for automatically connecting the telephone to the device.

Or

- Confirm the connection request in the telephone.
- Enter the 4 digit PIN code shown on the unit display into the telephone within 30 seconds
- If required select the option in the telephone for automatically connecting the telephone to the device.

Connection

After successful connection the device will display the message ... **user is connected** and then the main menu **telephone** » [Fig. 27 on page 38](#).

i Note

If the telephone supports the Bluetooth® profile A2DP or AVRCP, your telephone display may prompt you to pair the telephone as a Bluetooth® player.

Pair the mobile telephone with the device

 **Read and observe**  on page 40 first.

When pairing from the telephone, follow the instructions in the owner's manual of the telephone.

- Have the telephone search for available Bluetooth® devices.
- Select the device in the list of Bluetooth® devices²⁾.

The following message is shown in the device screen during pairing ... **Would you like to connect?**, and the following function keys are displayed.

Cancel - stops the coupling process

Connect - confirmation of the coupling process

Depending on the telephone's Bluetooth[®], conformation is in one of the following ways.

- › Confirm the 6-digit PIN code¹⁾ displayed on the device screen and the telephone display within 30 seconds on both the device and the telephone.
- › If required select the option in the telephone for automatically connecting the telephone to the device.

Or

- › Enter the 4 - 16 digit PIN code into the device.
- › Enter the PIN code shown on the device display into the telephone within 30 seconds.
- › If required acknowledge the confirmation request with the telephone.

If no other device is connected to the telephone and after successful connection the following message is shown in the device screen ... **user is connected** and then the main menu **telephone** » Fig. 27 on page 38.

If the device is connected to another telephone then only the pairing to the new telephone takes place and the original telephone remains connected.

Connection to another paired telephone

 **Read and observe**  on page 40 first.

If you want to connect the device to another paired telephone, the current connection does not have to be terminated. The connection to the existing telephone is automatically terminated by connecting to another telephone.

- › In the main menu press the **Telephone** function key  » Fig. 27 on page 38.

It displays a list of previously paired telephones.

- › Select the paired telephone to be connected with the device.

The following message is shown in the device screen ... **Replace this connection with ... ?**, and the following function keys are displayed.

- › **Cancel** - stops the menu for telephone change
- › **Replace** - connection to the selected telephone

After successful connection the device will display the message ... **user is connected** and then the main menu » Fig. 27 on page 38.

If the desired telephone is not in the list of previously paired telephones then the telephone is to be paired with the device » page 41.

Switching on/off the Bluetooth[®] profile

 **Read and observe**  on page 40 first.

- › Press the button  → **Bluetooth** → **paired devices** .

A list of paired devices is displayed.

Pressing the function key on the connected Bluetooth[®] device opens a menu with possible connection profiles supported with the selected device.

Pressing the function key with the name and symbol of the connection profile causes a context-dependent message to be displayed in the device screen ... **Disconnect the profile - are you sure?** and a menu with the function keys is displayed.

- › **Disconnect** - Pressing the function key turns off the selected profile.



Or

- › **Replace** - If the device is already connected to another telephone then pressing the function key will replace the existing profile with the new profile.



The following message is shown in the device screen ... **Connection with ... will be made ...** and the selected Bluetooth[®] Profile is turned on.

In each menu pressing the function key **Cancel** will cancel the profile change.

Possible profile symbols:

Symbol	Meaning
	Devices that support the functionality of the hands-free system (Bluetooth [®] profile HFP ¹⁾)
	Devices that are connected to the device via Bluetooth [®] profile HFP ¹⁾

¹⁾ For devices with Bluetooth[®] v2.1 and later the device quick pairing procedure (SSP Secure Simple Pairing) is used for pairing. This connection method does not require the user to enter a PIN.

Symbol	Meaning
	Bluetooth® players (Bluetooth® profiles A2DP and AVRCP) ^{b)}
	Bluetooth® player connected to the unit via Bluetooth® profiles A2DP and AVRCP ^{b)}

a) HFP is a Bluetooth® profile that supports the functionality of the hands-free system.

b) A2DP and AVRCP are Bluetooth® profiles that support multimedia functions.

If a Bluetooth® device is already connected to the device via one of the profiles, then turning on the profile in another device will end the profile on the active device and it is switched to the newly selected device.

Only the newly selected profile will be switched the other profiles remain connected to the original device.

The device can be paired with several telephones (or Bluetooth® devices), but only one can be actively connected on the HFP profile and one on the A2DP profile or AVRCP.

Delete the mobile telephone from the list of paired devices

 **Read and observe**  on page 40 first.

➤ The function key  → **Bluetooth** → **paired devices** .

A list of paired devices and the following function keys are displayed.

- **Delete all** - Delete all the telephones in the list of paired devices
-  - Delete the desired telephone

After selecting one of the function keys, the function keys are displayed.

- **Cancel** - Cancels the deletion
- **Delete** - delete confirmation

The device connected to the telephone does not appear in the list of paired devices. In order to enable an delete operation the connection between the telephone and the device should first to interrupted » page 43, *Disconnection* .

Disconnection

 **Read and observe**  on page 40 first.

The connection of a telephone to the device can be disconnected in one of the following ways.

- By removing the ignition key (or switching off the ignition and opening the driver's door in vehicles with the KESY system).
- By disconnecting the hands-free system or switching off the Bluetooth® function on the telephone.
- By switching off the Bluetooth® function on the device » page 20, *Bluetooth® settings*.
- By removing the telephone from the list of paired devices » page 43, *Delete the mobile telephone from the list of paired devices* .
- By turning off the Bluetooth® HFP profile » page 42, *Switching on/off the Bluetooth® profile* .

Telephone functions

Introduction

This chapter contains information on the following subjects:

Speed dialling a telephone number _____	43
Direct entry of a phone number _____	44
Phone book _____	44
Call-lists _____	45
Telephone conversation _____	45
Conference _____	46


First and foremost, pay attention to the safety instructions » page 4.

Speed dialling a telephone number

You can use the speed dial function key  » Fig. 27 on page 38 to instantly dial previously assigned telephone number contacts.

There are six speed dial function keys available.

Assign telephone number of a contact

➤ Press a function key for the speed dial  » Fig. 27 on page 38 that is not assigned.

The unit displays the telephone book.

➤ If necessary, enter one of the contact numbers for the desired telephone contact.

The assignment of the contact telephone number to a function key for the speed dialling is also possible in the **telephone** menu settings » page 39. ▶

Select assigned contact telephone number

› Press the desired function key to speed dial the telephone number of a contact [C] » Fig. 27 on page 38.

Change assigned telephone number of a contact

› Press the desired function key for the speed dial [C] » Fig. 27 on page 38 for longer.

The unit displays the telephone book.

› If necessary, enter one of the contact numbers for the desired telephone contact.

The telephone number of a contact is assigned to the selected function key for speed dialling.

You can also make the change in the **Telephone** menu » page 39.

Remove a telephone number contact

› Press the symbol button → **User profile** → **Manage Favourites**.

› Press the function key for the speed dial. By confirming the menu item **Delete** the telephone number of a contact on the selected function key is removed for quick dialling.

Direct entry of a phone number



Fig. 29
Direct entry of a phone number

› Press the button .

A screen appears to enter the telephone number » Fig. 29.

You can select the following functions:

Delete the digit

Dial the entered number¹⁾

Add a prefix²⁾ if this option has been set in the telephone settings » page 39

Entering a number using the voice control » page 13

Mailbox Choose the mailbox if the mailbox number is entered in the telephone settings » page 39 or directly enter the number

The input screen also functions as an alphanumeric keypad that you can use to search for contacts in the phonebook.

For example, if you enter 32, the unit will display contacts with the letter sequence DA, FA, EB, etc.

Select the desired contact by pressing the corresponding function key.

Phone book

› Press the button .

The device telephone book contains up to 2000 free memory locations for imported telephone contacts. Each contact can contain up to 5 telephone numbers.

The telephone book can also be accessed during an ongoing call.

After successful pairing, the contacts are imported³⁾.

Loading the directory


Upon first connection of the telephone with the device, the system begins to download the telephone book from the telephone and from the SIM card⁴⁾ into the device memory³⁾. Depending on the number of contacts this may take several minutes to complete. ▶

¹⁾ If no number is entered, the last dialled number will be displayed after you press the symbol key .

²⁾ If the addition of a prefix option is switched on, but the prefix is not entered in the telephone settings, the last dialled number will be displayed in the input field after you press the symbol button or the last number dialled. When the prefix is defined and entered in the entry line and after pressing the symbol key the prefix is added in front of telephone number and connection starts.

³⁾ With some telephones a confirmation for importing contacts to the device is required.

⁴⁾ Some telephones do not support downloading of contacts from the SIM card.

If the imported telephone book from the telephone contains more than 2000 contacts, loading is stopped and the message **Contacts not completely imported.** appears on the screen. Only the contacts already loaded are available, these are in the menu .

The first 200 contacts along with the telephone contact data, including the picture associated with the contact, are downloaded onto the device memory ¹⁾.

If an error occurs while loading the phone book, the message **Import failed. Please try again and check whether the BT device ... allows connections.**

Update phonebook

Each time the telephone has established a new connection with the device, the relevant telephone book will be updated.

During the update, the phone book which was stored after the last completed update will be available. Newly stored telephone numbers are only shown after the updating has ended.

The update can be performed manually » [page 39 Import contacts](#)

Find contact

Press the button **Find** to open the input screen with keypad to search in the phonebook » [page 8](#).

Select contact


Pressing the function key with one of the displayed contacts starts the selection.

Where a contact contains several telephone numbers, the system displays a menu containing the telephone numbers for the contact.

Contact details

By pressing the function key with the symbol > the contact details are displayed.

Pressing the function key with one of the indicated telephone numbers starts the selection.

By pressing the function key with the symbol  and the contact will start the route guidance.

¹⁾ This function is only supported by some telephones.

Call-lists

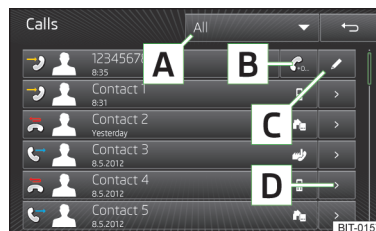


Fig. 30
Call lists

The call log displays information about telephone calls.

» Press in the main menu the **Telephone** function key  » [Fig. 27 on page 38](#) .

Explanation of graphic

- A** Sorting the call list
 - » **All** - List of all calls
 - » **Missed calls** - list of missed calls
 - » **Calls dialled** - List of dialled numbers
 - » **Received calls** - list of received calls
- B** Dial a number with a defined prefix » [page 39, Settings](#)
- C** Processing the telephone number before dialling
- D** Display the contact details

Press the function key for a desired contact or telephone number to start dialling.

Telephone conversation





Outgoing call

While connecting, the screen displays the phone number or contacting name. And the following function can be selected:

 Exit choice






Incoming call

During the ring tone of the incoming call, the screen displays the phone number or contact name. And the following functions can be selected: ▶

-  Answer the incoming call
-  Ignore the incoming call (mute ring tone)
-  Reject the incoming call
-  Contact picture¹⁾ - Display caller details

Current call

During a current call, the screen displays the phone number or contact name and the call duration. Depending on the context, the following functions can be selected:

-  Hold a call
-  Deactivate the microphone
-  Activate the microphone
-  End call
-  Contact image¹⁾ - View details of the caller or the called party

Conference

The conference is a shared call with between three and six participants.

Start a conference/invite additional participants







> During a call or conference, make the next call.

or

> The new incoming call  .





During a conference

During an ongoing conference call, the call duration is displayed on the screen. Depending on the context, the following functions can be selected:

-  Hold a conference - leave the conference temporarily (the conference continues in your absence)
-  Return to the held conference
-  Deactivate the microphone
-  Activate the microphone
-  End conference call
-  Conference call image - Display conference details

Conference details

During a conference, press the conference symbol to display a list of other conference participants. The following functions can be selected depending on the type of telephone:

-  View participant details
-   Talk to a participant separately of the conference
-  End the call to a conference participant

¹⁾ The button is only functional when the contact is stored in the telephone book.

Navigation

Description of the navigation system

Preface to navigation

Introduction

This chapter contains information on the following subjects:

Main menu _____ 47
Navigation data _____ 48

First and foremost, pay attention to the safety instructions » page 4, Important notes.

The unit uses the GPS (Global Positioning System) satellite system for navigation. The satellite signal allows you to determine your current vehicle position.

If the unit is outside the range of the GPS satellite signal (e.g. in dense vegetation, in tunnels, parking garages, etc.), the unit navigates only with restrictions using on-vehicle sensors.

Navigation is done:

- › by graphical instructions in device display screen and in the display of the instrument cluster;
- › by announcements.

The navigation unit can be operated:

- › using the buttons on the unit » page 47;
- › using the function keys in the unit screen » page 47;
- › using voice control » page 16.
- › via the display of the instrument cluster » page 12 .

! WARNING

- E.g. information about traffic lights, stop and right of way signs, parking and stopping restrictions as well as lane constrictions or speed restrictions is not detected for navigation by the device.
- Always adjust the driving speed to the road, traffic and weather conditions.

! WARNING (Continued)

- The nav. announcements provided may vary from the actual situations, e.g. due to road works or out-of-date navigation data.
- The volume should be adjusted to ensure that acoustic signals from outside, e.g. sirens from vehicles which have the right of way, such as police, ambulance and fire brigade vehicles, can be heard at all time.

! CAUTION

In some countries, some unit features can no longer be selected when the vehicle is running faster than a certain speed. These limitations comply with national legal requirements.

Main menu

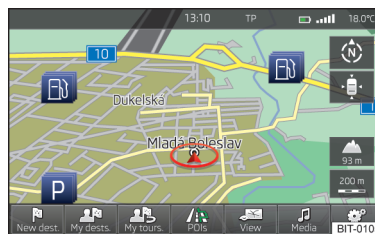


Fig. 31
Main menu Navigation

Read and observe **!** and **!** on page 47 first.

- › Press the **(NAV)** button.

The last opened **navigation** menu opens.

If a menu other than the main menu » Fig. 32 on page 50 is opened, the main menu can be opened by pressing **(NAV)** again.

Function keys of the navigation menu

Button	Meaning
	Enter a new destination » page 55 or display the Route menu » page 63
	Display the menu My dests. » page 57
	Display the menu My tours » page 65
	Enter/search for a POI » page 58
	Set up map and additional window display » page 50

Button	Meaning
	Media/radio playback » page 21
	Setting the navigation menu » page 48

Navigation data

Read and observe  and  on [page 47](#) first.

Navigation data source



The navigation data is part of the device and is stored in the internal device memory.

Data update

The navigation data should be updated at regular intervals.

Navigation data is subject to constant changes (such as new streets, changes of street names and house numbers), and this can become out of date over time. For this reason, the guidance may be inaccurate or incorrect.

For more information on updating the data, please visit the ŠKODA website or contact a ŠKODA Partner.

The version of the navigation data for maps can be found in the navigation settings  →  → **Version information**.

Settings

Introduction


This chapter contains information on the following subjects:

Main menu	48
Route options	48
Map	49
Fuel options	49
Navigation announcements	49
Advanced settings	49
Manage memory	49

First and foremost, pay attention to the safety instructions » [page 4](#), *Important notes*.

Main menu

Call up the main menu





› In the **Navigation** main menu, press .


Setting:

- **Route options** - Set the parameters for route calculation » [page 48](#)
- **Fuel options** - Select preferred fuel station, switch on/off reminder of low fuel level warning with the possibility to find the nearest fuel station » [page 49](#)
- **Advanced setup** - Display additional information » [page 49](#)
- **Import destinations** - Import custom destinations previously prepared » [page 58](#)
- **Map** - Map display » [page 49](#)
- **Nav. announcements** - Set the volume and the type of the navigation announcements » [page 49](#)
- **Manage memory** - Sort contacts, enter your home address, and delete destinations » [page 49](#)
- **Version information** View the current version of the navigation data


Route options

› In the **Navigation** main menu, press  → **Route options**.


- **Suggest 3 alternative routes** - Switch on/off manual selection of the route type (economical, fast, short) » [page 62](#)
- **Route:** - Automatic selection of the preferred route type (manual route selection is switched off)
 - **Economical** - Calculate the most economical route with shortest travelling time and distance travelled - displayed in green
 - **Fast** - Calculate the fastest route to the destination, even if a detour is necessary - displayed in red
 - **Short** - Calculate the shortest route to the destination, even if a longer travelling time is required - displayed in orange
- **Dynamic route** - Switch on/off dynamic route calculation using TMC traffic reports » [page 63](#)
-  **Avoid motorways** - switches on/off the use of motorways
-  **Avoid ferries and motorail trains** - Switch use of ferries and motorail trains on/off
-  **Avoid toll roads** switches on/off the use of toll roads
-  **Avoid tunnels** - Switch use of tunnels on/off

-  **Avoid routes requiring toll stickers** - Switch use of routes requiring toll stickers on/off
- **Show available toll stickers** - select from the list of routes requiring toll stickers for which a valid toll sticker is available


Map

- › In the **Navigation** main menu, press  → **Map**.
- **Day/night:** - Select the background colour of the map
 - **Day** - light coloured background
 - **Night** - dark coloured background
 - **Automatic** - map with light or dark coloured background; the background changes once you turn on the lights (does not apply to daytime running lights)
- **Autozoom** - Switch on/off the automatic zoom in/out of the map display while driving » [page 51](#)
- **Show traffic signs** - Switch on/off the display of traffic signs
- **Select categories for POIs** - Select POIs to be displayed in the map from a list of available POIs (max. 10 POIs) » [page 60](#)
- **Show brands for POIs** - Switch on/off the display company logos at the POIs
- **Show favourites** - Switch on/off the display of favourites
- **Lane guidance** - Switch on/off the display of a window with the recommended lane for complicated intersections » [page 63](#)


Fuel options

- › In the **Navigation** main menu, press  **Fuel options**.
- The following warning message is displayed when the fuel gauge pointer reaches the reserve marking: **Warning: fuel tank almost empty. Would you like to find a fuel station nearby?**
- **Select preferred fuel station** - Select your preferred fuel station brand (the selected station brand will be displayed on the first positions of the list)
 - **Fuel warning** - Switch on/off the display of the warning message for low on fuel with the following:
 - **Cancel** - Close the window with the warning
 - **Find** - Search for the nearest fuel station; when you select the fuel station, the new route will be calculated from your current position


Navigation announcements

- › In the **Navigation** main menu, press  → **Nav. announcements**
- **Volume** - Set the volume of the navigation announcements
- **Nav. announcements:** - Set the type of navigation announcements
 - **Comprehensive** - Full navigation announcements
 - **Brief** - Short navigation announcements
 - **Congestion only** - navigation announcements only when there is congestion
- **No voice guidance during call** - Switch on/off navigation announcements during a telephone call (if using a phone connected to the device » [page 37](#))

Advanced settings

- › In the **Navigation** main menu, press  press → **Advanced setup**.
- **Time display:** - Select the time to be displayed in the status line
 - **Time of arrival** - displays the expected time to destination
 - **Travelling time** - Display the expected travelling time to the destination
- **Status line:** Status line - Display information about your selected destination in the status line
 - **Destination** - Display information about the length and duration of the guidance to the destination
 - **Next stopover** - Display information about the length and duration of the guidance to the stopover
- **Note: national border crossed** - Switch on/off the display of the information window with speed limits when crossing the national border
- **Demo mode** - Switch on/off guidance in demo mode
- **Define demo mode starting point** - Enter the starting point for preliminary route calculation in demo mode
 - **Cancel** - Cancel the entry
 - **Position** - Select the current vehicle position as the starting point
 - **Address** - Select an address as the starting point

Manage memory

- › In the **Navigation** main menu, press  → **Manage memory**.
- **Sort by:** - Sort contacts downloaded from a connected telephone
 - **Surname** - Sort by contact name
 - **Name** - Sort by contact first name

- **Define home address** - Display/enter/edit the home address
 - **Current position** - Set the home address to the current vehicle position
 - **Address** - Enter a new address » [page 51](#). If the home address has already been entered, the following is displayed:
 - < - Reduces map display
 - > - Enlarges map display
 - **Edit** - Edit the home address
- **Delete my points of interest (Personal POI)** - Delete saved personal points of interest
- **Update my points of interest (personal POI)** - Update saved personal POI
- **Delete user data** - Select the data to be deleted (the selected data is deleted by pressing **Delete**)
 - **Last destinations** - Delete the list of last destinations
 - **Destination memory** - Delete the list of stored destinations
 - **Tour memory** - Delete the list of stored tours
 - **My points of interest (Personal POI)** - Delete the list of personal points of interest
 - **Entered towns** - Delete the list of entered towns
 - **Home address** - Delete the set home address
 - **Flagged destination** - Delete the flagged destination

Operating the map

Introduction

This chapter contains information on the following subjects:

Introductory information	50
Map display options	50
Map operation	51
Traffic signs	51
Home address entry	51

First and foremost, pay attention to the safety instructions » [page 4](#), *Important notes*.

Introductory information



Fig. 32
Map display: Main menu

Explanation of graphic

- A** Map
- B** Traffic sign symbol » [page 51](#)
- C** Current vehicle position
- D** Status bar » [page 49](#)
- E** POI icons » [page 60](#)

► Press the **NAV** button.

The last opened **navigation** menu opens.

If a menu other than the main menu » [Fig. 32](#) is opened, the main menu can be opened by pressing **NAV** again.

Map display options

Switch between different navigation map display modes depending on the context. You can also display an additional window with further navigation information.

► In the **Navigation** main menu, press . There is a list of function keys displayed.

List of Function Keys

- 2D - current vehicle position in the 2D map display
- 3D - current vehicle position in the 3D map display
- 3D map with spatial representation of buildings (topographic map)
- Destination display (appears after route calculation)
- Displays the overview map to the destination. (After calculating the route, the device displays the route from the vehicle location to the destination. The scale is adjusted to the length of the route.)

Day/night Map display with light or dark background

Split screen Switches the split screen on/off in the map » [page 52](#)

Map operation

Moving the map












The map can be moved in any direction by touching it with your finger and dragging it on the screen in the desired direction.




Changing the scale


› with the menu button 

› by touching the screen with two fingers and pulling the fingers together or apart.

Function keys and map display symbols

-  - Context-dependent change in the map orientation
- 2D map display - the map rotates and the direction of travel arrow  » [Fig. 32 on page 50](#) points to the top of screen, or the north is aligned with the top edge of the screen, and the arrow  shows the direction of travel
- 3D map view - the direction of travel arrow  points to the top of the screen (if the map scale is larger than 100 km, the map is aligned to the north).
-  - Touch to align the map to the position of the vehicle (the function key is available when you move the map in the vehicle position display)
-  - Touch to align the map to the destination position and/or route display (the function key is available when you move the map within the destination- or route display)
-  - The number located below the symbol indicates the elevation¹⁾
-  - Touch to increase the map scale for a few seconds before it resets to the original scale (quick view)
-  - Displays the manually set map scale
-  - Displays the automatic map scale
-  - Switches the autozoom on/off during route guidance. Active autozoom is indicated by a green symbol. If Autozoom is active, the map scale will change automatically depending on the route travelled (motorway trip: large map scale - city: small map scale)

The autozoom can be switched off by touching  →  or off by changing the map scale. Touching again the  (function key highlighted in green) turns the autozoom on again. Autozoom can also be switched on/off in the navigation settings » [page 49](#)

Autozoom is only functional when the map is aligned with the vehicle position (the function key  with the symbol).

Traffic signs

The system provides the option to display traffic signs  » [Fig. 32 on page 50](#) in the information display and on the unit screen that are:

- › stored in the navigation data of the maps;
- › recognised by the camera.

The information given by traffic signs that are recognized by the front camera always takes precedence over stored navigation data.

If the **Traffic signs** split screen is not switched on, only one traffic sign is displayed on the unit screen.

Switching on the traffic sign display function » [page 49](#).

Home address entry

› In the **Navigation** main menu, press  → **Manage memory** → **Define home address**.

If the home address has not been entered, an input window is displayed with the following message:

Please select as your home address: your current position or a new address.

The following function keys are displayed:

- › **Current position** - Entry of the home address via the acquisition of the current location;
- › **Address** - Enter the home address in writing » [page 55](#)

Description of the adjustment or deletion process of the home address » [page 49](#).

¹⁾ Display of elevation requires the reception of signals from at least five satellites. Route guidance must not be running in demo mode.

Extra window

Introduction

This chapter contains information on the following subjects:

Menus in the extra window	52
Audio	52
Compass	53
Man.	53
Traffic signs / Traffic	53
GPS	54
Map	54

First and foremost, pay attention to the safety instructions » page 4, Important notes.

Menus in the extra window

Additional information is displayed in the extra window depending on the context of the selected menu.

Switching on

› In the **Navigation** main menu, press **[NAV]**.

or

› In the **Navigation** main menu, press **[Split screen]** → **Split screen**.

The last opened split screen is displayed.

Switching off

› In the **Navigation** main menu, press **[NAV]**.

or

› in the split screen on **✕**.

or

› In the **Navigation** main menu, press **[Split screen]** → **Split screen**.

Menus in the split screen:

- **Audio** - Playback operation of the currently selected audio source» page 52
- **Compass** - Displays the current vehicle location in relation to the compass directions » page 53

- **Man.** - Displays the next or following navigation instructions (manoeuvres), the next POIs or an intersection detail » page 53;
- **Traffic signs** - Displays traffic signs that are stored in the navigation data of the maps or that are recognised by the front camera » page 53
- **GPS** - Displays the geographical coordinates of the current vehicle location » page 54
- **Map** - Map display » page 54.

Audio



Fig. 33
Split screen: Audio

In the **Audio** split screen, the playback of the currently selected audio source can be operated » page 21.

Function key	Action	Operation
◀▶	Press	Changing the station
▶ 	Press	Playback/Pause: the play function is stopped in the current position and the symbol changes to ▶ - after pressing again the play function will continue in this position.
◀◀	Press briefly (within 5 seconds of the start of playback of the track)	Plays the previous track from the start
◀◀	Press briefly (5 seconds after the start of playback of the track)	Plays the current track from the start
◀◀	Press button for a long period of time ^{a)}	Fast-reverse of the track ▶

Function key	Action	Operation
▶▶	Press briefly	Plays the next track from the start
▶▶	Press button for a long period of time ^{a)}	Fast-forward of the track

a) The longer the button is pressed, the faster the fast forward/reverse.

Compass



Fig. 34
Split screen: Compass

The **Compass** split screen displays the current vehicle position in relation to the compass.

Man.

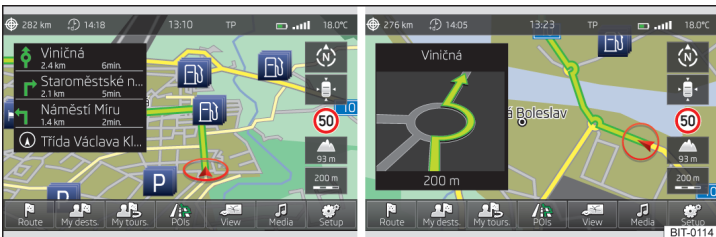


Fig. 35 Split screen: Manoeuvre

The **Man.** extra window displays a navigation announcement (manoeuvre).

Displayed information:

- ▶ When approaching the manoeuvre area (e.g., junction), details of the navigation instruction are displayed in the split screen. Once you have passed this area, the unit displays information on the next navigation instructions again;
- ▶ The street name and number for the current vehicle position and the three following directions for the navigation instructions, along with street names and numbers;
- ▶ Distance and time to the city with the following navigation instruction including numeric indication of the remaining distance;
- ▶ Information about the next points of interest (e.g., fuel stations, car parks).

Traffic signs / Traffic



Fig. 36
Split screen: Traffic signs

The **Traffic** split screen displays traffic signs.

Up to 3 traffic signs and 3 additional traffic signs can be displayed in the extra window.

If the message **No traffic sign available.** are displayed in the split screen, the front camera did not recognise any traffic sign or you are outside the range of the navigation data.

Further information » [page 51](#).

GPS



Fig. 37
Split screen: GPS

The **GPS** split screen displays information on the current geographical position of the vehicle.

Displayed information

- 📍 - Longitude¹⁾
- 📍 - Latitude¹⁾
- 📏 - Elevation²⁾
- **Satellites:** - Number of received/available satellites

Map

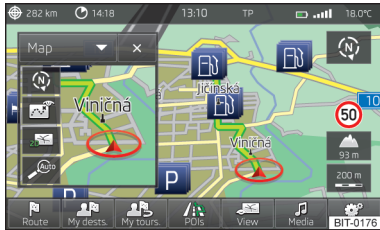


Fig. 38
Split screen: Map

An additional map is displayed on the **Map** split screen.

Map options

- 📍 - Context-dependent change in the map orientation
 - 2D map display - the map rotates and the direction of travel arrow **C** » Fig. 32 on page 50 points to the top of screen, or the north is aligned with the top edge of the screen, and the arrow **C** shows the direction of travel
 - 3D map view - the direction of travel arrow **C** points to the top of the screen (if the map scale is larger than 100 km, the map is aligned to the north).
- 📏 - Route display (the scale of the map is adjusted to the route length)
- 📍 - 2D - current vehicle position in the 2D map display
- 📍 - 3D - current vehicle position in the 3D map display
- 📏 - Displays the manually set map scale
- 📏 - Displays the automatic map scale
- 📏 - Switches on autozoom during route guidance. Active autozoom is indicated by a green symbol. If Autozoom is active, the map scale will change automatically depending on the route travelled (motorway trip: large map scale - city: small map scale)

¹⁾ To view the information on the longitude and latitude of the current vehicle position display requires the reception of GPS signals from at least three satellites.

²⁾ Display of elevation requires the reception of GPS signals from at least five satellites. Route guidance must not be running in demo mode.

Navigation

Enter new destination

Introduction

This chapter contains information on the following subjects:

Input destination possibilities	55
Address	55
Map	56

First and foremost, pay attention to the safety instructions » page 4, Important notes.

Input destination possibilities

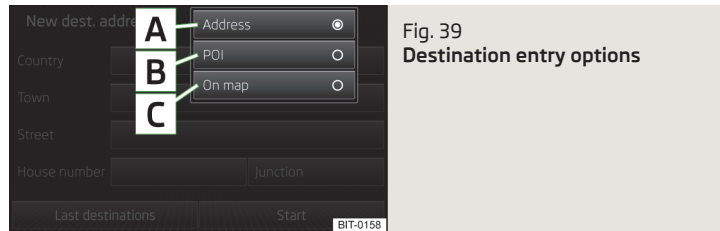


Fig. 39
Destination entry options

Explanation of graphic

- A** Address » page 55
- B** POI » page 58
- C** in the map » page 56

Select the menu with the option to enter a destination » Fig. 39.

➤ In the **Navigation** main menu, press Ⓜ → **Options** → ▼.

or

➤ In the **Navigation** main menu, press Ⓜ → **New dest./stopover** → **Options** → ▼.

or

➤ In the **Navigation** main menu, press Ⓜ → **Other POIs** → **Options** → ▼.

Make sure that the destination has been entered correctly, for example, by checking that the destination is displayed in the map. Some names of places and other destinations can occur at several places.

Address

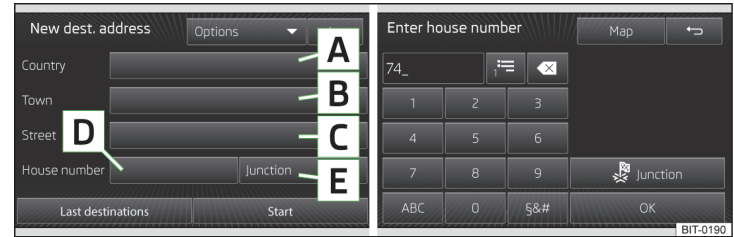


Fig. 40 Destination entry by address

Explanation of graphic

- A** Country
- B** City / town
- C** Street
- D** Enter building number (the function key is enabled only after the street has been entered)
- E** Enter junction (the function key is enabled only after the street has been entered)

↶ Return to the higher-level menu

ⓧ Delete characters in the entry line

ABC Switch to letters » page 8

§& Switch to special characters

Ⓜ Input a junction (crossroads)

OK Confirmation of text entered into the entry line

Map Open the map display » page 56

➤ In the **Navigation** main menu, press Ⓜ → **Options** → **Address**.

or

➤ In the **Navigation** main menu, press Ⓜ → **New dest./stopover** → **Options** → **Address**.

or

► In the **Navigation** main menu, press F → **Other POIs** → **Options** → **Address**.

Some address positions are already pre-filled with the data of the last destination.

The pre-filled positions can be adjusted by touching the item and then adjusting it in the input screen » [page 8](#).

To start navigation, you need to enter country, city and street.

The information is entered step by step in individual input screens.

When entering the street, instead of a street name, it is possible to select the centre of the entered city by touching **Centre**. Then it is no longer necessary to enter the house number or junction.

When entering the address, the function key **Map** is displayed on the input screen » [page 8](#). When you press the function key, the system opens a screen with the map » [page 56](#) where you can specify the address more precisely or check it.

You need to enter both the building number and a further address indicator in the form of a number. The device displays a list of destinations found from combinations of the two numbers.

If the entered house number was not found, a menu opens to clarify the destination:

- **No house number** - Enter an address without a house number and display a menu with destination details
- **Nearest house number:** - Confirmation of the proposed house number
- **Enter junction** - Open a menu with junctions with the selected street

If the address is entered correctly, destination details are displayed » [page 66](#).

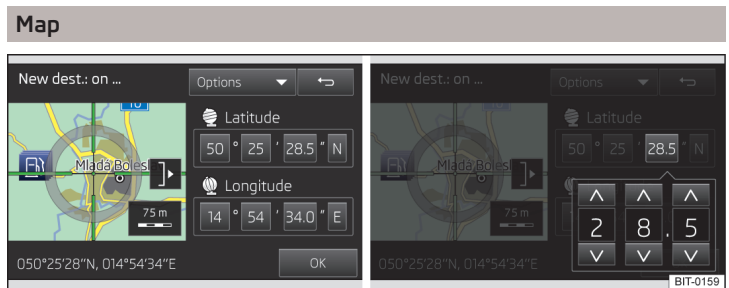


Fig. 41 Destination entry in the map

► In the **Navigation** main menu, press F → **Options** → **On Map**.

or

► In the **Navigation** main menu, press F → **New dest./stopover** → **Options** → **On map**.

or

► In the **Navigation** main menu, press F → **Other POIs** → **Options** → **On map**.

Entry on the map is also used for entering the search area for POIs » [page 58](#).

► In the **Navigation** main menu, press F → **Other POIs** → **Search area** → **Select on map** → **Edit**.

The destination can be entered on the map by using the GPS coordinates or the crosshairs » [Fig. 41](#).

GPS coordinates

The travel destination can be entered using latitude and longitude (GPS coordinates).

Press the function key with the latitude or longitude value for the point to display a menu with the option to focus in. The reference can be set with the function key with the symbol ∇ / \blacktriangle . Touch the screen outside the function keys to display a basic menu for entering points on the map.


The crosshairs shift to the coordinates entered so that the entered destination position can be checked. ►

Crosshairs

The crosshairs indicate the position of the pre-filled address.

Drag the desired destination to the centre of the crosshairs on the map with your finger.

Touch the map with your finger to move the point of contact in the crosshair while adjusting the latitude and longitude values for the entered point.

The symbol  displays the current map scale. This can be changed while the entry is being made » [page 51](#).

The bottom of the screen displays the address or the longitude and latitude of the selected item.


Confirm target

Confirm the destination by touching **OK**. Then the following items are displayed:

- **Store** - Store the destination in the destination memory » [page 8](#)
- **Edit** - Return to the main menu with the option to input a destination » [page 55](#)
- **Route opts.** - Display a menu for setting the route parameters » [page 48](#)
- **Start** - Route calculation starts with subsequent selection of route type and route guidance or with guidance according to the preferred route type

Map zoom in / out

by pressing the function key  the map goes to full screen display

by pressing the function key  the map is displayed on a split screen along with the menu for the entry using the GPS coordinates.

Entry of saved destinations

Introduction

This chapter contains information on the following subjects:

My destinations	57
Home address	57
Own destination (vCard)	58

First and foremost, pay attention to the safety instructions » [page 4](#), Important notes.

¹⁾ This function is only supported by some telephones.

My destinations

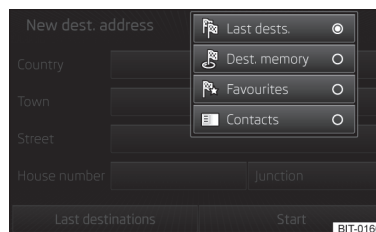


Fig. 42
My destinations menu





The menu is used to select the type of destinations stored in the unit memory » [Fig. 42](#).

► In the **Navigation** main menu, press  → **Dest. and contacts** → ▼ .

or

► In the **Navigation** main menu, press  → **Last destinations** → ▼ .

Destinations lists

-  Last destinations
-  Destination memory (stored destinations and flag destinations)
-  Favourites
-  List of contacts with stored addresses¹⁾ (the phone must be connected via Bluetooth[®] » [page 37](#))

Confirm one of the menu items of dests. and contacts to display the following:

- **Find** - The function key is displayed if more than 5 entries exist. Touch to start the search for a destination or a contact by the name stored in the destination menu » [page 8](#)
- **>** - Detailed information on the destination or contact

Confirm a destination to start guidance depending on the context or to display details of the destination » [page 66](#).

Home address

The menu provides a quick destination guide to a stored home address.

► In the **Navigation** main menu, press  → **Home address**. ►

If the preferred route type has been set, then touching the **Home address** will start the calculation and route guidance, or after the calculation, you need to select the route type before the route guidance starts.


If the home address has not been entered, an input window is displayed with the following message:

Please select as your home address: your current position or a new address.

The following function keys are displayed:


- **Position** - Entry of the home address through taking the current position of the vehicle;
- **Address** - Enter the home address in writing.

Description of the adjustment or deletion process of the home address:

The home address is also available in the main **navigation** menu, by pressing the symbol key  → **Manage memory** → **Define home address**.

Own destination (vCard)

You can import custom destinations in vCard format from an SD memory card, a CD/DVD or a USB storage device into the device.

➤ In the **Navigation** main menu, press  → **Import destinations**.

A list of possible data import sources is displayed » [page 26](#).

After selecting the source and confirming the menu item **Import all vCards from this folder** the importing the data stored in vCard format into the device memory begins.

POI

Introduction

This chapter contains information on the following subjects:

Input a new POI	58
Search area for POIs	59
Find and select a POI	59
Quick select a POI	59
Search selection near the location, destination, stopover and along the route	59
Search near the entered address or near the point entered on the map	60

First and foremost, pay attention to the safety instructions » [page 4](#), *Important notes*.

Input a new POI

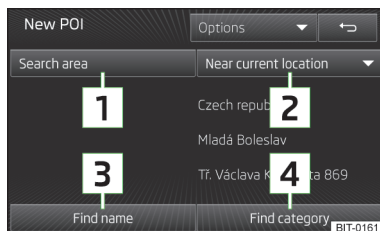


Fig. 43
Main menu


Explanation of graphic

- 1 Select search area
- 2 Menu with context-sensitive search areas
- 3 Search for POI by name
- 4 Search for POI by category

Open the main menu.

➤ In the **Navigation** main menu, press  → **Options** → **POI**.

or

➤ In the **Navigation** main menu, press  → **New dest./stopover** → **Options** → **POI**.

or

➤ In the **Navigation** main menu, press  **Other POIs**

Search area for POIs

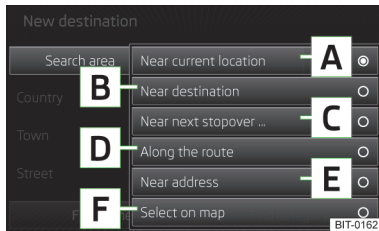


Fig. 44
Search area for POIs

Explanation of graphic

- A** Near current location - search in immediate vicinity of vehicle
- B** Near destination - Near the destination
- C** Near next stopover destination - in the stopover vicinity
- D** Along the route - Along the calculated route
- E** Near address - Near the entered address
- F** Select on map - In the vicinity of the point entered on the map

First select a search area for the POI.

► In the main menu, to enter a new POI, press **1** » Fig. 43 on page 58.

Depending on the context, the following search options **2** » Fig. 43 on page 58 can be displayed.

Find and select a POI

The POIs are searched for in the selected search area » page 59.

Search option: » Fig. 43 on page 58

- 3** Search by the entered POI name » page 8
- 4** Search by the selected POI category » page 60

The menu with the found destinations is displayed when the search has finished. The menu is sorted by the distance to the specified search area and includes a maximum of 200 entries found.

Details are displayed after confirming a menu item » page 66 .

Quick select a POI

► In the **Navigation** main menu, press **1** .

Speed dial

- P** Car park
- ¶** Restaurant
- ⛛** Petrol stations

When you touch a menu item, a list of the nearest POIs in the selected category is displayed.

By selecting a menu item in the list of the selected POIs, the POI details is displayed.

Search selection near the location, destination, stopover and along the route

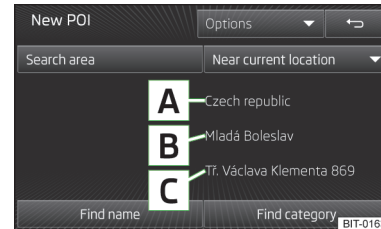


Fig. 45
Search area for POIs

Explanation of graphic

- A** Country
- B** City
- C** Street

The menu items displayed in the search area are for information only and cannot be changed.

The figure applies to the following search-area options near **1** » Fig. 43 on page 58.

- **Near current location** - current position
- **Near destination** - Destination
- **Near next stopover destination** - Stopover
- **Along the route** - Route

Touch **3** or **4** » Fig. 43 on page 58 to start the POI search for the selected search area.

Search near the entered address or near the point entered on the map

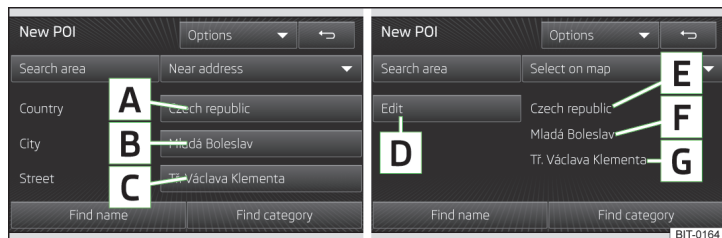


Fig. 46 POI search: near the entered address entered/near the entered map point

Explanation of graphic

- A** Country
- B** City
- C** Street
- D** touch to open a screen to enter a point on the map » page 56
- E** Country
- F** City
- G** Street

The figure applies to the following search area options **1** » Fig. 43 on page 58.

- **Near address** - Searches in the vicinity of the entered address
- **Select on map** - Searches in the vicinity of the entered map point

The displayed menu items, in the search area by address entry, can be changed.

The menu items in the search area by map point entry are for information only and cannot be changed.

Touch **3** or **4** » Fig. 43 on page 58 to start the POI search for the selected search area.

POI categories

Introduction

This chapter contains information on the following subjects:

Car and travel	60
Dining and shopping	61
Businesses and public facilities	61
Emergencies	61
Attractions and leisure	61
Other destinations displayed in the map	61

First and foremost, pay attention to the safety instructions » page 4, Important notes.

The map screen can display symbols for the destination type name.









- **Select all** - Displays a list of all destinations in the search area, with the nearest POI listed at the top
- **Categories (alphabetical)** - Displays all POI categories in alphabetical order
 - Car and travel
 - Dining and shopping
 - Companies and public services
 - Emergencies
 - Attractions and leisure

Car and travel









 

Sym- bol	Meaning	Sym- bol	Meaning
	Bus stops		Petrol stations
	LPG filling stations		Natural gas stations
	Motorway intersections		Motorway junctions
	Hotels and motels		Border crossings
	Airports		Railway stations
	Motorway services		Car parks
	Car rental		Skoda dealers
	Skoda service		Ferries and motorail trains
	Tourist information		

Switch display of company logos on/off.





Dining and shopping

Symbol	Meaning	Symbol	Meaning
	Electronics		Cafes
	Shopping centres		Nightlife
	Clothing		Cash machines
	Restaurants		Wine and spirits















Businesses and public facilities

Symbol	Meaning	Symbol	Meaning
	Banks		Community centres
	Places of worship		Companies
	Cemeteries		Convention centres
	Post office		Government and administration
	Educational institutions		Embassies







Emergencies

Symbol	Meaning	Symbol	Meaning
	Chemists		Medical services
	Hospitals		Police

Attractions and leisure

Symbol	Meaning	Symbol	Meaning
	Autostadt		Golf
	Casinos		Cinemas
	Museums		Monuments
	Parks		Sports centres
	Recreational airports		Tourist attractions
	Boating		Performing arts
	Amusement parks		Skiing

Other destinations displayed in the map

Symbol	Meaning	Symbol	Meaning
	Home address		Favourite
	Destination		Stopover destination
	City centre		Town centre

Route guidance

Introduction

This chapter contains information on the following subjects:

Route calculation	62
Explanation of graphic navigation instructions	62
Nav. announcements	62
Route	63
Lane guidance	63

First and foremost, pay attention to the safety instructions » page 4, Important notes.

Route calculation

The route is calculated automatically according to the entered destination. The calculation takes the settings of the route options » [page 48](#) (route type, dynamic route, etc.) into account.




The route is recalculated each time if you ignore driving recommendations or change the route. This process takes only a few seconds. Nav. announcements can only then be re-transmitted.

If Demo mode is switched on » [page 49](#), a prompt appears asking whether you want the guidance to start in demo mode or normal mode.



Demo mode provides a travel simulation to the entered destination. It offers the chance to travel the calculated route "virtually" on the device screen.

If an alternative route option is set, function keys are displayed, following the calculation, for the route types with information on the route length and the expected travelling time.

Route Type

-  economically
-  quickly
-  short

Selecting the route type will start route guidance.

After the route has been calculated, additional information specific to the selected route is displayed on the function keys for the route types » [page 48](#), e.g., use of motorways , toll roads  and the like.

If the option for alternative routes is disabled, the route is calculated and route guidance is started according to the preferred route » [page 48](#).

It is possible to select a pre-calculated route before the calculation of the remaining routes is completed.

The unit tries to allow for continued guidance even if the navigation data is incomplete or there is no data at all for the given area (e.g., one-way streets, road types, etc.).

Interrupt and continue route guidance

If the ignition is switched off and on again and the **key was left** in the ignition (in vehicles with the KESSY system, when the ignition was switched off):

- › within 30 minutes - route guidance is continued, taking into account the calculated route
- › Between 30 and 40 min - the screen switches to "standby" mode (energy-saving mode of the screen); the route guidance continues using the calculated route
- › Between 40 min and 120 min - the unit screen displays the message **Continue route guidance?**; after you confirm the message, the route guidance continues using the calculated route;
- › After 120 min - The route guidance is cancelled.

Switch ignition off and on again and **remove the key temporarily** (in vehicles with the KESSY system, switch off the ignition and open the driver's door):

- › Within 10 min - route guidance is continued, taking into account the calculated route
- › Between 10 min and 120 min - the screen switches to "standby mode" (energy-saving mode of the screen); the unit screen displays the message **Continue route guidance?**; after you confirm the message, the route guidance continues using the calculated route
- › After 120 min - The route guidance is cancelled.

Explanation of graphic navigation instructions

The graphical navigation instructions are displayed:

- › in the MAXI DOT display » [page 9](#);
- › in the extra window of the device screen » [page 53](#).

Nav. announcements

The device outputs the navigation announcements. The navigation announcements are started as soon as the route calculation is complete or a route type has been selected.

The navigation announcements are generated by the instrument system. The flawless clarity of the message (eg, road or city name) cannot always be guaranteed.

Before turning, up to 3 recommendations are issued:

The last navigation announcement can be repeated:

- › by pressing the menu knob  » [Fig. 1 on page 5](#);
- › Press the dial  » [Fig. 10 on page 12](#) on the multifunction steering wheel. ▶


The timing of the navigation announcement depends on the type of road and the driving speed. For example, on motorways the first announcement is made about 2000 m (6000 ft) before the location where you want to leave the motorway.

During dynamic route guidance, the unit notifies the driver of traffic problems. If a new route is calculated due to traffic problems, the **Calculating the route...** announcement is sounded.





Set the output volume of the navigation announcements or mute it during a phone call » [page 49](#).


Route

When there is a calculated route to the destination, the recommended route is displayed.

» In the **Navigation** main menu, press .

The following menu is displayed:

- **Stop route guidance** - Stops route guidance
- **New dest./stopover** - Enter a new destination or add a destination to the calculated route » [page 55](#) or » [page 65](#)
- **Route information** - Display information about the destination and the calculated route (setup of information displayed » [page 49](#))
 -  - Arrival time at destination/stopover¹⁾
 -  - Remaining travelling time to destination or stopover¹⁾
 -  - Remaining travelling distance to destination or stopover
- **Store destination** - Stores the destination on the input screen » [page 8](#)
- **Route list** - Displays the list of route sections
- **Tour** - display of tour destinations » [page 65](#)
- **Congestion ahead** - If you hear of a traffic problem (e.g. congestion), you can enter this traffic problem manually. After entering, this device recalculates and provides an alternative route. The traffic jam information increases or decreases by touching the scale ◀▶ or by turning the menu button  » [Fig. 1 on page 5](#).

¹⁾ If the time of arrival or remaining travelling time is greater than 24 hours,  is displayed inside the symbol.

Lane guidance

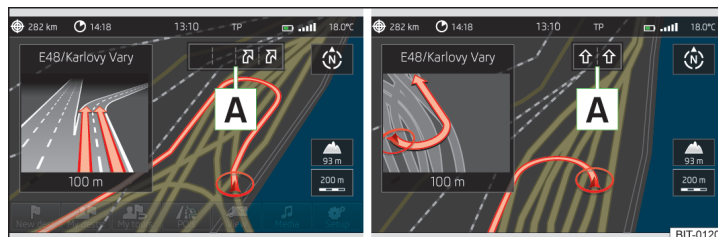



Fig. 47 Lane guidance

A split screen lane guidance  » [Fig. 47](#) may sometimes be shown during the route guidance at some intersections, motorway junctions, multilane roads, and similar.

This split screen with the lane guidance is only displayed only if information about the traffic area is available in the navigation data.

Switch function » [page 49](#) on/off.

traffic reports

Introduction

This chapter contains information on the following subjects:

Operation	64
Switching dynamic route on/off	64
Detailed traffic reports	64

The traffic is getting denser. For this reason, information on the current road and traffic conditions will continue to gain in importance.

TMC traffic reports are used to optimise the route during route guidance when there are traffic disruptions.

The device can obtain this information from the following sources: ▶

- Traffic programme TP in the FM frequency range » [page 23](#).
- Traffic programme in the DAB frequency range
- TMC traffic information with a dynamic adjustment for the current route

The following conditions are required for the correct TMC function:

- ✓ The vehicle is within reception range of the FM RDS-TMC.
- ✓ Adequate and uninterrupted signal reception of a traffic information station¹⁾.
- ✓ Current navigation data in the device.

Operation

TMC (Traffic Message Channel) is a digital data service emitted by the radio station for continuous transmission of traffic information.

➤ Press **TRAFFIC** to display a list of traffic reports **Traffic report .../...**

Touch one of the traffic report entries to display traffic report details » [page 64](#).

If a TMC traffic radio station is available for current location, the TMC traffic reports are updated continuously in the background. The station you are listening to does not have to be a TMC station.

The reception of TMC traffic reports is always switched on and cannot be turned off.

The accuracy of the dynamic route guidance depends on the transmitted traffic reports. The radio stations broadcasting this information are responsible for the content.




TMC traffic reports can only be evaluated and saved by the radio navigation system when navigation data are available for the driven area.

Switching dynamic route on/off

➤ In the **Navigation** main menu, press  → **Route Options** → **Dynamic route** .

When the **Dynamic route** » [page 48](#) function is switched on, the traffic reports influence the dynamic route guidance by means of TMC messages.

Dynamic route switched on

Information on traffic problems received via TMC which affect the route are displayed in the map by means of a coloured symbol (e.g., , , , etc.). Traffic problems, which do not affect the route, are displayed in the map by means of a grey symbol. The direction in which a traffic problem is found, is displayed by means of an arrow in the symbol.

Dynamic route switched off

You are not alerted to received traffic disruptions along your route and are guided through the traffic disruption by the radio navigation system. The traffic reports are updated automatically in the unit and displayed by pressing the button **TRAFFIC**.



If one of the announced traffic disruptions lies on your route, you can switch on dynamic route guidance during your current route guidance or block the route manually » [page 63](#).

Note

Making a diversion from a traffic jam based on TMC traffic reports may not always offer a time advantage, e.g. if the diversion route is also congested.

Detailed traffic reports

After pressing the **TRAFFIC** button, a screen appears with the following information:

- Function key **All** - Show all traffic information
- Function key **Route** - only display the traffic information on the current route
- A map showing the traffic obstruction
- A window with a description of the traffic information
 - Location of event, the accuracy depends on the timeliness of the navigation data
 - Description of up to three events related to the respective information
 - Description of the direction with respect to the event
 - probable duration of the event
 - Additional information, such as probable delay time
 - An information line, on how current the information is and on the provider of the message
 - Symbol that specifies the type of information
-  - zoom in window with described traffic obstruction 

¹⁾ For vehicles with window antennas, if the windows have foil stuck to them or metal-coated stickers this may cause you to experience some interference.

- - zoom out window with described traffic obstruction
- ◀ - show previous traffic information
- - show the following traffic information
- 📄 - display list of all received traffic messages

My tour

Introduction

This chapter contains information on the following subjects:

New tour	_____	65
Tour editing	_____	65
Tour memory	_____	65

First and foremost, pay attention to the safety instructions » page 4, Important notes.

New tour

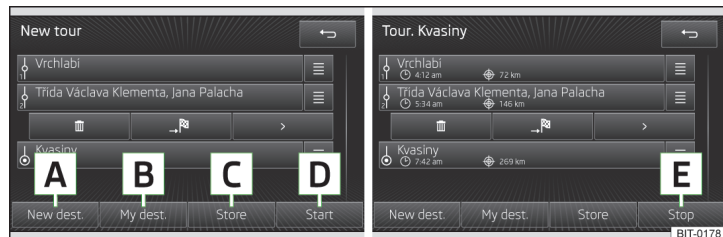


Fig. 48 Entering a new tour

- In the **Navigation** main menu, press **⌂** → **New tour** to open a menu for entering a new tour.

The route can be preset. After entering the route, you can start the guidance or save the route for use at a later date.

You can switch the individual destinations by pressing a destination and dragging it to another position.

Pressing the function key with the destination opens a window with function keys for destination processing.

Explanation of graphic

- A** Enter a new destination
- B** Select a destination from the list of stored destinations » [page 57](#)
- C** Save the route in the tour memory
- D** Calculate the specified route and start the route guidance
- E** Stop the route guidance
- ⌄ Stopover with sequential number
- 📍 Destination
- 🕒 Arrival time at destination/stopover
- 📏 Distance to destination or stopover
- 🗑️ Delete the stopover
- ➡️ Start direct route guidance
- > Open the destination details » [page 66](#)

When you press the name of the destination or stopover, the system displays a menu where you can edit the destination (🗑️, ➡️, >).

After the route has been calculated, the unit displays the arrival times at the individual destinations and the remaining distance to the destination.

Tour editing

- In the **Navigation** main menu, press **⌂** → **Edit tour** to open a list containing the destinations for the current route.

The route guidance is not cancelled.

When you press the name of the destination or stopover, the system displays a menu where you can edit the destination » [page 65](#).

Tour memory

- In the **Navigation** main menu, press **⌂** → **Tour memory** to open a list containing all saved routes.

When you confirm a route from the list, the system opens a menu for the selected route containing destinations; here, you can edit the destinations and start the route guidance. » [page 65](#)

Destination management

Introduction

This chapter contains information on the following subjects:

Stopover	66
n details	66

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

Stopover

It is possible to add up to ten stopovers to the route during route guidance. The route guidance is according to the sequence of the stopovers on the route. After the next stopover has been reached, route guidance to the following stopover continues.

» In the **Navigation** main menu, press **New dest./stopover** a menu opens for entering a new destination » page 55 and then in the next step a menu for destination details » page 66.

If the route guidance is active, then after confirming with **Start** the device shows after entering the stopover the message, **Route guidance is already active. Do you want to start route guidance directly to the new destination or add the new destination as a stopover?** and the following points » Fig. 48 on page 65 :

- **Cancel** - the stopover destination input and the destination guidance to the original destination is continued
- **Stopover** - the destination entered is added to the route and guidance to this destination is initially provided
- **Start** - the destination entered is added as the final destination and the original final destination is replaced by this new destination

After reaching the maximum number of ten stopover destinations one of the stopover destinations is to be deleted in order to enter the next destination.

n details

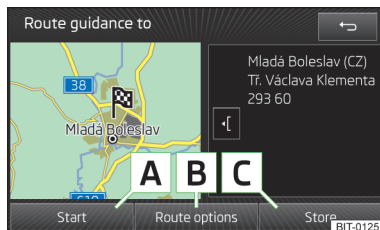


Fig. 49
Destination details

The following information and functions are displayed in the destination details.

- » preview map with indication of the destination by means of the symbol **Ⓜ**
- » detailed destination information
- » **[<** - reduce preview map display
- » **]>** - enlarge preview map display

The following function keys are displayed, depending on the target type.

New destination or a destination stored in the list of last destinations

The menu is shown at the destination entry point by pressing **>** if this destination is not in the destination memory.

- A Start** - Start route calculation
- B Route options** - Display a menu for setting the route parameters » page 48
- C Store** - Store the destination in the destination memory » page 8

Destination in destination memory

The menu is shown at the destination entry point by pressing **>** if this destination is in the destination memory or the favourites list.

- **Start** - Start route calculation
- **Route options** - Display a menu for setting the route parameters » page 48
- **Edit** - Edit the stored destination
 - **Favourite** - Add or remove the destination to/from the list of favourites
 - **Delete** - Delete the destination
 - **Store as** - Edit the name and then store the destination » page 8

POI

The menu is displayed:

- › by touching > the menu item in the list of found POIs;
- › by touching the POI symbol on the map.
- **Dial No.** - Start a telephone call¹⁾ (If a telephone is connected via Bluetooth® and the destination has been entered including the contact telephone number)
- **Start** - Start route calculation » [page 62](#)
- **Store** - Store the destination in the destination memory

In the POI details, individual POIs can be shown from the POIs found by tapping on ◀/▶ or by finger motion across the screen.

Home address

The menu is displayed after the home address has been entered.

- **Store** - Store the home address in the unit memory

¹⁾ This function is only supported by some telephones.

This chapter contains information on the following subjects:

Selection of travel mode (Driving Mode Selection)	68
Vehicle data	69
Auxiliary heater and ventilation	70
ESC-and ASR systems	70
Tyre	70
Assistance systems	71
Parking and manoeuvring	71
Light	72
mirrors and wiper	72
Opening and closing	72
Seats	72
Multifunction display	73
Service	73
Restore factory settings	73
Climatronic settings	73

First and foremost, pay attention to the safety instructions » page 4, Important notes.

Settings relating to the vehicle systems can only be made when the ignition is switched on.

i Note

- The individual systems are described in the » *Vehicle Owner's Manual*.
- If the functions of some systems are disabled, some functions, such as parts of the ESC system, are switched on again automatically for security reasons, after switching the ignition off and on.

Selection of travel mode (Driving Mode Selection)

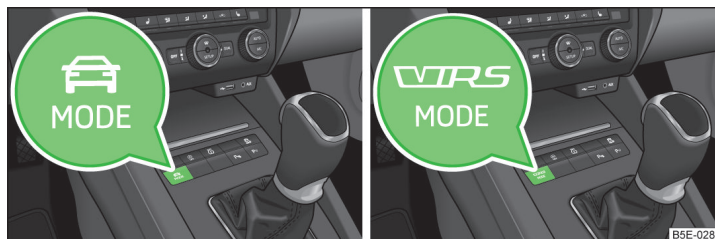

 


Fig. 50 Button for selecting the driving mode: Version 1/version 2

The menu for the selection of the driving mode allows you to select one of the driving modes (**Normal**, **Sport**, **Eco**, **Individual**).

If a driving mode other than **Normal** is selected, then the symbol lights up on the button  or  » Fig. 50.

The currently selected driving mode is displayed in the info field in the main menus next to the icons  » Fig. 55 on page 73 (top left).

Call up the main menu

► Press the button  or  » Fig. 50.

- **Normal** - Activates Normal mode
 - **Cancel** - Cancel the menu to select the driving mode
 - **Information** - Information concerning the mode settings
- **Sport** - Activates Sport mode
 - **Cancel** - Cancel the menu to select the driving mode
 - **Information** - Information concerning the mode settings
- **Eco** - Activates the fuel-saving mode
 - **Cancel** - Cancel the menu to select the driving mode
 - **Information** - Information concerning the mode settings
- **Individual** - Activates the Individual mode
 - **Cancel** - Cancel the menu to select the driving mode
 - **Setup** - Individual setting
 - **Steering** - Set the power steering characteristics
 - **Normal** - Normal
 - **Sport** - Sports

- **Engine:** - Set the engine (drive) characteristics
 - **Normal** - Normal
 - **Sport** - Sports
 - **Eco** - Economical
- **ACC:** - Set the vehicle acceleration when adaptive cruise control is activated
 - **Normal** - Normal
 - **Sport** - Sports
 - **Eco** - Economical
- **Dynamic cornering light:** - Set the characteristics of the adaptive headlights
 - **Normal** - Normal
 - **Sport** - Sports
 - **Eco** - Economical
- **Air conditioning:** - Sets the Climatronic characteristics
 - **Normal** - Normal
 - **Eco** - Economical
- **Reset mode** - Setting for all menu items in the **Individual** mode to **Normal**
 - **Cancel** - Keep the current settings
 - **Reset** - Set all menu items to **Normal**

i Note

If you do not operate the unit for longer than approx. 10 seconds in the "Select driving mode" menu, it will switch to the last selected menu or switch itself off.

Vehicle data



Fig. 51 Travel data / vehicle status

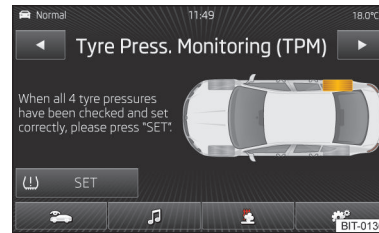



Fig. 52 TPMS - Display example: the system indicates a tire pressure change on the rear right

Explanation of graphic

- A** Distance
- B** Driving time
- C** Average speed
- D** Average fuel consumption
- E** Approximate range¹⁾
- F** Range (if the estimated range is less than 300 km, the vehicle starts to approach the symbol)
- G** Vehicle representation (the zones of the vehicle are shown in different colours, corresponding to any warning messages that occur. The warning messages are displayed once you touch vehicle)

Call up the main menu

➤ Press the button **CAR** → .

▪ **Driving data** - Display travel data

You can display one of three trip memories on the screen » Fig. 51.

- **Since start** - Driving data for the individual trip
- **Long-term** - Long-term driving data
- **Since refuelling** - Data since last refuelling

Switching between the individual driving data storage locations can be done by using the function keys **◀▶**.

¹⁾ For vehicles with CNG drive the approximate range with gasoline and CNG is also displayed separately.

- **Convenience consumers** - Displays up to three consumers which have the largest share of fuel consumption (such as air conditioning) and displays the fuel consumption to run all convenience systems
- **Vehicle status** - Displays vehicle status » Fig. 51 or tyre pressure monitoring information
 - *Vehicle status* - Displays vehicle status information
 - ✓ - No message / ⚠ - warning messages relating to vehicle status or number of messages (if there is only one message, one warning message text is displayed)
 - 📶 - Display information about the status of the START-STOP system
 - **TPMS** - Tyre pressure monitoring function » Fig. 52
 - ⚙ **SET** - Storage of the tyre pressure values

Switching between the individual menus can be done by using the function keys ◀▶.

i Note

After pressing the **CAR** button, the view from the menu last displayed is shown 🔄

Auxiliary heater and ventilation

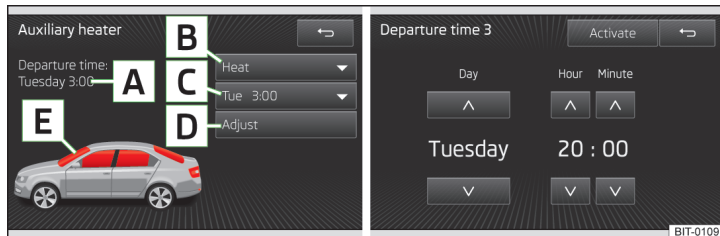


Fig. 53 Auxiliary heater: Main menu/set preset time

Call up the main menu

➤ Press the **SETUP** button on the Climatronic control panel → 🗄.

Or

➤ Press the button **CAR** → 🗄.

Set-up

- A** Departure time: Day and time when the vehicle is to be ready for use » Fig. 53
 - B** Heating/ventilation: Set the operating mode
 - C** List of pre-selected times, activation / deactivation of the preset time
 - D** Set the preset times 1 to 3 and the duration (10 - 60 minutes)
 - E** when heating the windows are shown in red / with continuous aeration, the windows are shown in blue
- Only one preset time can be active. The activated preset time will be deactivated again after it has started automatically. For the next start, activate one of the preset times.
 - The system in operation switches off on expiration of the operating duration or can be deactivated by pressing the icon 🗄 for direct on / off switching or via radio remote control.

i Note

- In the selection of the day in the preset time, there is an option between Sunday and Monday without the specified day. If this position is selected, the vehicle will be ready for use at the selected time, regardless of the current day.
- If a different time is set » page 19, *Time and date settings*, the activated preset time is automatically deactivated. The preset time must be reactivated.

ESC-and ASR systems

➤ Press the button **CAR** → ⚙ → **ESC system**:



- **Activated** - Switch on all components of the ESC system
- **ASR off** - Switch off the ASR system
- **ESC sport** - activation of ESC Sport

Tyre

➤ Press the button **CAR** → ⚙ → **Tyres**.

- **TPMS** - Tyre pressure monitoring system
 - ⚙ **SET** - Storage of the tyre pressure values
- **Winter tyres** - Sets the speed limit for winter tyres
 - **Speed warning** - Snow tyres speed warning on/off
 - **Warning at** - Sets the speed for the warning

Assistance systems

► Press the button  →  → **Driver assistance.**

- **ACC (adaptive cruise control)** - Sets the adaptive cruise control
 - **Driving programme:** - Set the vehicle acceleration when adaptive cruise control is activated¹⁾
 - **Normal** - Normal
 - **Sport** - Sports
 - **Eco** - Economical
 - **Last distance selected** - Last selected distance on/off
 - **Distance:** - Set the distance monitoring to the vehicles ahead
 - **Very close** - Very small distance
 - **Close** - Small distance
 - **Medium** - Medium distance
 - **Far** - Large distance
 - **Very far** - Very large distance
- **Front Assist (ambient traffic monitor. sys.)** - Set the assistant for distance monitoring to the vehicles ahead
 - **Active** - Activate/deactivate the assistant
 - **Advance warning** - Activate/deactivate advance warning
 - **Display distance warning** - Activate/deactivate distance warnings
- **Lane Assist (lane departure warning sys.)** - Settings for Lane Assist
 - **Active** - Activate/deactivate the assistant
 - **Adaptive lane guidance** - Activate/deactivate adaptive lane guidance
- **Traffic sign recognition** - Settings for the traffic sign recognition assistant
 - **Show in multifunction display (MFD)** - Activate/deactivate the display of traffic signs in the MAXI DOT display
 - **Show traffic signs relevant to trailers** - Activate/deactivate the display of traffic signs relevant for trailer operation
- **Driver Alert System** - Activate/deactivate the driver alert system
- **Proactive occupant protection** - Activate/deactivate proactive passenger protection

¹⁾ This can be set in the menu on vehicles with a travel mode option » page 68, *Selection of travel mode (Driving Mode Selection)* .

Parking and manoeuvring

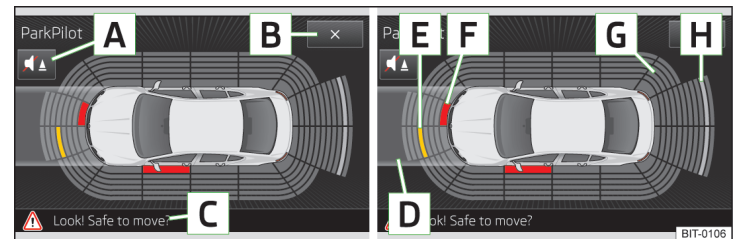


Fig. 54 Screen display of the visual parking system

Explanation of graphic

- A** Switching on/off the acoustic parking aid
- B** Switching off the visual parking system
- C** Message: **Look! Safe to move?**
- D** Displays the lane depending on the steering angle
- E** An obstacle in the lane which is currently outside of the collision area is shown by the yellow segment
- F** An obstacle appearing in the collision zone is shown as a red-coloured segment 🚫 Do not continue driving!
- G** An area without detected obstacles is shown as a transparent segment
- H** An obstacle in the sensor range which lies outside of the collision area is shown by the white segment

► Press the button  →  → **Parking and manoeuvring.**



- **ParkPilot** - Settings for the parking aid
 - **Activate automatically** - Activate/deactivate the compact parking aid display (when driving forward)
 - **Front volume** - Adjust the volume of the beeps for obstacle detection in front
 - **Front tone setting** - Setting the pitch of the beeps for obstacle detection in front
 - **Rear volume** - Set the volume level of the beeps for the rear obstacle detection

- **Rear tone setting** - Setting the pitch of the beeps for the rear obstacle detection
- **Audio lowering:** - lowering the volume of the speakers (audio)
 - **Off** - No volume reduction of the sound from speakers
 - **Weak** - weak volume attenuation of sound from speakers
 - **Medium** - medium volume attenuation of sound from speakers
 - **Strong** - Strong volume attenuation of sound from speakers



i Note

The compact display of the parking aid can be switched to a full screen view by touching the screen within the display.



Light

- Press the button  →  → **Light**.
- **Light assistance** - Setting of outdoor lighting
 - **Light Assist** - Switch on/off the head light assist
 - **Switch-on time:** - Set the sensibility of the light sensor against the change in intensity of the ambient light
 - **Early** - High sensibility
 - **Medium** - Medium sensibility
 - **Late** - Low sensibility
 - **Automatic headlight control (rain)** - Activate/deactivate automatic headlight control in rain
 - **Daytime running lights** - Activate/deactivate daytime running lights
 - **Lane change flash** - Activate/deactivate lane change flashing
 - **Travel mode:** - Travel mode on/off
 - **Right-hand traffic** - For right-hand traffic
 - **Left-hand traffic** - For left-hand traffic
- **Interior lighting** - Sets the interior lighting
 - **Instrument/switch lighting** - Sets the brightness of the instrument/switch lighting
 - **Footwell lighting** - Sets the brightness of the footwell light
- **Coming/Leaving Home function** - Setting the COMING HOME / LEAVING HOME-function
 - **Coming Home function** - Sets the period that the lights remain on after you leave the vehicle (0 - 30 seconds; 0 = function deactivated)
 - **Leaving Home function** - Sets the period that the lights remain on after you unlock the vehicle (0 - 30 seconds; 0 = function deactivated)

mirrors and wiper

- Press the button  →  → **Mirrors and wipers**.
- **Mirrors** - Adjusts the mirrors
 - **Synchronous adjustment** - Activate/deactivate synchronous mirror adjustment
 - **Lower while reversing** - Activate/deactivate the lowering of the front passenger mirror
 - **Fold in when parked** - Activate/deactivate folding the mirror via the remote control key or by using the sensor in the handle (KESY)
- **Wipers** - Adjusts the windscreen wipers
 - **Automatic wiping in rain** - Activate/deactivate automatic windscreen wiping in rain
 - **Automatic rear wiper** - Activate/deactivate automatic rear window wiping

Opening and closing

- Press the button  →  → **Opening and closing**.
- **Window operation** - Window operation settings
 - **Convenience opening:** - Set the convenience opening feature
 - **All windows** - All windows
 - **Driver window** - Driver's window only
 - **Off** - Deactivates the convenience opening
- **Central locking** - Settings for opening and closing of doors
 - **Door unlocking:** - Set the door unlocking feature
 - **All doors** - All doors
 - **Single door** - Driver's door or driver's or passenger door with KESY system
 - **Vehicle side** - Doors on the driver's side or on the driver's or passenger's side with KESY system
 - **Automatic locking** - Activate/deactivate automatic locking when starting off
 - **Acoustic confirmation** - Activate/deactivate acoustic signals when locking/unlocking the vehicle with an anti-theft alarm system

Seats

- Press the button  →  → **Seats**.

- **Store seat position** - Store the driver's seat position and exterior mirror position in the remote control key when locking the vehicle
 - **Vehicle key activated** - Activate/deactivate storing the driver's seat position and exterior mirror position when locking the vehicle

Multifunction display

➤ Press the button  →  → **Multifunction display**.

In this menu it is possible to hide/show the appearance of the menu items in the instrument cluster multifunction display and reset the driving data.

- **Current consumption** - Display of current fuel consumption on/off
- **Average consumption** - Display of average fuel consumption on/off
- **Refuel quantity** - Display of refuel quantity on/off
- **Convenience consumers** - Display of fuel consumption of convenience consumers on/off
- **Eco tips** - Display of tips for economical driving on/off
- **Travelling time** - Display of travelling time on/off
- **Distance** - Display of distance travelled on/off
- **Average speed** - Display of average speed on/off
- **Digital speed display** - Display of current speed on/off
- **Speed warning** - Winter tyres warning on/off
- **Oil temperature** - Oil temperature on/off
- **Reset "Since start" driving data** - Reset the single-trip memory in the device screen and in the display of the instrument cluster
- **Reset "Long-term" driving data** - Reset the long-term memory in the device screen and in the display of the instrument cluster

Service

➤ Press the button  →  → **Service**.

- **Vehicle number:** - Display of the vehicle identification number
- **Inspection:** --- / --- - Number of km/days remaining until the next service event
- **Oil change service:** --- / --- - Number of km/days remaining until the next oil change

Restore factory settings

➤ Press the button  →  → **Factory settings**.

In this menu you have the possibility to reset the menu items in the settings of the vehicle systems to factory settings.

- **All settings** - Restoration of the settings all menu items
- **Driver assistance** - Restoration of the **driver assistance** menus
- **Parking and manoeuvring** - Restoration of the **Parking and manoeuvring** menu items
- **Light** - Restoration of the **light** menus
- **Mirrors and wipers** - Restoration of the **Mirrors and wipers** menu
- **Opening and closing** - Restoration of the **Opening/closing** menu items
- **Multifunction display** - Restoration of the **Multifunction display** menus

If one of the above menu items is selected, the system will ask you whether you really want to restore the settings.

- **Cancel** - Return to higher-level menu
- **Reset** - Restore the settings

Climatronic settings

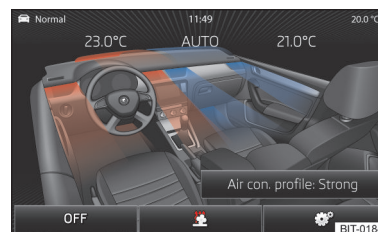



Fig. 55
Climatronic: Main menu


In the Climatronic menu the system displays the desired temperature for the driver's side and front passenger side » Fig. 55.


Depending on the desired temperature, the airflow from the air outlet vents is shown in blue (temperature under 22 °C) or red (temperature above 22.5 °C).

When using Climatronic in automatic mode, the lettering **AUTO** is shown on the screen.

Call up the main menu

➤ Press the  button on the Climatronic control panel.

- **Air con. profile:** - Set the Climatronic operating mode
- **ON/OFF** - Switches Climatronic on/off
-  - Set the auxiliary heater and ventilation » page 70

-  - Settings for Climatronic
 - **Air con. profile:** - Set the Climatronic operating mode
 - **Light** - Low power, quiet operation
 - **Medium** - Base power
 - **Strong** - High power
 - **Automatic air recirculation** - Automatic recirculated air mode on/off
 - **Automatic auxiliary heater** - Quick interior heating on/off
 - **Window heating** - Activates/deactivates the automatic windscreen heating

i Note

- If you do not operate the unit for longer than 10 seconds in the "Climatronic" menu and Climatronic was not switched on before the menu was opened, the unit will switch itself off.
- If you switch off the automatic mode of Climatronic by increasing or reducing the fan speed, the coloured display of the airflow from the air outlets will not be displayed.

Index

A

ACC	71
Additional keyboard languages	19
Address	55
Adjusting	
Volume	6
Adjust vehicle systems	
ESC system	70
Advanced settings	49
AM	21
Anti-theft protection	4
Apple devices	33
ASR	70
Audio	21
Media	26
Radio	21
Automatic distance control	71
Automatic front window wiping in rain	72
Automatic headlight in rain	72
Automatic locking	72
Automatic rear window wiping	72
Automatic scan	22
AUX	33
Auxiliary heater and ventilation	
Settings	70

B

Bluetooth	
Connect telephone to the device	40
Settings	20
Switch on/off	20
Visibility	20
Bluetooth audio	31
Bluetooth player	31

C

CD	31
Climatronic	
automatic air recirculation	73
Automatic operation	73
mode	73
COMING HOME	72
Communication	37
Phonebox	39
Component protection	4
Control lever	9
Convenience consumer	69

D

DAB	21
Settings	25
Station information	24
Data	
Convenience consumer	69
Travel	69
Vehicle status	69
Date	19
Daytime running lights	72
Declaration of conformity	4
Description of the unit	5
Destination details	66
Destination entry	
Home address	51
Destination management	66
Destination details	66
Stopover	66
Device operation	
Control lever	9
MAXI DOT display	9
Multifunction steering wheel	11, 12
Device pairing	41

Device screen	
Important notice	5
Maintenance	5
Operation	7

Digital radio reception	
Settings	25

Display	5, 7
---------	------

Display in instrument cluster	
Telefon	11

Display in the instrument cluster	9
-----------------------------------	---

Door release	72
--------------	----

Driving mode	68
--------------	----

Driving Mode Selection	68
------------------------	----

DVD	31
-----	----

DVD video	34
-----------	----

Main menu	34
-----------	----

Menu	35
------	----

Operation	34
-----------	----

Settings	35
----------	----

DVD video menu	35
----------------	----

DVD video playback	34
--------------------	----

Dynamic route	
Switch on/off	64

E

Eco tips	73
----------	----

Edit tour	65
-----------	----

Enter destination	
-------------------	--

Address	55
---------	----

From the list	57
---------------	----

Home address	57
--------------	----

Map	56
-----	----

Own destination	58
-----------------	----

POI	58
-----	----

Enter into map	56
----------------	----

ESC sport	70
-----------	----

Explanation of graphic navigation instructions	62
--	----

External input	
AUX	33
USB	33
Extra window	52
Audio	52
Compass	53
Geographical coordinates	54
GPS	54
Manoeuvre	53
Map	54
Menus	52
Navigation announcement	53
Switching on/off	52
Traffic	53
Traffic signs	53

F

Factory settings	20, 73
File formats	29
Requirements and restrictions	30
FM	21
Settings	24
Folders List	
Media	27
Folding down the exterior mirrors - folding in while parking	72
Frequency range	
See main menu	21
Front Assist	71
Fuel options	49
Function key	7
Function keys	7

G

Graphical navigation instructions	53
--	----

H

Head Light Assist	72
Home address	49, 57

I

Images	21, 35
Display	36
Main menu	35
Operation	36
Select source	36
Settings	36
Important notes	4
Important notice	
Touch screen	5
Import destinations	58
Information display	
Manoeuvre	53
Navigation announcement	53

In map	56
Input destination	55
Possibilities	55

Input screen	
Language characters	19

Input screen with keyboard	
Search	8
Storing	8

Input screen with numeric keypad	8
---	---

Instrument lighting	72
----------------------------	----

Introductory information	4
---------------------------------	---

J

Jukebox	30
----------------	----

K

Keyboard	8, 19
-----------------	-------

L

Lane Assist	71
Lane change flash	72
Lane guidance	63
LEAVING HOME	72
Light sensor - light switch-on time	72

List of available stations	
Radio	22

M

Main menu	
DVD video	34
Images	35
Media	26
Navigation	47
Telephone	38
Unit settings	17

Manage memory	49
----------------------	----

Manoeuvre	
explanation of graphic navigation instructions	62
Nav. announcements	62

Map	49
Display	50
Display options	50
Introductory information	50
Lane guidance	63
Main menu	50
Operation	51

Map display options	50
----------------------------	----

MAXI DOT	
Navigation	12
MAXI DOT display	
operation	9

media	
source	29

Media	26
AUX	33
Bluetooth audio	31
CD/DVD	31
DVD video	34
File formats	29
Folder list	27
Folder List	27
Jukebox	30
Main menu	26
Multifunction steering wheel	9

Operation	26
Playback	28
Requirements and restrictions	30
Scan	28
SD memory card	32
Select input source	26
Settings	28
Supported media	29
Track list	27
USB	33
Voice control	13
Memory function of the remote control key	72
Menu	
Images	35
Media	26
Radio	21
Setup	17
Telephone	37
Unit settings	17
Video	34
Multifunction display	73
Multifunction steering wheel	
DVD video	9
Media	9
Navigation	12
Radio	9
Telephone	11
Multimedia	
AUX	33
USB	33
Mute	6
My destinations	
Menu	57
My tour	65
New tour	65
Tour editing	65
Tour memory	65

N

Navigation	47, 55
Advanced settings	49
Destination details	66
Destination management	66
Enter address	55
Enter a POI	58
Explanation of graphic navigation instructions	62
Fuel options	49
Home address	51, 57
Import destination	58
Input destination	55
Main menu	47
Manage memory	49
Map	49, 56
Map operation	50, 51
Multifunction steering wheel	12
My destinations	57
My tour	65
Navigation announcements	49
Navigation data	48
Nav. announcements	62
New tour	65
POI	58
POI categories	60
Preface	47
Route	63
Route calculation	62
Route guidance	61
Route options	48
Saved destinations	57
Search area	59
Settings	48
Stopover	66
Tour editing	65
Tour memory	65
traffic reports	63
Traffic signs	51
Voice control	13, 16
Navigation announcements	49

Navigation data	48
Nav. announcements	62
New destination	55
New tour	65

O

Operation	
Images	36
Radio	21
Own destination	58

P

Parking aid	71
Phone	
Call-lists	45
Enter phone number	44
Phone book	44
Speed dialling a telephone number	43
Voice control	13
Phonebox	39
Playback	
Media	28
POI	58, 60
Attractions and leisure	61
Businesses and public facilities	61
Car and travel	60
categories	60
Dining and shopping	61
Emergencies	61
Find	59
Other destinations	61
Quick select	59
Search area	59, 60
Select	59
POI categories	60
Attractions and leisure	61
Businesses and public facilities	61
Car and travel	60
Dining and shopping	61

Emergencies	61	Screen	5, 18	Voice control	20
Other destinations	61	SD memory card	32	Volume	6
proactive passenger protection	71	Search area	59	Setting vehicle systems	
		Select in the map	56	Auxiliary heater and ventilation	70
R		Seats		Parking and manoeuvring	71
Radio	21	Settings	72	Restore factory settings	73
Automatic scan	22	Select frequency range		Setup	17
DAB - settings	25	See main menu	21	Set vehicle systems	
FM - settings	24	Select input source		Assistance systems	71
List of available stations	22	Media	26	Tyre	70
Main menu	21	Selection of travel mode	68	Sound	18
Multifunction steering wheel	9	Select radio channel		Source	29
Operation	21	See main menu	21	Speed limit for snow tyres	70
Preface	21	Select source		START-STOP	69
Radio station store	22	Images	36	Station	
Search	22	Select video source	34	See main menu	21
Settings	24	Semi-automatic station scan	22	Status line	7
Station logo	23	Settings		Stopover	65, 66
Traffic programme (TP)	23	Additional keyboard languages	19	Switching off	
Voice control	13	Bluetooth	20	Volume	6
Radio station		DAB	25	Switching the unit off	6
Automatic scan	22	Driving mode	68	Switching the unit on	6
Logo	23	DVD video	35	Synchronous adjustment of both mirrors	72
Search	22	FM	24		
Store	22	Images	36	T	
Radio station logo	23	Keyboard	19	Telephone	37
Radio station search	22	Language	17	Bluetooth profile	40
Radio station store	22	Manage favourites	43	Conference	46
Route	63	Media	28	Connect to the device	40
Route calculation	62	Menus	17	Disconnection	43
Route guidance	61	Navigation	48	Fast connection	42
Route info.	63	Radio	24	Functions	43
Route list	63	Restore factory settings	20	Main menu	38
Route options	48	Screen	18	Multifunction steering wheel	11
		Sound	18	On screen messages	38
S		Telephone	39	Pairing	41
Saved destinations	57	Time and date	19	Select telephone	42
Scan		Unit	17	Settings	39
Media	28	Units	19	Telephone conference	46
		User profile	43		

Telephone conversation	45
Telephone functions	43
Tilting the mirror surface - lowering in reverse	72
Time	19
Tiredness recognition	71
TMC	
traffic information	63
Touch screen	5
Tour memory	65
TP (Traffic programme)	23
Traffic	63
Dynamic route	64
Information	64
Operation	64
traffic information	
TMC	63
Traffic programme (TP)	23
traffic reports	63
Traffic reports	
Information	64
Operation	64
Traffic sign recognition	71
Traffic signs	51
Travel light - travel mode	72
Tyre pressure monitor	69, 70
U	
Unit menus	6
Unit operation	7
Device screen	7
Multifunction steering wheel	9
Unit screen	7
Unit overview	5
Units	19
Unit screen	
Keyboard	8
Operation	7
USB	33

V	
vCard	58
Vehicle equipment	
Declaration of conformity	4
Vehicle identification number	73
Vehicle settings	68
Vehicle systems	68
vehicle systems settings	
mirrors and wiper	72
Opening and closing	72
Vehicle systems settings	
Climatronic	73
Light	72
Multifunction display	73
Seats	72
Service	73
Video	21, 34
Media	26
VIN number	73
Voice control	13
Function requirements	14
Navigation	16
not recognizing a voice command	15
Operation	15
Settings	20
Stop/restore input/	15
switching on/off	14
Voice command input correction	15

W	
Windows comfort control	72
Wireless link to the outside antenna	
see Phonebox	39

ŠKODA AUTO a.s. pursues a policy of constant product and model development. We trust that you will understand that changes to models in terms of shape, equipment and engineering, may be introduced at any time. The information about appearance, performances, dimensions, weight, standards and functions of the vehicle is correct at the time of publication. Some equipment might only be introduced at a later date, or might only be offered in certain markets; information is provided by ŠKODA Partners. It is therefore not possible for legal claims to be made based on the data, illustrations and descriptions contained in this Owner's Manual.

Reprinting, reproduction, translation, or any other use, either in whole or in part, is not permitted without the written consent of ŠKODA AUTO a.s.

ŠKODA AUTO a.s. expressly reserves all rights relating to copyright laws.

Subject to change.

Issued by: ŠKODA AUTO a.s.

© ŠKODA AUTO a.s. 2014

www.skoda-auto.com

Columbus: Octavia
Infotainment anglicky 11.2014
S65.5614.03.20
5E0012720GD



5E0012720GD