ŠKODA

Infotainment Radio Bolero
Operating instructions



Structure of this Owner's Manual (explanations)

This Owner's Manual has been systematically designed to make it easy for you to search for and obtain the information you require.

Chapters, table of contents and subject index
The text of the Owner's Manual is divided into relatively short sections which are combined into easy-to-read **chapters**. The chapter you are reading at any particular moment is always specified on the bottom right of the page.

The **Table of contents** arranged according to chapter and the detailed **Subject index** at the end of the Owner's Manual help you to rapidly find the information you are looking for.

Direction indications
All direction indications such as "left", "right", "front", "rear" relate to the direction of travel of the vehicle.

Units of measurement
All values are expressed in metric units.

Explanation of symbols

- 🕮 Denotes a reference to a section with important information and safety advice in a chapter.
- ▶ Denotes the continuation of a section on the next page.
- ® Denotes a registered trademark.

Examples of the information listed in the Owner's Manual
Press the button MENU → ⚙ → **Time and date**.

This information means that the first the button MENU on the device is to be pressed and then the function key ⚙ on the device screen and then the function key **Time and Date** .

The "→" symbol indicates the next step.

Example of the menu, the available menus, menu items or functions.
- **xyz** - the first menu level
  - **xyz** - the second menu level
    - **xyz** - the third menu level
- **xyz** - the first menu level

Notes

WARNING

The most important notes are marked with the heading **WARNING**. These **WARNING** notes draw your attention to a **serious risk of accident or injury**.

CAUTION

A **Caution** note draws your attention to the possibility of damage to your vehicle (e.g. damage to gearbox), or points out general risks of an accident.

For the sake of the environment

An **Environmental** note draws your attention to environmental protection aspects. This is where you will, for example, find tips aimed at reducing your fuel consumption.

Note

A normal **Note** draws your attention to important information about the operation of your vehicle.

6V0012720EA

Preface

You have chosen a ŠKODA vehicle, which is fitted with an Infotainment Radio Bolero (hereafter called the unit) – we thank you for your confidence in us.

Please read this Owner's Manual carefully, because the operation in accordance with these instructions is a prerequisite for proper use of the unit.

For a detailed description of some functions listed in these instructions, see the Owner's Manual for your vehicle.

If you have any questions about your device, please contact a ŠKODA Partner.

Your ŠKODA AUTO a.s. (hereinafter referred to as ŠKODA)

6V0012720EA

Table of Contents

Abbreviations

Introductory information

Important notes 4

Equipment overview 4

Unit operation

Concerning the device screen operation 7

Operation through the MAXI DOT display 8

Device Settings

Menu Sound 12

Menu Setup 13

Radio

Operation 16

Settings 20

Media

Operation 22

Audio sources 24

Pictures

Image viewer 29

Communication

Telephone 30

Pair 34

Connection 37

Dial telephone number 39

Telephone functions 42

Text messages (SMS) 43

MirrorLink ™ 45

Vehicle systems

Vehicle settings - CAR 49

Index

Abbreviations

Abbreviation	Definition
A2DP	a Bluetooth ® - software profile for a one-way transfer of audio data
ACC	Adaptive cruise control
AF	Alternative frequencies for the current radio station
AM	Identification of the radio-frequency range
TCS	Traction Control of the drive wheels
AVRCP	used for operating with the data transfers of audio files connected multi-media functions for the prescribed Bluetooth ®software profile
BT	Bluetooth ® - wireless communication for reception and transmission of voice and data information
DAB	Digital radio reception
DRM	a system for monitoring or restricting the use of digital media content
DTMF	a dialling tone during a telephone communication
ESC	Electronic Stability Control
FM	Identification of the radio-frequency range
HFP	a Bluetooth ® Software profile for communication between a mobile telephone and the hands-free equipment in the vehicle
GPT	a method for the division of the areas in the data devices (to be used for mass storage resources)
GSM	a telephone service of mobile communication
ID3 tag	an additional feature of a music file, which allows for the display of artist, title, album name, etc.
MAP	a Bluetooth ® - software profile for the exchange of text messages (SMS) between the device and a connected device
mp3	compressed audio format
MSC	a communication protocol for a USB device
MTP	a communication protocol for a data device
PI code	a program identification of the tuned radio station allows a group sort of radio stations
PIN	personal identification number
RDS	a system for the transmission of additional information for FM radio reception
Messages	a service for short text messages
SSP	the quick coupling method of a Bluetooth ® device
TP	Identification of a traffic information station
VIN	Vehicle identification number
wma	compressed audio format

Introductory information

Important notes

Introduction

This chapter contains information on the following subjects:

Declaration of Conformity 4
Component protection 4

Consequently, this vehicle does **not need to contain all of the equipment components** described in these operating instructions.

The level of equipment of your vehicle refers to your purchase contract of the vehicle. For more information, please contact your local ŠKODA retailer.

The **illustrations** in this Owner's Manual may have differences from your vehicle; they are only intended for general information.

! WARNING

- Concentrate fully at all times on your driving! As the driver you are fully responsible for the operation of your vehicle.
- Only use the device in a way that ensures that you are in full control of your vehicle in every traffic situation - there is a risk of accident!
- Adjust the volume to ensure that acoustic signals from outside the vehicle, e.g. sirens from emerging vehicles instructing you to give way to, such as the police, ambulance and fire brigade, can be heard at all times.
- High volumes can cause hearing damage.

Declaration of Conformity

Read and observe ! on page 4 first.

ŠKODA AUTO a.s. hereby declares that the ŠKODA Infotainment systems meet the basic requirements and additional provisions of Directive 1999/5/EC with reference to radio equipment and telecommunications devices.

ŠKODA AUTO a.s. hereby declares that the "connection and the use of this communication device is granted by the Nigerian Communications Commission."

Component protection

Read and observe ! on page 4 first.

Some electronic control units are factory-equipped with component protection.

Component protection serves as a protection mechanism for the following:

› for the impairment of factory- or garage-fitted control units after installation in another vehicle (for example, after a theft);
› for the impairment of components operated outside of the vehicle.
› for the possibility of a legitimate installation or change of control units for repairs at a ŠKODA[1)] specialist garage.

When component protection is enabled, the following message appears on the unit display **Component theft protection: the infotainment system is not fully available at present. Please switch on the ignition.**

If the component protection does not activate by switching on the ignition, please contact a ŠKODA specialist garage.

Equipment overview

Introduction

This chapter contains information on the following subjects:

Description of the device 5
Touch screen 5
Switching the unit on/off 5
Unit menus 6
Adjust the volume and switch on 6

This chapter covers the device, switching it on and off, and the volume control.

[1)] Terms used » *manual*, chapter *explanations*.

Description of the device

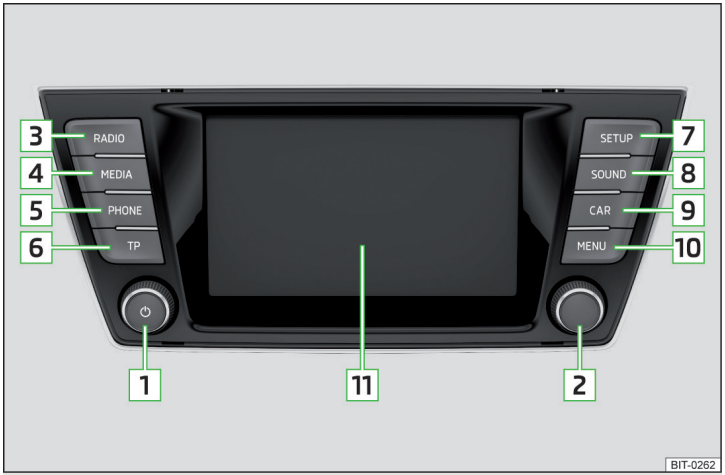


Fig. 1 **Description of the device**

Description of the device

1 ⏻ - Left control knob for switching the device on and off; volume adjustment
2 Right control knob for calls and confirmations
3 RADIO - Menu **Radio** » page 16
4 MEDIA - Menu **Media** » page 22
5 Depending on equipment fitted
› MUTE - Mute
› PHONE - Menu **Telephone** » page 30
6 TP - Switches traffic programme on/off » page 19
7 SETUP - Unit settings » page 12
8 SOUND - Sound settings » page 12
9 CAR - Vehicle settings » page 49
10 MENU - Displays the unit menus » page 6
11 Touch screen » page 7

Touch screen

The unit is equipped with a so-called touch screen 11 » Fig. 1 *on page 5*which can only be operated by the touch of a finger.

! CAUTION

- The screen can be operated by a slight touch of a finger. Exert any pressure on the screen - there is a risk of damaging the screen!
- Do not use any objects to actuate the screen - there is a risk of damaging the screen!
- Do not use any solvents such as benzene or turpentine for cleaning - there is a risk of damaging the screen surface!
- Use a soft cloth and, if necessary, methylated spirits, to remove fingerprints from the screen. When doing so, ensure that you do not cause damage to other parts of the interior.
- It is not possible to operate the screen with your fingernails or while wearing gloves.

i Note

- To protect the screen, you can use a suitable screen protector for touchpads that does not affect its functionality.
- The brightness of the screen is adjusted automatically depending on the brightness of the interior lighting. The automatic setting can be adjusted manually » page 13.

Switching the unit on/off

Switching the unit on and off manually
› Press ⏻ to switch the device on or off.

Turn on device automatically
If the device was not turned switched off using the ⏻ button before the ignition was turned off, this will automatically switch on after the ignition has been switched on.

Switching off the unit automatically
If the vehicle key is pulled out of the ignition lock while the unit is switched on, the device will switch off automatically.

If the vehicle is fitted with the starter button, the device will switch off automatically after the engine is switched off and the door is opened.

When the ignition is switched off, the device switches off automatically after approx. half an hour (discharge protection of the vehicle battery).

The device can be turned off automatically under certain circumstances due to the protection against the vehicle battery discharged or the device protection.

The device informs of this via a text message on the device display.

› **Warning: 12V battery low. Please start the engine or turn off the Infotainment system.** - The vehicle battery is low, start the engine or turn the unit off.
› **12V battery almost empty. Infotainment system is being switched off.** - The vehicle battery is discharged, the device switches itself off.
› **Operating temperature not maintained. Infotainment system is being switched off.** - The device temperature is too low or too high, the device switches itself off.

Note

When the device is switched on, the operating mode that were active before switching off will be restored.

Unit menus

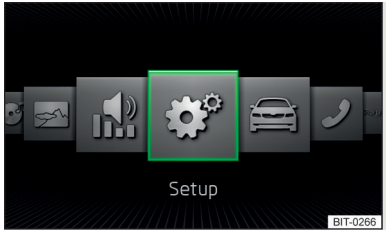


Fig. 2
Unit menus

Call up the main menu

› Press the MENU button and the display shows the equipment menu » Fig. 2.

Function keys in the MENU

Radio - Menu **Radio** » page 16
Media - Menu **Media** » page 22
Pictures - Menu **Pictures** » page 29
Sound - Sound settings » page 12
Setup - Unit settings » page 12
Vehicle - Vehicle system settings » page 49
Telephone - Menu **Telephone** » page 30
MirrorLink ™ - Menu MirrorLink ™ » page 45

Adjust the volume and switch on

Increase volume

› Turn the control to the right.

Decrease volume

› Turn the control to the left.

Muting

› Press the key MUTE or turn the control to the left and set the volume to 0.

The symbol appears in the display screen when the sound is muted.

If at the time of muting a sound is made in the menu **Media**, then the playback is interrupted (pause)[1].

CAUTION

- High volumes can cause sound resonance in the vehicle.
- The car speakers may be damaged if the volume is set too loud.

Note

The change in volume is displayed on the screen.

[1] Does not apply for AUX.

Unit operation

Concerning the device screen operation

Introduction

This chapter contains information on the following subjects:

Operation 7
Alphanumeric with keyboard 8

This chapter covers the device operation and the operation of the touch screen and the input keyboards.

Operation

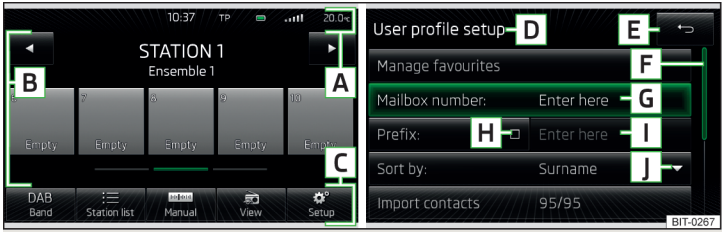


Fig. 3 **Screen area / screen display**

Description of the display

- A Status bar area
- B Display and operating range of the selected menu
- C Function key area of the selected menu
- D Identification of the current menu
- E Return to the higher-level menu
- F Scroll bar - Shows the position in the menu (touch the scroll bar to navigate the menu)
- G Currently selected function
- H Function with "checkbox" ☑
- I Function not available.
- J Open a submenu of the function with the "pop-up window" ▼

Function keys

Screen areas which confirm a function or a menu are called "**function keys**".

Function keys with a white background are active and selectable.

Function keys with a green background represent currently selectable functions or menus.

Function keys with a grey background are inactive and therefore not selectable.

Status line

In some menus a status bar located at the top of the screen shows the time and outdoor temperature along with other information.

Selecting menu/menu item/function

› Drag your finger over the screen in the required direction
› By turning the right control 2 » Fig. 1 *on page 5*.

Confirming menu/menu item/function

› Touch the function key with your finger
› By pressing the right menu control 2.

Returning to higher-level menu

› by pressing the function key ⮌.
› By pressing the relevant button next to the screen;
› By touching the screen outside of the "pop-up window" with your finger.

Open submenu of a function

› by pressing the function key ▼ a "pop-up window" with a function menu opens.

Switching function on/off with "checkbox"

› ☑ or ◉ - Function is switched on
› ☐ or O - Function is switched off

Set value

› by touching the function keys with the symbols ∨ ∧ < > **–** **+**.
› By touching or moving your finger over the scale.

Note

For some menus or menu items, the current setting is displayed, e.g. **Distance: Km ...** or **distance: ... mi**.

Alphanumeric with keyboard



Fig. 4 **QWERTY (QWERTZ) keyboard / ABC keyboard**

The alphanumeric keyboard is used to search for entries (e.g. telephone contacts) or for entry (e.g. renaming the Bluetooth ® Unit, writing an SMS etc.).

Description of the alphanumeric keyboard

A Input line
⮌ Return to the higher-level menu
.≡ Confirmation of selected entries
OK Confirmation of text entered into the entry line
⌫ Delete characters in the entry line
⇧ Toggle upper case to lower case and vice versa
🌐 Display the menu with letters the chosen language » page 14, *Additional keypad language settings*
123 Switch to the numeric and special characters
§&# Switch to special characters
ABC Switch to letters
␣ Enters a blank
< Move the cursor within the input line to the rear
> Move the cursor within the input line to the front

Look for
By pressing the keyboard function key, the character required appears in the entry line A » Fig. 4.

While entering characters a search of the most relevant entries takes place with characters already entered. Therefore, it is not always necessary to enter the entire entry name.

Do not forget to enter a space for terms made up of more than one word, such as Lorem Ipsum.

The entry such as a telephone contact to be searched for must be entered along with the special characters (diacritics).

In the function key .≡ the number of matching selected entries is displayed. A list of related items will be opened by pressing this button.

The numbers 1 - 99 indicate the quantity of corresponding entries. If more than 99 entries are found, then instead of a number the symbols are shown ✱✱ appears. If less than 5 entries were found, a list of the found entries opens automatically.

Enter
By pressing the keyboard function key, the character required appears in the entry line A » Fig. 4.

by pressing the function key OK the input operation is ended.

Operation through the MAXI DOT display

Introduction

This chapter contains information on the following subjects:

Operate with the control lever buttons 9
Operating the audio menu (radio/media) using the buttons / dials on the multifunction steering wheel 9
operation of the telephone menu via the buttons / dials on the multifunction steering wheel 11

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

Some of the device's menus are also displayed in the MAXI DOT display[1].

Depending on the equipment they can be operated using the buttons on the lever or the buttons / dials on the multifunction steering wheel.

[1] The display in the MAXI DOT is described in the » *Manual*, chapter *Information system*.

Operate with the control lever buttons

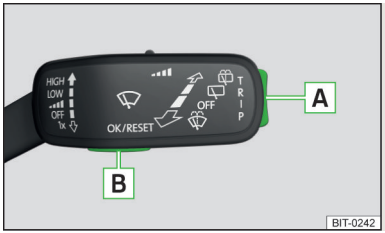


Fig. 5
Buttons on the control lever

The separate menus and menu items displayed in the MAXI DOT display can be operated as follows with the buttons on the control lever.

Functions of the buttons on the control lever

But-ton » Fig. 5	Action	Operation
A	Press and hold button	Display main menu
A	Briefly push up or down	switch between menu items and menus
B	Press briefly	Confirm menu item or menu

Operating the audio menu (radio/media) using the buttons / dials on the multifunction steering wheel

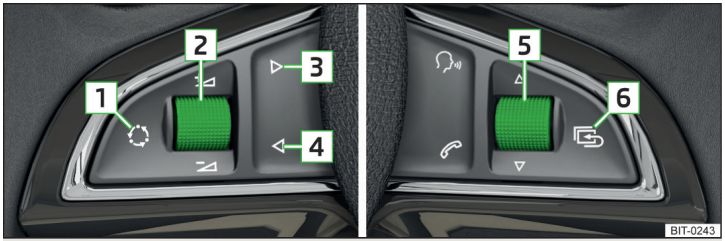


Fig. 6 **Multifunction steering wheel - Audio menu**

› In the main menu of the MAXI DOT display select the menu item **Audio**.

The information displayed in MAXI DOT display

- **Radio** - Menu **Radio**
  - current radio station frequency band.
  - Name of the currently playing channel (if less than 5 are receivable).
  - List of receivable radio stations with choice (if more than 5 are receivable).
  - TP traffic announcements.
- **Media** - Menu **Media**
  - Title.

Buttons and wheels of the audio menu - Radio/Media

Button/ wheel » Fig. 6	Action	Operation	
		Radio	Media
1	Press briefly	Change source (change frequency bands and connected audio sources)	
1	Press and hold button	Switch between the Radio and Media menus and open the last context status (e.g. the last radio station or track to be played)	
2	Press briefly	Switch off/on sound	Start/stop playback
2	Turn upwards	Increase volume	
2	Turn downwards	Decrease volume	

Button/ wheel » Fig. 6	Action	Operation	
		Radio	Media
3	Press briefly	Skip to next saved radio channel Stop traffic report	Skip to next track[a]
3	Hold and release	Change within the frequency range in desired direction; after releasing the button, the search for the next station is started Stop traffic report	Fast forward[a]
4	Press briefly	Switch to previous saved channel Stop traffic report	Go to the previous track when pressed within 3 s from the change of track, and to the beginning of the track when pressed 3 s after track change[a]
4	Hold and release	Change within the frequency range in desired direction; after releasing the button, the search for the next station is started Stop traffic report	Fast rewind
5	Press briefly	Stop traffic report	without function
5	Turn upwards	Display list of available stations Scroll upwards	Go to the previous track when pressed within 3 s from the change of track, and to the beginning of the track when pressed 3 s after track change[a]
5	Turn downwards	Display list of available stations Scroll downwards	Skip to next track[a]
6	Press briefly	Return to previous level in the menu	
6	Press and hold button	Return to the main menu of the MAXI DOT display	

[a] Does not apply for AUX.

Note

The button with the symbol for voice control is not supported by the device.

operation of the telephone menu via the buttons / dials on the multifunction steering wheel

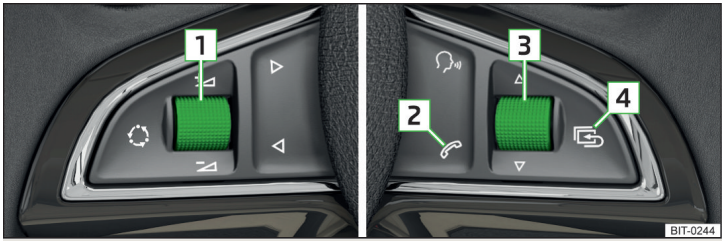


Fig. 7 **Multifunction steering wheel - telephone menu**

› In the main menu of the MAXI DOT display select the menu item **Telephone**

Buttons and wheels of the telephone menu

Button/ wheel » Fig. 7	Action	Operation
1	Press briefly	Switch off/on sound
1	Turn upwards	Increase volume
1	Turn downwards	Decrease volume
2	Press briefly	Accept call, end call, entry in the menu **Telephone**, call list, call the dialled contact
2	Press and hold button	Reject call, redial last call
3	Turn up/down	Call list, previous/next menu item
3	Press briefly	Confirm selected menu item
4	Press briefly	Return to previous level in the menu
4	Press and hold button	Return to the main menu of the MAXI DOT display

Telephone call function in the MAXI DOT display
Depending on the context you can select the following functions in the **Telephone** menu.

Incoming call

Answer - Accepting a call
Reject - Rejecting a call
Ignore - Muting the ring tone

Outgoing call

Cancel - Ending the call

Current call

Hang up - Ending the conversation
Mic. off - Switch off the microphone
Mic. on - Switching on the microphone
Private - Speakerphone off (call playback by means of the telephone)
Hands-free - Switch on speakerphone (voice playback means of the device)

Symbols in MAXI DOT display

Symbol	Meaning
	Charge status of the telephone battery[a)]
	Signal strength[a)]
	A telephone is connected to the unit
	Missed calls (if there are several missed calls, the number of calls is shown next to the symbol)
▷	Roaming (in front of the mobile network provider name)[a)]

a) This function is only supported by some telephones.

Call list
In the menu **Telephone** only the call list can be displayed and used [1)].

If the call list includes no entries, the following message appears in the MAXI DOT display **No entries available.**

The following symbols are displayed next to each entry in the call list.

1) This function is only supported by some telephones.

Symbol	Meaning
	Incoming call
	Outgoing call
	Missed call

Note

The button with the symbol for voice control is not supported by the device.

Device Settings

Menu Sound

Introduction

This chapter contains information on the following subjects:

Sound settings 12

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

This chapter covers the sound setting of the device and the volume setting of the connected equipment.

Sound settings

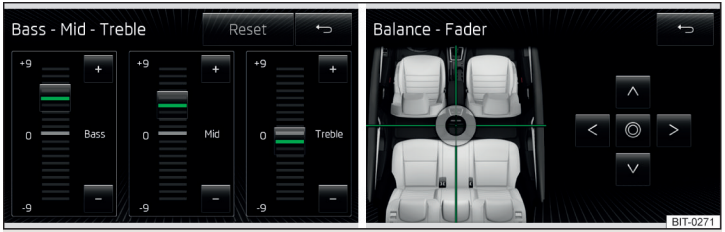


Fig. 8 **Adjustment of the equalizer / adjust the sound centre**

› Press the SOUND button.

or

› In the **radio** or **media** menu, press the function key → **Sound**.

- **Volume** - Volume settings
  - **Traffic reports** - Adjustment of traffic announcements volume (TP)
  - **Maximum switch-on volume** - Sets the maximum volume after switching on the device
  - **Speed-dependent volume adjustment** - Speed-dependent volume increase
  - **AUX volume** - Sets the volume for the device connected through AUX
    - **Quiet** - Low volume
    - **Medium** - Medium volume
    - **Loud** - High volume

- **iPod volume** - Volume control of the connected Apple device connected via USB
  - **Quiet** - Low volume
  - **Medium** - Medium volume
  - **Loud** - High volume
- **Bluetooth audio** - Volume settings of the Bluetooth ® Audio profile connected device
  - **Quiet** - Low volume
  - **Medium** - Medium volume
  - **Loud** - High volume
- **Lowering entertainment** - Lowers the audio volume (e.g. radio volume) with activated parking aid » page 50
  - **Off** - switches off
  - **Weak** - weak reduction
  - **Medium** - medium input sensitivity
  - **Strong** - strong reduction
- **Bass - Mid - Treble** - Equalizer settings (bass, mid and treble)
  - **Return** - Basic setting of the sound centre
- **Balance - Fader** - Sets the balance between left and right, front and rear
- **ŠKODA Surround** - Switching the surround sound
- **Virtual Subwoofer**- Switching the virtual subwoofer (deepening of bass effects)
- **Confirmation tone** - Switch on/off confirmation tone when touching the screen

Menu Setup

Introduction

This chapter contains information on the following subjects:

Main Menu 13
Screen settings 13
Time and date settings 14
Keyboard settings 14
Additional keypad language settings 14
Unit settings 14
Data transmission of mobile devices 14
Safe removal of the audio source 15
Restore factory settings 15
Bluetooth® settings 15
System Information 15

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

This chapter covers the device settings.

Main Menu

The basic parameters for the unit can be set from the Main menu.

Call up the main menu

› Press the SETUP button.

- **Screen** - Screen settings » page 13
- **Time and date** - Time and date settings » page 14
- **Language** - Set the unit language[1)]
- **Keypad:** - Keypad display for text entry » page 14
- **More keypad languages** - Enables you to enter characters other than those available for the selected language » page 14
- **Units** - Unit settings » page 14
- **Data transfer mobile devices** - Setting the data transmission to connected external devices » page 14
- **Remove safely** - safe removal of the connected audio source or data media » page 15
- **Factory settings** - Restore to factory settings » page 15
- **Bluetooth** - Settings for the Bluetooth® function » page 15
- **System information** - Displays system information » page 15
- **Copyright** - Information on licences and copyrights are only available in the English language

Screen settings

› Press the button SETUP → **Screen**.

[1)] The correct display of country-specific characters (e.g. ID3 tag information) cannot always be guaranteed.

- **Switch off screen (in 10 seconds)** - Activate/deactivate the display
- **Brightness:** - Adjusts the brightness of the screen
  - **Brightest** - brightest level
  - **Brighter** - brighter level
  - **Medium** - medium level
  - **Darker** - darker level
  - **Darkest** - darkest level
- **Confirmation tone** - Switch on/off confirmation tone when touching the screen
- **Show clock in standby mode** - Time and date displayed on the screen when the ignition is switched on and the unit is switched off

Time and date settings

› Press SETUP → **Time and date**.

- **Time:** - Time settings
- **Summer time** - Switches the summer time setting on/off
- **Time zone:** - Select the time zone
- **Time format:** - Set the time format
  - **12h**
  - **24h**
- **Date:** - Date settings
- **Date format:** - Set the date format
  - **DD.MM.YYYY** - Day - Month - Year
  - **YYYY-MM-DD** - Year - Month - Day
  - **MM-DD-YYYY** - Month - Day - Year

Keyboard settings

› Press the button SETUP → **Keyboard:**.

You can choose between two types of keyboard character arrangement » page 8, *Alphanumeric with keyboard*.

- **ABC** - Keyboard characters in alphabetical order
- **QWERTZ** - Keyboard characters in QWERTZ or QWERTY system

Additional keypad language settings

› Press the SETUP → **More keypad languages** button.

In this menu, the keyboard character arrangement for the chosen language can be selected, and with this the option for fast entry of the characters used in the selected language.

It is then possible to swap between the languages in the input screen showing a keyboard by pressing the function keys » page 8.

Unit settings

› Press the button SETUP → **Units**.

- **Distance:** - Distance units
  - **km** - Kilometres
  - **mi** - Miles
- **Speed:** - Speed units
  - **km/h** - Kilometres per hour
  - **mph** - Miles per hour
- **Temperature:** - Temperature units
  - **°C** - Degrees Celsius
  - **°F** - Degrees Fahrenheit
- **Volume:** - Volume units
  - **l** - Litres
  - **gal (US)** - Gallons (US)
  - **gal (UK)** - Gallons (UK)
- **Consumption:** - Consumption units
  - **l/100km** - Litres per 100 kilometres
  - **km/l** - Kilometres per litre
  - **mpg (US)** - Miles per gallon (US)
  - **mpg (UK)** - Miles per gallon (UK)
- **Pressure:** - Pressure units for tyre pressure
  - **kPa** - Kilopascal
  - **bar** - bar
  - **psi** - Pounds per square inch

Data transmission of mobile devices

› Press the key SETUP → **Data transfer mobile devices**.

The activated function enables transmission of vehicle data for applications in connected devices (e.g. MirrorLink ™ Applications).

- **Activate data transfer for apps**- Turning the data transfer on and off

Safe removal of the audio source

› Press the button SETUP → **Remove safely**.

- **SD card** - Safe removal of the SD storage card
- **USB** - Safe removal of the USB source

Restore factory settings

› Press the button SETUP → **Factory settings**.

- *Reset all settings and data* - menu to restore all settings
  - **Restore factory settings** - Reset all factory settings
- *Reset individual settings/data* - menu for the recovery of individual settings
  - **Sound** - Reset default settings for sound
  - **Radio** - Reset default settings for radio
  - **Vehicle** - Reset default settings for the vehicle systems
  - **Telephone** - Reset default settings for phone
  - **Media** - Reset default settings for media
  - **System** - Reset the system default settings
  - **MirrorLink** ™ - Reset settings on the MirrorLink ™ - function

Bluetooth® settings

› Press the button SETUP → **Bluetooth**.

- **Bluetooth** - Switch on/off Bluetooth® function
- **Visibility:** - Switch on/off the visibility of the Bluetooth® device for other devices
  - **Visible** - Visibility is always on
  - **Hidden** - Visibility is off
- **Name:** - Open the input screen with keyboard - Change the device name
- **Paired devices** - Display the list of paired Bluetooth® devices; connect or delete a paired device; delete the list of paired devices
  - **Delete all** - Delete all paired Bluetooth® devices
  - 🗑 - Delete the paired Bluetooth® device
- **Find devices** - Searches for available external devices with enabled Bluetooth® functions and activated visibility
- **Bluetooth audio (A2DP/AVRCP)** - Switch on/off the connection option for Bluetooth® profiles A2DP or AVRCP[1)]

System Information

› Press the button SETUP → **System information**.

- *Device part number: ...* - Part number of the unit
- *Hardware: ...* - Version of the hardware used
- *Software: ...* - Version of the software used
- *Media Codec: ...* - Media codec version
- **Update software** - the function key for the software update

The information about available software updates can be found on the ŠKODA Internet pages **www.infotainment.skoda-auto.com** .

[1)] A2DP or AVRCP are Bluetooth® profiles that support multimedia functions.

Radio

Operation

Introduction

This chapter contains information on the following subjects:

Main menu 16
Radio DAB text and images presentation 17
Select the frequency range 17
List of available stations 17
Search and select available stations 18
Save radio station 18
Station logos 19
TP Traffic programme 19

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

The device allows analogue radio reception of FM and AM frequency ranges as well as DAB digital radio reception.

CAUTION

For vehicles with window antennas do not stick foil or metal coated stickers to the window as this can lead to interference.

Note

- Car parks, tunnels, tall buildings or mountains can interfere with the radio signal even causing it to fail completely.
- In countries where the RDS function is not supported, we recommend turning off the AF and RDS function.

Main menu

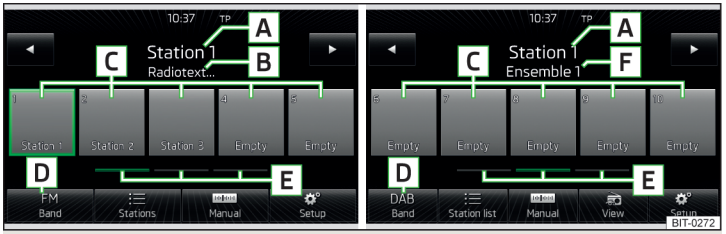


Fig. 9 **Main menu FM and AM / DAB main menu**

Read and observe ! on page 16 first.

Call up the main menu

› Press the RADIO button.

Main Menu - Information and function keys » Fig. 9

- A The selected radio station (frequency or identifier)
- B Radio text
- C Station keys
- D Choice of radio range (FM / AM / DAB)
- E Choice of device storage group
- F Name of the DAB group
- ◁ ▷ Changing stations in the list of available stations or the station buttons depending of the menu **Arrow buttons:** » page 20, *Settings* ')
- List of available stations » page 17
- Manual / semi-automatic station search » page 18
- Radio text display and DAB images presentation » page 17
- Menu Settings **Radio** » page 20

Information symbols in the display

Symbol	Meaning
TP	Traffic information station
no TP	Traffic information signals are not available or the selected station is not a traffic information station
RDS OFF	RDS function is switched off (FM)

Symbol	Meaning
AF OFF	AF Alternative frequency is switched off (FM)
	Signal is not available (DAB)

If a continuous change of a displayed station name (dynamic text) occurs, then it is possible to fix the current text by pressing on the screen for a while in the station range A » Fig. 9. The station name is displayed again completely by pressing again longer in the area of the station name.

Radio DAB text and images presentation

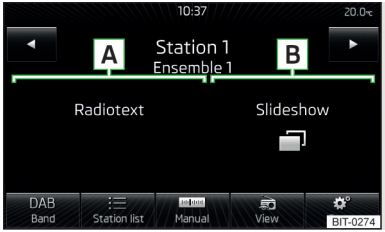


Fig. 10
Station information

Read and observe ! on page 16 first.

Radio reception DAB allows multiple stations to be transmitted in a single frequency in the form of an ensemble or group. It also allows for the transmission of additional data and information (e.g. messages, sport, weather, warnings, etc.).

The display options for this information can be adjusted on the screen in the following menu.

› Press the function key in the **Radio** menu **DAB** .

- **Preset list** - Displaying the DAB main menu » Fig. 9 *on page 16*
- **Station info.** - Display information on the DAB stations, by accompanying (Radio text) A and pictures presentation B
- **Radio text** - Displays one radio text
- **Slideshow** - Only a representation of images presentation (the presentation goes into full screen display; does not apply if the station is broadcasting just a logo)

Note

- If the screen is touched in the area of the radio text A, only this text is displayed in the full screen display.
- If the screen is touched in the area of thepictures presentation B, only this presentation is displayed in full-screen mode (does not apply if the station is broadcasting just a logo).

Select the frequency range

Read and observe ! on page 16 first.

› Press the button RADIO repeatedly.

or

› Press the function button D » Fig. 9 *on page 16*, and select the desired range.

List of available stations



Fig. 11 **Example, the list of available stations: FM / DAB**

Read and observe ! on page 16 first.

The station with sufficient signal strength are shown in the **list of available stations.**

Display list of available stations

› In the **Radio** menu, press the function key .

List of available stations - information symbols and function keys

Symbol	Meaning
☆	Radio station, which is stored under a preset button
⊙	Current radio station
TP	Traffic information station
Pop (e.g.)	Type of program being broadcast (FM)
R2 (e.g.)	Type the regional broadcast (FM)
	Signal reception is not available (DAB)
	Signal reception is not safe (DAB)
	Radio stations with picture representation (so called slideshow) (DAB)

Update station list
In the FM band the station list is continually updated automatically.

In FM and DAB bands update is performed manually by pressing the function key ↻.

Sort the stations in the station list (FM)
› **Alphabet** - alphabetical order according to station name
› **Group** - Sort according to the program identification of programs being broadcast (PI code of the radio station)

Search and select available stations

Read and observe ! on page 16 first.

Select station from the list of available stations
The device will automatically search for available radio stations in the background, which can be selected immediately after turning on the power.

A radio station from the list of available stations can be selected in one of two ways.

› In the **Radio** menu, press the function key ◁ or ▷ press the top of the screen.

There will be a change to the previous or next channel.

or

› In the **Radio** menu, press the function key ☰. The list of available stations is opened » page 17.
› Select the desired station.

Manually selecting a radio station
› In the **Radio** menu, press the function key .

It current frequency range appears in the scale.

Set the desired station in one of the following ways.

› Press the function key ◁ or ▷ press at the top of the screen (change to the next available station).
› Press the function key < or > or the bottom of the screen and set the desired value of the frequency range.
› turn the right control 2 » Fig. 1 *on page 5* (movement on the scale of the frequency range).
› Move the slider on the scale of the frequency range by touching with the finger.

Close the menu for manual searching by pressing the right control 2 » Fig. 1 *on page 5*.

Station scan
› Press the function key ◁ or ▷ hold.

A search commences in the selected direction and stops at the next station with sufficient signal strength.

Search available stations (Scan)
› Push the right control 2 » Fig. 1 *on page 5*.

or

› In the **Radio** menu, press the function key ⚙ → **Scan**.

The search is started.

This function plays all the receivable stations in succession for a few seconds each.

By pressing any function button on the device screen the system will stop searching.

The current station is played.

Save radio station

Read and observe ! on page 16 first.

For each broadcasting range (FM / AM / DAB) there are 15 preset buttons to store the radio stations. These preset buttons are divided into three memory groups.

A radio station can be stored in the device memory in one of the following ways.

Save station from the menu Radio
› In the menu **Radio** press and hold the desired station button C » Fig. 9 *on page 16* until you hear an acoustic signal.

If a station was already stored in the desired position it is replaced with the currently selected station.

Save station from the station list
› In the list of available stations » page 17 press the function key of the desired station longer.

A list of the station keys C is shown as well as a list of the functions keys for the storage groups E » Fig. 9 *on page 16*.

› Select a storage group.
› Press the station button.

The station is stored under the selected station button.

Station logos

Read and observe ! on page 16 first.

With the present buttons C » Fig. 9 *on page 16* logos (images) can be linked or removed to/from the radio stations.

Store station logos automatically (FM / DAB)
› **Before you store the** radio station to a station button function key press in the **Radio** menu the function key ⚙ → **Advanced settings**.
› Activate the menu item **Auto-save station logos** » page 20, *Advanced Settings (FM)* and » page 20, *Advanced setup (DAB)* .

When you save the station to a station button, the station is assigned a logo from the device memory if the logo is available in the memory.

Assign channel logo manually
A logo can be assigned or removed manually from the **previously stored** stations.

› Press the function key ⚙ → **Station logos**.

A menu with preset buttons for radio stations is displayed.

› Press the preset button for the station, which a logo is to be assigned to.

A menu of media (CD, SD card, USB) is displayed.

› In the relevant media select the image you want to have.

By selection of the image it is assigned to the relevant station button.

Remove channel logo manually
› Press the function key ⚙ → **Station logos**.

A menu with preset buttons for radio stations is displayed.

› Press the preset button for the station, which a logo is to be removed from.

The logo is removed from the station button.

Note
- The following image formats are supported: jpg, gif, png, bmp.
- We recommend a resolution of up to 500 x 500 pixels.
- The information about radio station updates can be found on the ŠKODA Internet pages **www.infotainment.skoda-auto.com** .

TP Traffic programme

Read and observe ! on page 16 first.

The function allows the reception of traffic information.

Switching the traffic information station on and off manually
› Press the TP button.

or

› In the **Radio** menu, press the function key ⚙ .
› Enable or disable the menu item **Traffic program (TP)**.

Current traffic reports
During a traffic announcement, the following menu is displayed.

› **Cancel** - interruption of the current traffic report. The TP function remains activated.
› **Deactivate** - Interrupt the current traffic report and turn off TP function.

Note
- Should this radio station not transmit traffic reports or the signal is not available, then the device automatically searches in the background for another TP station.
- During playback in menu **Media** or a radio station in the AM range, traffic news is received from the previously selected FM radio station.

Settings

Introduction

This chapter contains information on the following subjects:

Settings 20
Advanced Settings (FM) 20
Advanced setup (DAB) 20

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

The basic setting of the **Radio** menu functions is the same for all broadcast ranges.

The **Advanced setup** menu is different for FM and DAB. The AM broadcast area does not have this menu.

Settings

› In the **Radio** menu, press the function key .

- **Sound** - Sound settings » page 12, *Sound settings*
- **Scan** - Auto-play all stations in the current frequency band, each station for around five seconds.
- **Arrow buttons:** - Set the station select function in the Radio menu
  - **Preset list** - Change between stations stored under the preset buttons
  - **Station list** - Change between all receivable radio stations of the selected frequency band
- **Traffic program (TP)** - Switches traffic programme on/off
- **Delete presets** - Deletes the preset buttons
  - - Delete a particular radio station
  - **Delete all** - Delete all stored stations
- **Station logos** - manual assignment /removal of station logos » page 19, *Station logos*
- **Radio text** - Switching the text display radio (FM and DAB) on and off
- **Advanced setup** - another setting that is different depending on the selected broadcasting range(FM and DAB)

Advanced Settings (FM)

› Select the FM band in the **Radio** menu, and press the function key → **Advanced settings**.

- **Alternative frequency (AF)** - Switching on/off the search for alternative frequencies of the station currently being heard, when you turn off **AF off** is displayed on the device screen
- **Radio Data System (RDS)** - Switches on/off the RDS function
- **RDS Regional:** - Switch on/off the automatic tracking of related regional stations
  - **Fixed** - Maintains the selected regional station continuously. When the signal is lost, another regional station must be set manually.
  - **Automatic** - Auto-selects the station with the best reception at the moment. If you lose reception the region, the unit will automatically set another available region.
- **Auto-save station logos**- Automatic storage of the station logos » page 19, *Station logos*

Advanced setup (DAB)

› Select the DAB band in the **Radio** menu, and press the function key → **Advanced settings**.

- **Auto-save station logos** - Automatic association of the logo with station detected » page 19
- **DAB traffic announcements** - Switch on/off DAB announcements
- **Other DAB messages** - Switch on/off other announcements (e.g., warnings, regional weather, sports reports, financial news)
- **DAB - DAB station tracking** - Switch on/off automatic DAB station tracking in other station groups
- **Automatic DAB - FM switching** - Switch on/off auto-switching from DAB to the FM frequency band if the DAB signal is lost
- **L-Band** - Switch on/off the automatic DAB station search in L-band

DAB station tracking
If a DAB station is a member of several sender groups, when the signal is poor, the same station is searched in a different sender group.

Auto-change DAB -FM
With bad DAB reception the device tries to find an FM transmitter.

› The station name is followed by (**FM**) while the station is being received on the FM band. The (**FM**) marker disappears when the relevant DAB station can be received again.
› If a DAB station is also not available in the FM band due to poor reception, the device will be switched to mute.

L-band
For the DAB radio reception in different countries, different frequency ranges are used. In some countries the DAB radio reception is only possible in the so called L-band.

If no L-band DAB radio reception is possible in the country then we recommend to leave this menu item turned off. The channel scan is therefore faster.

Media

Operation

Introduction

This chapter contains information on the following subjects:

Main menu ____ 22
Playback ____ 22
Folder / track list - Browser ____ 23
Multimedia database ____ 23
Settings ____ 24

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

The device allows you to play audio files from different media and connected devices (hereinafter referred to only as "audio sources)" » page 24.

Main menu

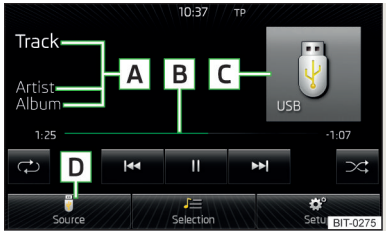


Fig. 12
Media: Main menu

Call up the main menu
› Press the MEDIA button.

Main Menu - Information and function keys

A Title or possibly artist name, album name
B Playback timeline with a slider [1] (shows details of the playing time and remaining playing time of the track)
C Selected audio source / display of the album image
D Select the audio source » page 25
Folder / title list [2] » page 23 / Multimedia Database [2] » page 23
Menu settings **Media** » page 24

Description of function keys of the menu **Media** for playback » page 22, *Playback*.

Note

- The name of the artist, the album and the title of the file being played are displayed on the screen if the information is stored on the audio source as an ID3 tag. If no ID3 tag is available, only the file name is displayed.
- The remaining playback time indicated does not correspond to the actual remaining playback time for titles with variable bitrates.

Playback

The device plays the titles in alphabetical order.

Function keys for playback: » Fig. 12 *on page 22*

Button	Action	Operation
▶/II	Press	Play / Pause
⏮	Press within 3 seconds after the start of the track playback.	Play the previous title
	Press after about 3 seconds after the start of the title playback.	Plays the current track from the start
	Press and hold button	Fast-reverse within the title
⏭	Press	Play the next title
	Press and hold button	Fast-forward within the title
↻	Press	Switch on and off the repeat title playback

[1] The display playback time axis is not supported by some audio sources.
[2] For some connected audio sources, the function key is inactive.

Button	Action	Operation
	Press	Switch on/off the repeat title playback
	Press	Switch on and off the repeat title playback from the current album or folder

The movement within the track is possible by touching the timeline [1] B» Fig. 12 *on page 22*.

Changing to the previous or next track is possible by touching and moving the finger to the left or right of the screen area A» Fig. 12 *on page 22*.

Note

Some function keys for playback may not be available.

Folder / track list - Browser

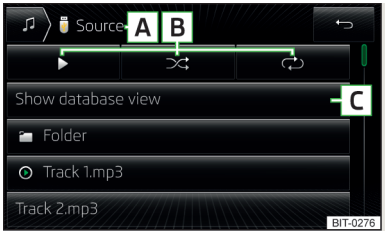


Fig. 13
Folder / Title list

The content of an audio source is displayed in alphabetical order in the folder / track list.

The device allows you to browse the folder / track list without changing the playing track. For some audio sources the display of the folder / track list is not available.

See a list

› Press the function key in the menu **Media** .

The folder / track list is displayed (not for connected Apple devices).

Folders and title lists - information and function keys » Fig. 13

- A Name of the selected audio source / the selected folder
- B Playback Options[2] » table *on page 22*
- C Display the multimedia database[3] » page 23
- Folder
- Playlist
- Title playback
- Stop the title playback

Appears on the title icon , then this cannot be played. By pressing the function key, the cause is displayed (e.g., DRM protection, unsupported format, etc.).

In the area A the display shows the selected audio source, and possibly the audio source folder. Movement within the folder is done by pressing the function key for the folder.

By pressing one of the function keys for playback B the playback starts and at the same time the menu **Media** » Fig. 13 is displayed.

Note

- In the folders and title lists a directory max. of 1000 entries is displayed depending on the date of creation. The entries are arranged alphabetically.
- The scanning speed of the folder / track list depends on the connection speed and volume of data.

Multimedia database

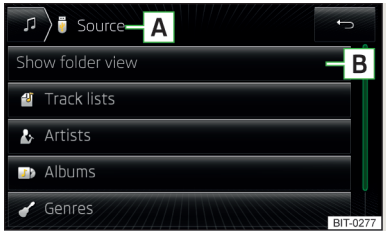


Fig. 14
Multimedia database

[1] The display playback time axis is not supported by some audio sources.
[2] For some audio sources, the function keys are not available.
[3] The function is only available for the display of the entire source content and only for some audio sources.

In the multimedia database the title properties are sorted according to categories.

The display of the multimedia database is only available for some audio sources.

A connected Apple device displays only the multimedia database.

Viewing multimedia database

› Press the function key in the menu **Media** ♪≡ .

If the display of the folder / track list is not supported by the device, then the multimedia database is displayed.

Categories of Multimedia Database - information and function keys » Fig. 14

A Name of the selected audio source / the selected category

B Display of folder / track list » page 23(the function is only available for the display of the entire source content and only for some audio sources)

Track lists - Sorted by the track title

Artists - Sorted by artist's name

Albums - Sorted by album name

Tracks - Sorted by the track title

Podcasts - Sorted by the Podcast names

Genres - Sorted by the genre type

Composers - Sorted by the composer names

Audiobooks - Sorted by the audiobook names

The display icons for the categories of multimedia database is not supported by some audio sources. Only the name of the category is displayed.

For playback the category and then the title is selected.

The movement within the categories is done by pressing one of the function keys in the range A.

Settings

› Press the function key in the menu **Media** ⚙ .

- **Sound** - Sound settings » page 12, *Sound settings*
- **Mix / repeat including subfolders** - Switching the title display **including subdirectory**
- **Bluetooth** - Settings for the Bluetooth® function » page 15
- **Remove safely** - safe removal of the audio source
  - **SD card** - Removal of the SD storage card
  - **USB** - Removal of the USB audio source
- **Traffic program (TP)** - Switches traffic programme on/off
- **External AUX device** - Enables / disables the AUX input

Audio sources

Introduction

This chapter contains information on the following subjects:

Select audio source 25
Bluetooth ® Player 25
SD memory card 25
USB input 26
AUX - input 27
Supported audio source and file formats 27

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

The device allows you to play audio files in various formats and to connect different source types » page 27.

For an audio source with a memory split into several areas, only the memory areas of the supported formats can be read » tab. *Supported audio sources on page 27*.

WARNING

- Never place audio sources close to the airbags. They could be thrown into the passenger compartment when the airbags are deployed, injuring the occupants.
- Never place audio sources on the dash panel, in your hand or on your knees. They could be thrown into the passenger compartment during sudden driving manoeuvres, thereby injuring the occupants.
- Always route the connection cable of the audio source such that is does not restrict you when driving.

CAUTION

Do not store any important data on the connected external sources. ŠKODA assumes no responsibility for lost or damaged files or connected audio sources.

Note

See the owner's manual of the specific manufacturer for operating the external audio source.

Select audio source



Fig. 15 **Select audio source**

Read and observe ! and ! on page 24 first.

Selection of the audio source can be performed in the following ways.

› Repeatedly press the key MEDIA the display will change between available audio sources.

› In the menu **Media** press the function key 1 » Fig. 15- A and select the desired audio source.

› In the folder / track list » page 23 and in the multimedia database » page 23 press the function key ♫ » Fig. 15 - B and select the desired audio source.

Menu for the audio source

- **SD card** - inserted SD memory card » page 25
- **USB** - connected to the USB input audio source » page 26
- **BT audio** - coupled Bluetooth® player » page 25
- **AUX** - Connected to the AUX input audio source » page 27

By pressing a function key with the audio source name the playback of titles available starts.

The unit only switches between connected audio sources with playable content.

The unit will play the contents of the connected audio source according to the alphabetically sequenced directory and file name.

If the main and the additional telephones » page 32, *Main / additional phone* are connected to the device the audio source appears after selection **BT Audio** a menu for selecting the Bluetooth ® Player.

Bluetooth ® Player

Read and observe ! and ! on page 24 first.

The unit allows audio files of a connected Bluetooth ® player to play using the A2DP and AVRCP audio profile.

› For connecting follow the same instructions as for pairing the device with a telephone » page 34.

If an Apple device is connected as a Bluetooth ® player, and this is connected to the USB input, then the Bluetooth ® connection is dropped.

The following warning message appears in the device screen **Bluetooth-Audio (A2DP) ... Connection cancelled.**

Note

- We recommend setting the maximum output level of the Bluetooth ® Player» page 12, *Sound settings*.
- Some operator options via the device may not be supported and are dependent on the Bluetooth ® player being used.

SD memory card



Fig. 16
SD memory card slot

Read and observe ! and ! on page 24 first.

The SD memory card slot is located in the glove box on the front passenger side » Fig. 16.

Inserting an SD memory card

› Push the SD memory card into the available slot with the cut edge downwards until it "locks into place".

The play function will start automatically. The playlists are not played automatically and must be manually started from the folders and title lists.

Removing an SD memory card

› Press the button SETUP → **Remove safely SD card**.
› Press the inserted SD memory card. The SD memory card "jumps" into the eject position.

After popping out the SD memory card, playback will start from the last played audio source. If this source is not available, the device switches to the **Radio** menu.

Unreadable SD memory card

If there are no readable files on the SD memory card nothing will play.

Due to differing quality requirements from different card manufacturers, it is not always possible to guarantee the playback from SD memory cards.

It may not be possible to play some or all files on the SD memory card, or possibly their playback may be limited.

! CAUTION

Use only SD memory cards with a standard size. When using smaller SD cards with the adapter the SD memory card can fall out of the adapter while driving due to vehicle vibrations.

USB input



Fig. 17
USB and AUX inputs

Read and observe ! and ! on page 24 first.

The USB input is above the storage compartment in the front center console and is identified with the symbol ⇠ » Fig. 17.

The USB input audio source can be connected directly or via a connecting cable.

Some audio sources connected to the USB input **can** be operated from this device[1].

Connect the USB audio source

› Plug the USB audio source into the corresponding well.

The play function will start automatically. The playlists are not played automatically and must be manually started from the folders and title lists.

If an Apple device is connected as a Bluetooth ® player, and this is connected to the USB input, then the Bluetooth ® connection is dropped.

The following warning message appears in the device screen **Bluetooth-Audio (A2DP) ... Connection cancelled.**

Separate USB audio source

› Press the button ⚙ → **Remove safely** → **USB**.
› Disconnect the USB audio source.

After disconnecting the USB audio source, playback will start from the last played audio source. If this source is not available, the device switches to the **Radio** menu.

Charge USB audio source

With the ignition on after connecting the USB audio source, the charging process is automatically started (applies for audio sources where charging via the USB connector is possible).

The charging efficiency can be different compared to the charging from the usual mains power supply. Connected audio sources can be supplied / loaded with a current of max. 1.5 A.

Some connected audio sources may not be recognised and cannot be charged.

The charging of the connected audio source is automatically stopped after switching off the ignition.

[1] Some operating options from an audio source may not be supported.

CAUTION

- USB extension cords, or reducers may impair the function of the connected audio source.
- A video playback is not supported.

Note

- When operating together with the connection of the audio source, the respective operating instructions are to be observed.
- We recommend that you use extension cords from ŠKODA Original Accessories.

AUX - input

Read and observe and on page 24 first.

The AUX input is above the storage compartment in the front center console and is identified with the **AUX** » Fig. 17 *on page 26*.

An audio source connected to the AUX input **cannot** be operated from this unit.

After connecting the AUX audio source, the source must be selected.

Connecting AUX audio sources

› Insert the plug of the audio source in the corresponding well.
› Select the AUX audio source » page 25, *Select audio source*.
› Start playback on the connected audio source.

Disconnect AUX audio source

› Disconnect the connector of the audio source.

After disconnecting the AUX audio source is no automatic change to another audio source takes place.

CAUTION

- The AUX input must only be used for audio devices!
- If an external audio source is connected to the AUX input, which is equipped with an adapter for external power supply, the sound will be impaired. This depends on the quality of the adapter which is used.

Note

- The standard 3.5 mm stereo jack plug is used for the AUX input. If the external devices do not have this jack plug, you must use an adapter.
- The AUX input can be activated / deactivated » page 24, *Settings*.
- The volume can be adjusted by setting the input sensitivity of the connected AUX audio source » page 12, *Sound settings*.
- We recommend that you use extension cords from ŠKODA Original Accessories.

Supported audio source and file formats

Read and observe and on page 24 first.

Supported audio sources

Source	Type	Specification	File system
SD memory card	Standard size	SD, SDHC, SDXC	FAT16; VFAT; FAT32; exFAT NTFS
USB devices	USB stick; HDD (without any special software) MTP player (with the Android operating system and Windows)	USB 1.x; 2.x and 3.x or higher with support of USB 2.x	
Bluetooth ®-Player	-	Bluetooth protocolsA2DPand AVRCP (1.0 - 1.4)	-
Other sources	Portable player (e.g. iPod®, iPad®, iPhone®)		

Supported file formats

<table>
<tr><th>Codec type (File formats)</th><th>File suffix</th><th>Max bit rate</th><th>Maximum sampling rate</th><th>Multi-channel</th><th>Playlists</th></tr>
<tr><td>MPEG-1; 2 and 2.5 (Layer-3)</td><td>mp3</td><td>320 kbit / s</td><td>48 kHz</td><td rowspan="3">no</td><td rowspan="4">m3u; pls; wpl; m3u8; asx</td></tr>
<tr><td>Windows Media Audio 8; 9 and 10</td><td>wma</td><td rowspan="2">384 kbit / s</td><td>96 kHz</td></tr>
<tr><td>MPEG-2 and 4</td><td>aac; mp4; m4a</td><td rowspan="3">48 kHz</td></tr>
<tr><td>WAV</td><td>wav</td><td>Defined by the format (approx. 1.5 Mbit / s)</td><td>yes</td></tr>
<tr><td>FLAC; OGG Vorbis</td><td>flac; ogg</td><td>Defined by the format (approx. 5.5 Mbit / s)</td><td></td></tr>
</table>

The images on the record covers can have an image resolution of max. 800 x 800 pixels and be in jpg, jpeg, png, bmp and gif formats. These are only displayed on the device screen when they are available in the playable audio source.

CAUTION

- At the time of publication, the device has been tested with most audio sources available in the various markets. However, it is possible that some audio sources or files will be unreadable or unplayable.
- The GPT standards (GUID partition table) method structured signal sources are not supported by the device.
- Files that are protected by Digital Rights Management **(DRM)** technology cannot be played back by the device.

Note

- We recommend that you use class 4 SD memory cards and higher. This guarantees the fastest possible access to the audio files.
- For a good playback, we recommend using files with a low level of compression (for example, a bit rate of at least 160 kb / s or higher compressed MP3 files).
- A list of compatible audio sources can be found on the ŠKODA Internet pages.

Pictures

Image viewer

Introduction

This chapter contains information on the following subjects:

Operation 29
Select source 29
Supported Formats 29
Settings 30

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

Operation



Fig. 18
Image viewer

Call Pictures menu

› Press the button MENU → .

If there are images on the selected source of the supported type, the menu **Pictures** is displayed.

If the source contains no displayable image, the following message appears in the device Screen **Please select a source with image files.**

The display of images in the device screen is not supported by connected Apple devices.

Function keys of the menu Pictures

- A Select the image source
- Select the images or folder from the list
- Display of the previous image
- Switching on the slideshow[1)]
- Switching off the slideshow[1)]
- Display of the next image
- Image settings

Function keys for the operation

- Rotate the image 90° anticlockwise
- Rotate the image 90° clockwise
- Display the maximum image size while retaining the aspect ratio
- Display the original image size while retaining the aspect ratio

The image size can be changed by touching two fingers on the screen and by opening or closing them, if necessary by rotation of the right control 2 » Fig. 1 *on page 5*.

You can move the image in the desired direction by touching and dragging it with your finger.

Select source

› In the menu **Images** press the function key A » Fig. 18 *on page 29*.

The following menu of available sources is displayed.

- **USB** - USB memory (type MSC)
- **SD card** - SD memory card

Supported Formats

Codec type (File formats)	File suffix	Max. resolution (Megapixels)
BMP	bmp	4
JP (E) G	jpg; jpeg	4; 64
GIF	gif	4
PNG	png	4

[1)] Presentation of selected photographs shown in succession at defined intervals » page 30.

Note
The max. supported image size is 20 MB.

Settings

› In the **Images**menu, press the function key .

- **Image view:** - Image view settings
  - **Full** - Display the maximum image size while retaining the aspect ratio
  - **Automatic** - Full screen display
- **Display time:** - Set the display time for the slideshow
  - **5 s**
  - **10 s**
  - **15 s**
  - **30 s**
- **Repeat slide show** - Switching on/off the picture presentation - repeat

Communication

Telephone

Introduction

This chapter contains information on the following subjects:

Main menu 31
Main / additional phone 32
Bluetooth® - connection profile 32
Settings 33
Problems with telephone functions 33

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

Up to 2 telephones can be connected via Bluetooth ® profile HFP and at the same time one of them can also be connected with the audio profile A2DP or AVRCP. Therefore the functions of both telephones can be operated via the device.

The device allows you to work with text messages (SMS) of the connected telephone (a telephone support and a connection via the MAP profile are required).

ŠKODA permits the operation of telephones and two-way radio systems with a professionally installed external aerial and a maximum transmission power of up to 10 watts.

Please ask at a specialist workshop about installing and operating telephones and two-way radio systems that have a transmission power of more than 10 W.

WARNING
- The national legal regulations for using a mobile telephone in a vehicle must be observed.
- No objects such as mobile telephone mounts, etc. must be attached to the covers of the airbag modules or be located within their immediate vicinity.

WARNING (Continued)

- Never leave a telephone in the deployment area of an airbag, on a seat, on the dash panel or in another area, from which it can be thrown during a sudden braking manoeuvre, an accident or a collision - there is a risk of injury. There are storage compartments with lids and if necessary there is the multimedia storage compartments to hold this » *Vehicle owner's manual*, chapter *Transport and practical equipment*.
- Before transport of the vehicle by air, the Bluetooth® function must be switched off by a specialist company.

CAUTION

- In areas with no signal and possibly in tunnels, garages and subways a telephone conversation can be interrupted and no telephone connection can be established - not even in an emergency!
- We recommend that mobile telephones and two-way radio systems be installed in the vehicle by a specialist workshop.
- Most modern electronic equipment is shielded from RF signals. In exceptional cases, electronic equipment may not be shielded against the RF signals and telephone service may be disrupted.

Note

- The range of the telephone connection to the device using the Bluetooth® profile is limited to the vehicle interior. The range is dependent on local conditions, e.g. obstacles between the devices and mutual interferences with other devices. If your telephone is in a jacket pocket, for example, this can lead to difficulties when establishing a connection with the device or transferring data.
- The functionality of the telephone is dependent on the telephone service operator and the telephone being used. Further information is available from the telephone service operator or can be taken from the telephone manual.
- In some countries the connection via the Bluetooth ® function, may be limited. Further information can be obtained from local authorities.

Main menu



Fig. 19
Telephone: Main menu

Read and observe ! and ! on page 30 first.

› Press the PHONE button.

If at least one telephone is connected to the device, the **telephone** menu is displayed » Fig. 19.

Description of the function keys

- A Name of the mobile network operator of the associated main telephone
- B Function key for opening a list of up to 20 previously paired telephone» page 32with the name of the connected main telephone
- C Function key for switching the connected telephones with the name of the connected additional telephone
- D Speed dial the preferred telephone numbers » page 41
- E Choice of storage group for the preferred telephone numbers
- Direct entry of a telephone number » page 39
- Display the telephone contact list » page 40
- Display a collection of text messages (SMS) [1]» page 44(When a new message appears the number of new SMS is specified)
- Display of call list (if there are new missed calls, the icon will appear here with the information about the number of missed calls) » page 42
- Menu settings for the **Telephone** » page 33

[1] This function is only supported by some telephones.

Symbols in the display

Symbol	Meaning
	Charge status of the telephone battery[a)]
	Signal strength of the mobile wireless connection[a)]
▶	Active roaming (before the name of the mobile network provider)[a)]
	Missed call
	Current call
	Incoming SMS[a)]

a) This function is only supported by some telephones.

Main / additional phone

Read and observe ! and ! on page 30 first.

Up to 2 telephones can be connected via Bluetooth ® profile HFP and at the same time one of them can be connected with the audio profile A2DP or AVRCP. Therefore the functions of the telephones can be operated via the device.

One of the telephones can be set as main telephone, the other telephone as an additional telephone.

Main telephone
The main telephone provides the ability to perform the following functions depending on the type of the connected telephone.

- Acceptance of the incoming call
- Direct entry of a telephone number
- Dial a number from the contact list[1)]
- List of telephone contacts / import telephone contacts[1)]
- Call list[1)]
- Dial the breakdown number[2)]
- Dial the info number[2)]
- Conference call
- Management of text messages (SMS)[1)]

The name of the device connected to the telephone as a main telephone is displayed in the function key B » Fig. 19 *on page 31*.

Additional telephone
The additional telephone offers you the opportunity to accept or reject the incoming call (when a telephone call is performed by the main telephone).

The name of the device connected to the telephone as an additional telephone is displayed in the function key C » Fig. 19 *on page 31*.

Change the main telephone to an additional phone
› Press the function key C » Fig. 19 *on page 31*with the name of the additional telephone.

The functions of the main and additional telephones are switched with each other.

Note
The contact list is valid for the main telephone. If the incoming call is accepted by the additional telephone and you find the telephone number in the contact list of the main telephone, then the caller details (e.g. name, image, etc.) is displayed instead of the number.

Bluetooth® - connection profile

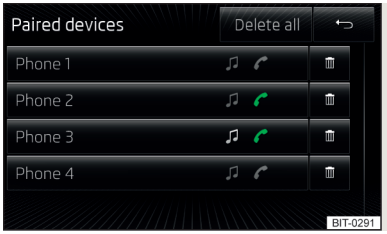


Fig. 20
List of paired devices - Bluetooth ® profiles

Read and observe ! and ! on page 30 first.

Profile types
With the device several telephones can be paired, but only two telephones can actively be using the Bluetooth ® profile HFP and at the same time only one telephone can be connected via the Bluetooth ® profile A2DP or AVRCP .

1) This function is only supported by some telephones.
2) The function is only available for some countries.

› **Hands-free telephone (HFP)** - Devices that support the connection via the HFP profile
› **Bluetooth audio (A2DP)** - Devices that support the connection via the audio profile

The audio Bluetooth ® profile A2DP or AVRCP can be disabled or enabled by pressing the function key → **Bluetooth** → **Bluetooth audio (A2DP/AVRCP)** .

Connect
Press in the menu the **Telephone** function key → **Bluetooth** → **Paired devices.**

A list of paired devices is displayed.

By pressing the function key with the name of the connected device a menu opens with the supported profiles.

By pressing the gray profile icon on the menu with supported profiles a device connects to the unit via the selected profile.

The connection via the profile selection is influenced by the number and the type of connected telephones. The procedure is the same as connecting to the telephone » page 38.

Disconnecting the connection
Press in the menu the **Telephone** function key → **Bluetooth** → **Paired devices.**

A list of paired devices is displayed.

By pressing the green symbol (HFP) or the white symbol (A2DP) the message **... Disconnect the profile - are you sure?** is displayed in the device screen and a menu with the following function keys appears.

› **Disconnect** - Disconnect connection
› **Cancel** - Cancel the disconnection

Settings

Read and observe and on page 30 first.

› Press the button PHONE → .

- **Hands-free**- Enabling and disabling hands-free system (during a call, the call is switched to the telephone)
- **Select telephone** - Search for available telephones/list of paired telephones/ select telephone
  - **Find** - Search for available telephones » page 38
- **Bluetooth** - Bluetooth® settings » page 15
- **User profile** - User profile settings
  - **Manage favourites** - Assign function keys to allow speed dialling of contacts; you can also add and delete quick contacts here
  - **Mailbox number: Enter here** - Enter the telephone number of the mailbox
  - **Prefix:** - Switch on/off the option to assign a prefix to a telephone number. Once this function is activated, the function key for adding a prefix to a telephone number will be displayed with the symbol in some menus. appears.
  - **Enter here** - prefix for a telephone number (if the function **Prefix:** is on)
  - **Sort by:** - Sort the order of the telephone book[1)]
    - **Surname** - Sort by contact name
    - **1st name** - Sort by contact first name
  - **Import contacts** - Start the update of the telephone book; the number of imported contacts and number of contacts stored in the telephone is displayed[2)]
  - **Delete other user profiles** - Delete up to three previous user profiles (contacts, order of calls, call lists, speed dial buttons assigned to contacts)
  - **Select ringtone** - Selection the ring tone is available if the connected main or additional telephone does not support the in-band ringing function[3)]
  - **Reminder: Remember your mobile telephone** - Switch on/off the reminder for a connected telephone; the reminder is output when the ignition is switched off and the ignition key is removed (or the ignition is turned off and the driver's door is opened in the case of vehicles with a start button)
  - **Show pictures for contacts** - Switch on/off the display of the image assigned to the contact[1)]

Problems with telephone functions

Read and observe and on page 30 first.

For correct functioning of the menu **Telephone** the following basic conditions for coupling are required » page 35.

1) This function is only supported by some telephones.
2) Some telephones do not support downloading of contacts from the SIM card.
3) The in-band ringing function makes it possible to use the ring tone of your telephone as the ring tone.

If there are problems with the availability of the mobile network or with the Bluetooth® function, one of the following messages may appear on the device display screen.

Message	Meaning
Netw. search...	The telephone scans for available wireless networks.
No network	The telephone has no connection to a wireless network, if necessary, it does not support sending information to the network state.
Rejected by network.	The telephone service provider has rejected the connection (e.g. not enough mobile telephone credit, SIM card blocked, roaming not available).
To use the Bluetooth function, please switch the ignition on.	Switch on the ignition » page 35, *conditions for coupling*.
Please switch on Bluetooth.	Switch on the Bluetooth® function on the device.
Please connect a mobile telephone.	Connect the telephone with the device » page 34, *Pair*.
Telephone not available.	There is a problem with the **Telephone**, contact a specialist workshop.
Telephone is currently not available.	
Unknown	The telephone did not provide any information regarding the telephone service provider. Connect the mobile telephone again, if necessary, remove the key for a few minutes [a].

[a] On vehicles with a start button, switch off the ignition and open the driver's door.

Pair

Introduction

This chapter contains information on the following subjects:

conditions for coupling 35
Coupling - no telephone connected 35
Coupling - connected telephone 35
Coupling - two telephones connected 36
Coupling - more options of the telephone search 36
Connect telephone to the device 36
Pairing confirmation 37
Delete the telephone from the list of paired devices 37

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

During the coupling and connecting process the device can demand the confirmation by the Bluetooth ® profile (e.g., release contact import, release the MAP profile or the Bluetooth connection ® player and similar.) The telephone display should be monitored to acknowledge any possible request.

If the telephone to be paired has several SIM cards, then the primary SIM card of the telephone is paired with your device.

The coupling procedure is different depending on the number of telephones associated with the device.

WARNING

The device may require confirmation of certain features in the telephone when pairing. Therefore do not carry out the pairing process while driving - there is danger of accidents!

Note

- During the pairing process the option in the telephone to remember the password for the next automatic connection can be selected[1)].
- During the pairing process, some telephones require a confirmation regarding the connection of Bluetooth ® Profile A2DP and AVRCP.
- The maximum number of telephones registered is 20. Coupling a new telephone after reaching the maximum number causes the telephone that has not been coupled for the longest time to be automatically replaced.

conditions for coupling

Read and observe ! on page 34 first.

To connect a telephone with the device, the two devices must be paired.

Prerequisites for successful pairing:

✓ The ignition is switched on.
✓ The Bluetooth® function of the device » page 15 and the telephone is switched on.
✓ The visibility of the device » page 15 and the telephone is switched on.
✓ The visibility of the telephone is switched on.
✓ The telephone is within range of the Bluetooth ® signal of the device.
✓ The telephone is supported by the device.

The pairing can be initiated from the device or from the telephone.

Note

Available updates for Bluetooth ® devices as well as information about the telephone support can be obtained from the ŠKODA website **www.infotainment.skoda-auto.com**.

Coupling - no telephone connected

Read and observe ! on page 34 first.

› Press the button Telephone.

In the device screen the message **Please search for and connect a mobile telephone.** appears and a menu with the following function keys.

› **Find telephone** - search for available telephones with activated Bluetooth ® function and visibility
› ⚙ - Opening of the settings menu » page 33, *Settings*

After pressing the function key **Search telephone** the search for available devices starts. After about 30 seconds a list of found devices appears, which is updated up to 1 minute after the start of the search appears.

› If you do not want to wait for the display of the list press the function key **Results** .
› Select the telephone you want from the list of available telephones.
› Confirm the coupling » page 37.

After pairing confirmation the telephone is connected to the device as the main telephone » page 32.

Coupling - connected telephone

Read and observe ! on page 34 first.

› In the menu **Telephone** press the function key B » Fig. 19 *on page 31* with the name of the main telephone.
› In the list of paired telephones press the function key **Search telephone** .

A search for available devices starts. After about 30 seconds a list of found devices appears, which is updated up to 1 minute after the start of the search appears.

› The function key **Results** is to be pressed if you do not want to wait for the display of the list.
› Select the telephone you want from the list of available devices.

In the device screen the message **Choose whether you would like to replace the main telephone ... or whether you would like to add ... as an additional telephone.** along with the following menu.

› **Cancel** - Cancel the coupling
› **Replace** - Coupling and replacement of the main telephone
› **Add** - Coupling as an additional telephone
› Confirm the coupling » page 37.

After pairing confirmation the telephone connects to the device.

[1)] This function is only supported by some telephones.

Coupling - two telephones connected

Read and observe ! on page 34 first.

› In the menu **Telephone** press the function key B» Fig. 19 *on page 31*with the name of the main telephone.
› In the list of paired devices press the function key **Find telephone** .

A search for available devices starts. After about 30 seconds a list of found devices appears, which is updated up to 1 minute after the start of the search appears.

› The function key **Results** is to be pressed if you do not want to wait for the display of the list.
› Select the telephone you want from the list of available telephones.

In the device screen the message **... cannot be connected appears. Please select if you want the main telephone ... or the additional telephone ... to be replaced.** to appear with the following menu.

› **Cancel** - Cancel the coupling
› **Main tel.** - Replacement of the main telephone
› **Addition. tel.** - Replacement of the additional telephone

If you have a telephone, which is connected to the device via the Bluetooth audio ® profile A2DP or AVRCP, which you want to replace, then the message **There are two devices already connected. appears in the device screen. Please first disconnect at least one of these devices in order to: ... be able to connect.**

To establish the connection, the audio Bluetooth ® profile A2DP or AVRCP is to be separated » page 32 or the second telephone which is not connected to the audio profile, is to be selected and replaced.

› Repeat the coupling process by selecting the telephone from the list of found devices.
› Confirm the coupling » page 37.

After pairing confirmation the telephone connects to the device.

Coupling - more options of the telephone search

Read and observe ! on page 34 first.

The telephone can also be picked out as follows and then coupled.

› Press the function key → **Bluetooth** → **Find telephone**→ **Find telephone**→ **Results** press and to select the desired telephone.
› Press the function key → **Bluetooth** → **Find devices**→ **Results** press and select the telephone and a Bluetooth ® - Select a connection profile » page 32.
› Press the function key → **Bluetooth** → **Paired devices** → **Find** (this function key is available when no telephone is connected to the device).

After the desired telephone and the Bluetooth ® Has been searched out and selected profile, must be chosen depending on the number of connected telephones, if the telephone has to be connected as a main or additional phone. After the coupling has to be confirmed » page 37.

Connect telephone to the device

Read and observe ! on page 34 first.

When pairing from the telephone, follow the instructions in the telephone owner's manual.

› Have the telephone search for available Bluetooth® devices.
› Select the device in the list of devices[1].

The device is displayed in the telephone to be connected to as SKODA BT ....

... is replaced with the last four symbols of the vehicle identification number (VIN) of your vehicle.

You can change the name of the device » page 15.

The following message is shown in the device screen during pairing **... Would you like to connect?**, and the following function keys are displayed.

› **Connect** - confirmation of the coupling process.
› **Cancel** - stops the coupling process.

If no telephone with the device is actively connected, the telephone connects as the main telephone » page 32.

[1] For the name of the device refer to the Bluetooth ® settings » page 15 .

If a telephone with the device is actively connected, the telephone connects as an additional telephone.

If two telephones (main and additional telephone) are actively connected to the device, then only one telephone connection takes place, but there is no connection on the telephone with the device.

› Confirm the coupling » page 37, *Pairing confirmation from the telephone*.

After successful connection, the menu **Telephone** appears » Fig. 19 *on page 31*.

With free connection via the Bluetooth®- profile A2DP or AVRCP [1] the telephone with the device connects automatically with this Bluetooth ® player » page 25.

Pairing confirmation

Read and observe ! on page 34 first.

Pairing confirmation from the device
Depending on the telephone's Bluetooth ®, conformation is in one of the following ways.

› Confirm the 6-digit PIN code displayed on the device screen and the telephone display within 30 seconds on both the device and the telephone.

or

› Confirm the connection request in the telephone.
› Enter the 4 digit PIN code shown on the unit display into the telephone within 30 seconds[2].
› If necessary, acknowledge the telephone confirmation requirement concerning the connection of other Bluetooth ® profile.

Pairing confirmation from the telephone
Depending on the telephone's Bluetooth ®, conformation is in one of the following ways.

› Confirm the 6-digit PIN code displayed on the device screen and the telephone display within 30 seconds on both the device and the telephone.

If required select the option in the telephone for automatically connecting the telephone to the device[3].

or

› Enter the 4 - 16 digit PIN code into the device.
› Enter the PIN code shown on the device display into the telephone within 30 seconds [2].
› If necessary, acknowledge the telephone confirmation requirement concerning the connection of other Bluetooth ® profile.

Delete the telephone from the list of paired devices

Read and observe ! on page 34 first.

› Press in the menu the **Telephone** function key ⚙ → **Bluetooth** → **Paired devices.**

A list of paired devices and the following function keys are displayed.

› **Delete all** - Delete all the telephones in the list of paired devices
› 🗑 - Delete the desired telephone

After selecting one of the function keys, the function keys are displayed.

› **Delete** - delete confirmation
› **Cancel** - Cancels the deletion

Connection

Introduction

This chapter contains information on the following subjects:

Connection - no telephone connected 38
Connection - a connected telephone 38
Connection - two telephones connected 38
Connection - more options the telephone search 38
Disconnection 39

[1] A2DP or AVRCP are Bluetooth® profiles that support multimedia functions.
[2] The input and confirmation of the PIN code is not possible while driving.
[3] With some telephones, it is necessary to set the connection to the device as "authorised" in order for the automatic connection to be successful. If this is not set, the system will prompt you for a confirmation each time you attempt to connect to the telephone.

If the telephone you want is already paired with the device, then proceed as follows to connect to the device.

Check that the conditions for a successful pairing and the connection of the telephone to the device is possible » page 35, *conditions for coupling*.

Connection - no telephone connected

After pressing the button Telephone the message **Please search for and connect a mobile telephone.** appears in the device screen and a menu with the following function keys.

› **Find telephone** - Search for available devices
› ⚙ - Opening of the settings menu » page 33, *Settings*

After pressing the function key **Search telephone** the search for available devices starts. After about 30 seconds a list of found devices appears, which is updated up to 1 minute after the start of the search appears.

› The function key **Results** is to be pressed if you do not want to wait for the display of the list.
› Select a previously paired telephone from the list of available telephones.

The selected telephone connects to the device as the main telephone » page 32.

Connection - a connected telephone

› In the **Telephone** menu press the button B » Fig. 19 *on page 31* with the name of the main telephone.
› Select the telephone you want from the list of paired telephones or if the desired telephone from the list does not exist, press the function key **Find telephone** . Then select the desired telephone from the list of found devices.

In the device screen the message **Choose whether you would like to replace the main telephone ... or whether you would like to add ... as an additional telephone.** appears along with the following menu

› **Cancel** - Cancel the connection
› **Replace** - Connection and replacement of the main telephone
› **Add** - Connection as an additional phone

The telephone connects to the device.

Connection - two telephones connected

› In the **Telephone** menu press the button B » Fig. 19 *on page 31* with the name of the main telephone.
› Select the telephone you want from the list of paired telephones or if the desired telephone from the list does not exist, press the function key **Find telephone** . Then select the desired telephone from the list of found devices.

In the device screen the message **... cannot be connected appears. Please select if you want the main telephone ... or the additional telephone ... to be replaced.** to appear with the following menu.

› **Cancel** - Cancel the connection
› **Main telephone** - Connection and replacement of the main telephone
› **Addition. tel.**- Connection and replacement of the additional telephone

If you have a telephone, which is connected to the device via the Bluetooth audio ® profile A2DP or AVRCP, which you want to replace, then the message **There are two devices already connected. appears in the device screen. Please first disconnect at least one of these devices in order to: ... be able to connect.**

To establish the connection, the audio Bluetooth ® profile A2DP or AVRCP is to be separated » page 32 or the second telephone which is not connected to the audio profile, is to be selected and replaced.

› The connection process must be repeated by selecting the telephone from the list of found devices.

The telephone connects to the device.

Connection - more options the telephone search

The telephone can be selected from among the available paired telephones as follows.

› Press the function key ⚙ → **Bluetooth** → **Select telephone** and select the desired phone.
› Press the function key ⚙ → **Bluetooth** → **Find devices**→ **Results** press and select the telephone and a Bluetooth ® - Select a connection profile » page 32.
› Press the function key ⚙ → **Bluetooth** → **Paired devices** and select the telephone and a Bluetooth ® - connection profile » page 32.

After the desired telephone and the Bluetooth ® Has been searched out and selected profile, must be chosen depending on the number of connected telephones, if the telephone has to be connected as a main or additional phone.

Disconnection

The connection of a telephone to the device can be disconnected in one of the following ways.

- By removing the ignition key (or turning off the ignition and opening the driver's door in the case of vehicles with the starter button).
- By switching off the Bluetooth® function on the device » page 15, *Bluetooth® settings*.
- By switching off the Bluetooth® function on the telephone.
- By the separation of the connection in the telephone.
- By removing the telephone from the list of paired devices » page 37, *Delete the telephone from the list of paired devices*.
- By separating the Bluetooth ® HFP profile » page 32, *Bluetooth® - connection profile*.
- By turning off the connected phone.
- By the moving of the telephone outside the Bluetooth ® signal range.

If a telephone is connected to the device and the device is turned off, the connection to the telephone is not lost. The connection is only lost after switching off the ignition (for vehicles with the start button after switching off the ignition and opening the driver's door).

Dial telephone number

Introduction

This chapter contains information on the following subjects:

Direct entry of the telephone 39
List of telephone contacts 40
Speed dialling a telephone number 41
Call lists 42

First and foremost, pay attention to the safety instructions » page 4.

Direct entry of the telephone



Fig. 21
Direct entry of a telephone number

- Press in the menu the **Telephone** function key .

A screen appears for the entry of the telephone number » Fig. 21.

A Input line
⌫ Delete characters in the entry line
Select / paste the telephone number
Select / paste the entered telephone number with the area code[1)]
Breakdn. call - Select the breakdown number[2)]
Info. call - Select the info number[2)]
Mailbox - Select the mailbox number » page 33

Entering a telephone number
Entering the telephone number in the entry line follows, whereby the function keys with the number are operated sequentially.

The selection of the entered telephone number is done in one of the following ways.

- Press the function key , connection starts.
- Press the function key , connection starts with the area code.

Enter the last number dialled
If there are no figures entered for the telephone number, the function key is displayed or the last number inserted in the input line.

The selection of the entered telephone number is done in one of the following ways.

1) The function key for the code appears only with active preset function » page 33, *Settings* .
2) The function key is only available for some countries.

› Press the function key , connection starts.
› Press the function key , connection starts with the area code.

Search for a contact in the list
The input screen » Fig. 21 also functions as an alphanumeric keypad that you can use to search for contacts in the phonebook.

For example, if you enter 32, the unit will display contacts with the letter sequence DA, FA, EB, etc.

On the right side next to the numerical keyboard a list of contacts found from the directory appears according to the lettered specified. By pressing the corresponding function key for the respective contact, dialling is started or the contact details are displayed if the telephone contact has several telephone numbers.

Enter prefix
Entering the prefix into the input line can be done in one of two ways.
› Enter the characters or numbers of the prefix (e.g. + or enter 00 or similar).
› Enter the telephone number and press the function key (the connection with the prefix starts).

The prefix may, for example be used for international calls, telephone calls via a virtual telephone service provider or distinguishing between business and private calls and similar.

If the contact number contains a prefix, pressing the function key causes a further prefix to be added before the number and the connection starts. The telephone number contains at this time two prefixes and a telephone call is not initiated.

Dialling breakdown and info numbers
› Press the function key **Breakdn. call** , breakdown number is dialled.

A breakdown service will then be called when your vehicle breaks down.

› Press the function key **Info. call**the Info number is dialled.

An information service can be called when information regarding the products and services of the ŠKODA brand are required.

The breakdown and info numbers are free of charge. Charges are only made for a telephone call in accordance with the fare conditions of your telephone service provider.

If no Breakdown or Info. call can be made, then a ŠKODA service partner should be consulted.

The breakdown and info numbers are set country-specific at the factory. If you want to change the preset numbers, then consult a ŠKODA service partner.

List of telephone contacts

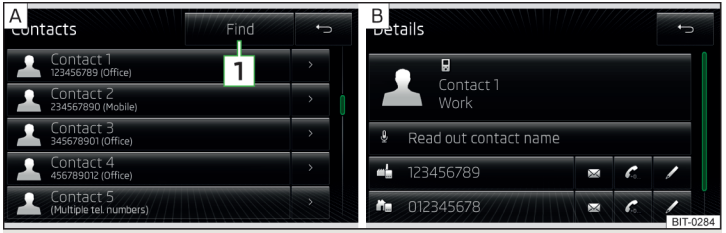


Fig. 22 **List of telephone contacts / contact details**

A list of telephone contacts » Fig. 22 - A appears.

The device telephone book contains up to 2000 free memory locations for imported telephone contacts. Each contact can have a max. of five telephone numbers, and up to 1,000 contacts can have an image assigned to them.

The list of telephone contacts can also be called-up during an ongoing call.

Dial contact
› Press the function key with one of the contacts displayed » Fig. 22- A, dialling starts.

If a contact contains several telephone numbers, the system displays a menu containing the telephone numbers for this contact after pressing the function key.

› Press the function key with one of the displayed telephone numbers , the dialling starts.

Contact details
› Press the function key > in the list of telephone contacts » Fig. 22 - A, the contact details are displayed » Fig. 22 - B.

In the contact, details pressing one of the following functions can start the dialling process or one of the following functions is selected.

› **Read out contact name** - Reads the contact name using the device generated voice

› ✉ - Opens the menu for sending a text message (SMS)[1] » page 44
› 📞 - Starts the connection setup with the prefix
› ✎ - Opens the menu for editing the telephone number of the contact before dialling

Find contact

› Press the function key 1 » Fig. 22- A , the keyboard opens for the contact search in the telephone book » page 8, *Alphanumeric with keyboard*.
› Find the telephone number in the list of imported telephone contacts.
› Press the function key with the retrieved contact, connection starts. The contact details appear if the telephone contact has several telephone numbers.

Load list

Upon first connection of the main telephone with the device, the system begins to download the telephone book from the telephone and from the SIM card[2] into the device memory[3]. Depending on the number of contacts, the images and the type of telephone this may take several minutes to complete.

The number of contacts imported can be checked in the menu point **Import contacts** » page 33, *Settings*.

During the import numbers - xxxx / yyyy - are shown representing the number of currently imported contacts into the device memory / number of contacts in the phone.

If the imported list of telephone contacts from the telephone contains more than 2000 contacts, loading is stopped and the message **Contacts not fully imported.** appears on the screen. Only the already downloaded contacts will be available.

Depending on the telephone, contact images for the first 1000 contacts are imported at the same time.

If an error occurs while loading the list, the message **Import failed appears. Please try again and check whether the BT device ... allows connections.**

Refresh list

Each time the telephone has established a new connection with the device, the relevant telephone contacts will be updated.

During the update, the list which was stored after the last completed update will be available. Newly stored telephone numbers are only shown after the updating has ended.

The update can be done manually » page 33, *Settings* by pressing the function key **Import contacts**.

i Note

The contact list is valid for the main telephone. If the incoming call is accepted by the additional telephone and you find the telephone number in the contact list of the main telephone, then the caller details (e.g. name, image, etc.) is displayed instead of the number.

Speed dialling a telephone number

You can use the speed dial function keys D » Fig. 19 *on page 31* to dial previously assigned telephone numbers instantly.

There are 10 function keys for speed dialling available in the memory groups.

Assigning a telephone number

› In the menu **Telephone** press a non-assigned function key for the speed dial D » Fig. 19 *on page 31*.

or

› In the menu ⚙ → **User profile** → **Manage favourites** press a non-assigned function key for speed dialling.

The unit displays the telephone book.

› If necessary, enter one of the contact numbers for the desired telephone contact.

The selected telephone number is assigned to a function key for speed dialling.

Selecting a stored speed dial

› Operate the desired function key for the speed dial telephone number D » Fig. 19 *on page 31*.

[1] The icon appears at about the MAP profile associated telephones.
[2] Some telephones do not support downloading of contacts from the SIM card.
[3] With some telephones a confirmation for importing contacts to the device is required.

Changing a stored speed dial

› The assigned function key for speed dialling D » Fig. 19 *on page 31* for about 2 s.

The unit displays the telephone book.

› If necessary, enter one of the contact numbers for the desired telephone contact.

The selected telephone number is assigned to a function key for speed dialling.

Removing a telephone number

› Press the function key → **User profile** → **Manage Favourites**.
› Press the function key **Delete all** to delete all speed dial buttons. Finally the message appears **Delete all favourites - are you sure?** .

or

› Press the function key for the speed dial D » Fig. 19 *on page 31* to delete the selected speed dial. Finally the message appears **Do you really want delete favourite "..."?** .

Confirm or cancel the deletion by pressing one of the function keys from the following menu.

› **Delete all** / **Delete** - Confirm the deletion
› **Cancel** - Cancels the deletion

Call lists

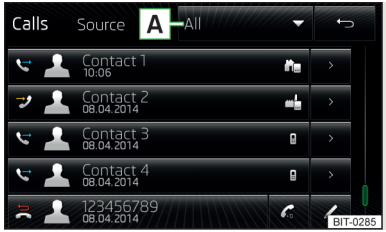


Fig. 23
Call list

› Press in the menu the **Telephone** function key .

The system displays a call list.

Description of the function keys

A Open the call list
  › **All** - All calls listed (max. 120 calls)
  › **Missed calls** - List of missed calls (up to 40 calls)
  › **Dialled numbers** - List of dialled numbers (up to 40 calls)
  › **Received calls** - List of received calls (up to 40 calls)

Start dialling the telephone number of the selected contact

Start dialling the telephone number of the selected contact with the area code

Processing the telephone number before dialling

> Display the contact details » page 40, *List of telephone contacts*

The list is updated after each call.

Telephone functions

Introduction

This chapter contains information on the following subjects:

Telephone conversation 42
Conference 43

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

This chapter covers the function to operate a telephone or conference call.

Telephone conversation

Depending on the conversation context, the following function can be executed.

Outgoing call
This feature is supported only on the main telephone.

While connecting, the screen displays the telephone number or contact name. And the following functions can be selected.

Exit choice

Incoming call
This feature is supported by the main telephone and the additional telephone. ▸

During an incoming call, the device screen shows the telephone number or contact name. And the following functions can be selected.

- Answer the incoming call
- Mute the ringer
- Restore ringer
- Reject the incoming call
- Display caller details[1)]

Current call
This feature is supported by the main telephone and the additional telephone.

During a current call, the screen displays the telephone number or contact name and the call duration. Depending on the context, the following functions can be selected.

- Hold a call
- Return to held call
- Deactivate the microphone
- Activate the microphone
- End call
- Display caller details[1)]

During an ongoing call, it is possible by pressing the function key to send the key tone (DTMF).

Switch to the telephone call and back to the device
During an ongoing call it is possible to switch a call to the telephone and back to the device.

› Press the function key → **Hands-free** ☑ .

The telephone call is transferred to **the telephone** .

› Press the function key → **Hands-free** ☐ .

or

› Press in the menu the **Telephone** function key .

The telephone call is switched back**to the device** .

[1)] The button is only functional when the contact is stored in the telephone book.

Conference

The conference is a shared call with between three and six participants.

Start a conference/invite additional participants
› During a call or conference, make the next call.

or

› To answer a new incoming call press the function key .
› Press the function key to initiate the conference.

During a conference
During an ongoing conference call, the call duration is displayed on the screen. Depending on the context, the following functions can be selected.

- Hold a conference - leave the conference temporarily (the conference continues in your absence)
- Return to the held conference
- Deactivate the microphone
- Activate the microphone
- End conference call
- Meeting details

Conference details
During an ongoing conference press the function key for conference details to show a list of the other conference participants. The following functions can be selected depending on the type of telephone

- View participant details
- Talk to a participant separately of the conference
- End the call to a conference participant

Text messages (SMS)

Introduction

This chapter contains information on the following subjects:

Main menu 44
New text message 44
Received text message 45

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

The device offers the ability to display and send text messages, if your telephone is connected to the device via the Bluetooth ® profile **MAP** [1].

The MAP profile when connecting connects the device to the telephone using the Bluetooth ® profile HFP.

There is the possibility to have message read by the device.

For quick answers (called templates) stored text messages are available in the device.

Main menu

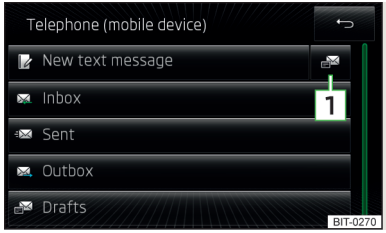


Fig. 24
Main menu text messages

Go to the main menu text messages
› Press in the menu the **Telephone** function key ⊠ .

A menu for text messages appears » Fig. 24.

Depending on the connected telephone just a few function keys of the following menus can be displayed.

- **New text message** - Creating and sending the message » page 44, *New text message*
- **Inbox** - Open a list of received messages » page 45, *Received text message*
- **Sent** - Open a list of sent messages
- **Outbox** - Open a list of messages ready to be sent
- **Drafts**- Open a list of drafts (messages in progress)
- **Deleted**- Open a list of deleted messages
- 1 Open a list for quick answer provided short messages (called templates)

New text message



Fig. 25 **Entering a text message / viewing a text message**

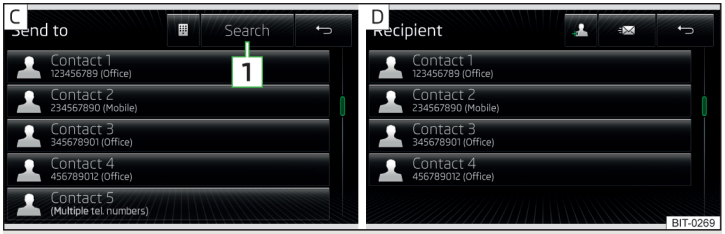


Fig. 26 **Contact list / recipient list**

Enter the text message
› Press the function key ⊠ → **New SMS** » Fig. 24 *on page 44*.

An alphanumeric input keyboard is opened » Fig. 25- A.

› Write the text of the message.

The number of characters entered is displayed in the function key **OK** » Fig. 25- A.

[1] This function is only supported by some telephones.

A message can have a max. of 70 characters including empty spaces. If more characters are entered the text is split into multiple messages. The max. number of characters is 440.

› Press the function key **OK** .

Text input is completed and a view of the text message » Fig. 25- B opens along with the following function keys.

View of the text message
After the view of message has been opened » Fig. 25- B the following functions can be executed.

- The text can be read out by the generated device voice.
- The text can be stored as a draft
- Open a list of templates with the possibility to replace the recorded text by the selected template
- Open the contact list

The text message can be edited, as long as the text range is within the entered view.

Contact list / recipient list
After the list has been opened » Fig. 26- C the following functions can be executed.

- Insert a telephone number in the recipient list[1)]
- 1 **Search** - open an alphanumeric keyboard for search » page 8 (find a contact [1)])
- Enter a telephone number
- Return to view the text message

After selecting the contact number or entering the telephone number, the recipient list will be displayed in the device screen » Fig. 26- D.

The following functions can be performed by pressing one of the function keys.

- Display the contact list with the possibility to add further recipients for the text message by means of the "Checkbox "add / remove
- Removal of the selected contact from the recipient list
- Return to view the text message » Fig. 25- B

[1)] If a contact contains multiple telephone numbers, after pressing the function key of the contact a menu opens with the associated telephone numbers of the contact.

Sending a text message
› Press the function key » Fig. 26- D, the text message will be sent to all existing recipients in the recipient list.

Received text message

Depending on the type of the connected telephone it is possible to read received messages, or have the message read out loud by the device.

Received message
The unit displays the notification of a new message, as follows.

- By a symbol in the status line.
- In the menu **telephone** by a number in the function key » Fig. 19 *on page 31*.

› Press in the menu the **Telephone** function key → **Inbox** .

This will open a list of received messages.

By selecting a message from the list the contents of the text message is displayed along with the following function keys.

- - Reads the text using the generated device voice
- ... - Open a menu with additional options
  - **Reply with template** - Reply using a template
  - **Display numbers** - Recognition of telephone numbers in the message including the contact number (recognized numbers can be dialled directly or edited before dialling, or may be sent to this text message)
- - Open the contacts list for forwarding a message
- - Reply to the sender via a message

MirrorLink ™

Introduction

This chapter contains information on the following subjects:

Connection conditions 46
Start function 46
Operation 47

Settings 47
Function problems 47

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

MirrorLink ™ provides a function for the operation of some installed applications in the communication facility (e.g. telephone, hereinafter referred to only as facility) by using the device.

Using this function is only for specially designed and certified applications. For reasons of safety, the operation of some applications while driving is limited or not possible (function keys of the applications are inactive).

WARNING

- No objects such as mobile telephone mounts, etc. must be attached to the covers of the airbag modules or be located within their immediate vicinity.
- Never leave communication facility in the deployment area of an airbag, on a seat, on the dash panel or in another area, from which it can be thrown during a sudden braking manoeuvre, an accident or a collision - there is a risk of injury. There are storage compartments with lids and if necessary there is the multimedia storage compartments to hold this » *Vehicle owner's manual*, chapter *Transport and practical equipment*.

CAUTION

- MirrorLink ™ Applications that use a mobile data connection, are dependent on the quality of the signal supplied by your telephone service provider. ŠKODA accepts no responsibility for the transmitted data volume.
- An intensive use of the function MirrorLink ™ and the work associated with applications (e.g., GPS, mobile data, fully-backlit display and the like.) can lead to battery discharge of the connected facility.

Connection conditions

Read and observe ! and ! on page 46 first.

The connection between the facility and the device using the function MirrorLink ™ is operational under the following conditions.

✓ The ignition is switched on.
✓ The facility supports the function MirrorLink ™ and contains applications that support this feature.
✓ The facility is connected to the USB input » Fig. 17 *on page 26*.

Start function

Read and observe ! and ! on page 46 first.

› Press the button MENU → **MirrorLink™**.

A list of the facilities connected to the USB input is displayed.

› Select one of the MirrorLink ™ function supporting facilities.

If the facility is separated from the USB cable and the ignition is not off, it automatically reconnects when a new connection to the device is made.

Note

- If the facility is connected by means of the function MirrorLink ™, it cannot be used as a USB audio source **Media** menu.
- As long as the function MirrorLink ™ is used, the display of the facility must be switched on.
- The list of available facilities and applications, which support the MirrorLink ™ function, can be seed in the ŠKODA Internet pages **www.infotainment.skoda-auto.com**

Operation

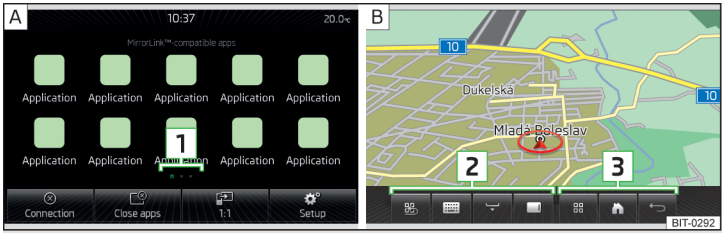


Fig. 27 **List of Applications / example of a running application**

Read and observe ! and ! on page 46 first.

After successfully connecting the facility to the device a list of available applications is displayed » Fig. 27- A.

If there is only one available application it will be started automatically after connecting the facility.

Function keys in the list of applications

- Separation of the connection with the attached facility
- Open a list of currently running applications with the ability to terminate them
- Display of the connected facility
- MirrorLink ™ - settings » page 47

› Press the respective function key, to launch the application the application.

The number of applications is not restricted. If there are more applications than can be shown in the device screen then symbols appear in position 1 indicating more pages for the list of applications. The next page of the application list is shown by touching the display screen and moving it to the side.

Function keys for operation of the application - area 2 » Fig. 27

- Return to the menu with the list of applications
- Display the alphanumeric keypad of the device
- Display function keys on the right side
- Display of the function keys in the bottom of the screen
- Masking the function keys

In area 3 various function keys are shown, depending on the connected device.

Example of displayed keys

- Open a menu with applications for the attached device
- Return to the main screen
- Return to previous screen

With muted function keys the following symbol appears in the device screen . Pressing the right control 2 » Fig. 1 *on page 5*causes the function keys to appear.

Settings

Read and observe ! and ! on page 46 first.

› Press the button MENU → MirrorLink™ → .

The settings menu for the function MirrorLink ™ opens.

- **Select device** - Open a list of available facilities
- **Orient. Screen:** - Setting the screen representation of the facility[1)]
  - **Landscape** - Width representation
  - **Portrait** - Height representation
- **Flipped**- Image reversed by 180 °[1)]
- **Activate keyboard entry field** - Switching on/off the alphanumeric keypad of the device[1)]

Function problems

Read and observe ! and ! on page 46 first.

Restrictions or problems of the MirrorLink ™ function are indicated on the device screen by one of the following warning messages.

1) The function is only displayed, if supported by the connected device.

Examples of warning messages

Message	Meaning
No connection was found. Please connect a USB device.	Connect to the USB input of a facility which supports the MirrorLink ™ function.
The app is unavailable while the vehicle is in motion.	The application is only available when the vehicle is stationary.
Error: App	The application is not supported by the MirrorLink ™ function.
MirrorLink™ Audio is not available.	No playable audio files are available on the connected facility.
...: MirrorLink ™ connection is not available.	Check the connection to the USB input.
Connection failed. MirrorLink™ is not supported by the device.	The function MirrorLink ™ is not supported by the device.
No compatible apps were found on the device. The MirrorLink™ may not be supported by the device.	The function MirrorLink ™ may not be supported by the facility, or there may be no MirrorLink ™ application available in the facility.
Disconnected.	The time limit for the connection with the facility has expired. Disconnect and reconnect to the USB input.
The app is unavailable while the vehicle is in motion. The app is not certified or the certification limits the use while driving.	The application is available only when the vehicle is stationary, not available when moving.
Error: App is not compatible.	The application cannot be started in the corresponding facility.
The app is unavailable while the vehicle is in motion. The app is not enabled for this country.	The region for which the application is certified, does not match the operating region. This application is available only when the vehicle is stationary.
The mobile device is restricted.	Check if the / the current date / time corresponds to reality. If the date is incorrectly set the applications are available only when the vehicle is stationary.

Vehicle systems

Vehicle settings - CAR

Introduction

This chapter contains information on the following subjects:

Driving data 49
Vehicle status 49
ESC-and TCS systems 50
Tyres 50
Assistance systems 50
Parking and manoeuvring 50
Light 51
Windscreen wipers 51
Opening and closing 51
Instrument cluster (multifunction display) 51
Time, date and unit setting 51
Service 52
Restore factory settings 52

First and foremost, pay attention to the safety instructions » page 4, *Important notes*.

In the menu CAR travel data and information displayed on the vehicle condition and some vehicle systems can be set.

After pressing the button CAR the last displayed function is displayed on the screen » page 49, *Driving data*or » page 49, *Vehicle status*.

Function keys » Fig. 28 *on page 49*

Travel data / vehicle status
/ Operation of the radio / media playback» page 16, » page 22
Vehicle system settings

Note

- Description of the individual systems » *Vehicle Owner's Manual* .
- Settings relating to the vehicle systems can only be made when the ignition is switched on.

Driving data

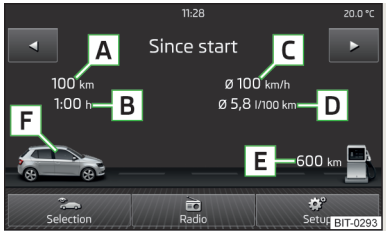


Fig. 28
Driving data

› Press the button CAR → .

- **Driving data** - Display travel data
  - *Since start* - Driving data for the individual trip
  - *Long-term* - Long-term driving data
  - *Since refuelling* - Data since last refuelling

Displayed driving data » Fig. 28

A Distance travelled
B Driving time
C Average speed
D Average fuel consumption
E Approximate range
F Range (if the estimated range is less than 300 km, the vehicle starts to approach the symbol)
◁ ▷ Switch between the individual memories

Vehicle status

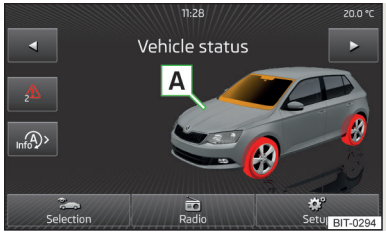


Fig. 29
Vehicle status

› Press the button CAR → .

- **Vehicle status** - Displays vehicle status or tyre pressure monitoring information
  - *Vehicle status* - Displays vehicle status information
  - *Tyre Pressure Loss Indicator* - Tyre pressure monitoring function
    - **SET** - Storage of the tire pressure values

Vehicle status » Fig. 29

A Vehicle representation (the zones of the vehicle are shown in different colours, corresponding to any warning messages that occur. The warning messages are displayed once you touch vehicle)

✓ / ⚠ No message/warning messages relating to vehicle status or number of messages (if there is only one message, one warning message text is displayed)

Display information about the status of the START-STOP system

◁ ▷ Switch between the individual menu functions

ESC-and TCS systems

› Press the button CAR → ⚙ → **ESC system:**.

- **Activated** - Switch on all components of the ESC system
- **ASR off** - Switch off the ASR system

Tyres

› Press the button CAR → ⚙ → **Tyres**.

- *Tyre Pressure Loss Indicator* - Tyre pressure monitoring function
  - **SET** - Storage of the tire pressure values
- *Winter tyres* - Sets the speed limit for winter tyres
  - **Speed warning** - Snow tyres speed warning on/off
  - **Warning at** - Sets the speed for the warning

Assistance systems

› Press the button CAR → ⚙ → **Driver assistance**.

- *Front Assist (ambient traffic monitor. sys.)* - Set the assistant for distance monitoring to the vehicles ahead
  - **Active** - Activate/deactivate the assistant
  - **Advance warning** - Activate/deactivate advance warning
  - **Display distance warning** - Activate/deactivate distance warnings
- *Driver Alert System* - Activate/deactivate the driver alert system

Parking and manoeuvring

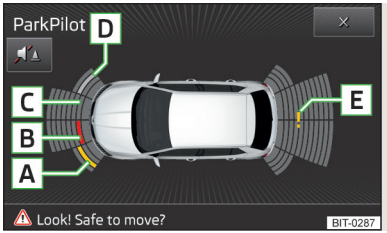


Fig. 30
Screen display of the visual parking system

The optical parking system is activated when the reverse gear is engaged or by pressing the symbol P in the control panel.

Parking sensors - function keys and obstacle warning » Fig. 30

✖ Switching off the visual parking system.

Enabling or disabling the audible parking.

⚠ Message: **Look! Safe to move?**

A An obstacle in the lane which is currently outside of the collision area is shown by the yellow segment

B An obstacle appearing in the collision zone is shown as an orange-coloured segment. Do not continue driving in the direction of an obstacle!

C An area without detected obstacles is shown as a transparent segment.

D An obstacle in the sensor range which lies outside of the collision area is shown by the white segment.

E There is a system error (there is no indication of any obstacles)

› Press the button CAR → ⚙ → **Parking and manoeuvring**.

- *ParkPilot* - Settings for the parking aid
  - **Active** - Activate/deactivate the parking aid
  - **Activate automatically** - Activate/deactivate the compact parking aid display (when driving forward)

- **Front volume** - Adjust the volume of the beeps for obstacle detection in front
- **Front tone setting** - Setting the pitch of the beeps for obstacle detection in front
- **Rear volume** - Set the volume level of the beeps for the rear obstacle detection
- **Rear tone setting** - Setting the pitch of the beeps for the rear obstacle detection
- **Lowering entertainment** - Lowers the audio volume (e.g. radio volume) with activated parking aid

Light

› Press the button CAR → ⚙ → **Light**.

- *Light assistance* - Setting of outdoor lighting
  - **Switch-on time:** - Set the sensibility of the light sensor against the change in intensity of the ambient light
    - **Early** - High sensibility
    - **Medium** - Medium sensibility
    - **Late** - Low sensibility
  - **Automatic headlight control (rain)** - Activate/deactivate automatic headlight control in rain
  - **Daytime running lights** - Activate/deactivate daytime running lights
  - **Comfort turn signal** - Activate/deactivate lane change flashing
- *Background lighting* - Sets the interior lighting
  - **Instrument/switch lighting** - Sets the brightness of the instrument/switch lighting
- *"Coming home/Leaving home"- function* - setting the COMING HOME / LEAVING HOME-function
  - **"Coming Home" function** - Sets the period that the lights remain on after you leave the vehicle (0 - 30 seconds; 0 = function deactivated)
  - **"Leaving Home" function** - Sets the period that the lights remain on after you unlock the vehicle (0 - 30 seconds; 0 = function deactivated)

Windscreen wipers

› Press the button CAR → ⚙ → **Mirrors and wipers**.

- *Wipers* - Adjusts the windscreen wipers
  - **Automatic wiping in rain** - Activate/deactivate automatic windscreen wiping in rain
  - **Automatic rear wiper** - Activate/deactivate automatic rear window wiping

Opening and closing

› Press the button CAR → ⚙ → **Opening and closing**.

- *Central locking* - Settings for opening and closing of doors
  - **Door unlocking:** - Set the door unlocking feature
    - **All doors** - All doors
    - **Single door** - Driver's door or driver's or passenger door with KESSY system
    - **Vehicle side** - Doors on the driver's side or on the driver's or passenger's side with KESSY system
  - **Automatic locking** - Activate/deactivate automatic locking when starting off
  - **Acoustic confirmation** - Activate/deactivate acoustic signals when locking/unlocking the vehicle with an anti-theft alarm system

Instrument cluster (multifunction display)

› Press the button CAR → ⚙ → **Instrument cluster**.

In this menu it is possible to hide/show the appearance of the menu items in the instrument cluster multifunction display and reset the trip data.

- **Current consumption** - Display of current fuel consumption on/off
- **Average consumption** - Display of average fuel consumption on/off
- **Travelling time** - Display of travelling time on/off
- **Distance** - Display of distance travelled on/off
- **Average speed** - Display of average speed on/off
- **Digital speed display** - Display of current speed on/off
- **Speed warning** - Winter tyres warning on/off
- **Oil temperature** - Oil temperature on/off
- **Reset "Since start" driving data** - Reset the single-trip memory in the device screen and in the display of the instrument cluster
- **Reset "Long-term" driving data** - Reset the long-term memory in the device screen and in the display of the instrument cluster

Time, date and unit setting

› Press CAR → **Time and date**.

Description of the time and date settings » page 14 .

› Press the button CAR → **Units**.

Description of unit settings » page 14.

Service

› Press the button CAR → ⚙ → **Service**.

- *Vehicle ID no.* - Display the vehicle identification number
- *Inspection* - Number of km/days remaining until the next inspection service
- *Oil change service* - Number of km/days remaining until the next oil change

Restore factory settings

› Press the button CAR → ⚙ → **Factory settings**.

In this menu you have the possibility to reset the menu items in the settings of the vehicle systems to factory settings.

- *Reset all settings and data*
  - **All settings** - Restoration of the settings **all** menu items
- *Reset individual settings/data*
  - **Driver assistance** - Restoration of the **driver assistance** menus
  - **Parking and manoeuvring** - Restoration of the **Parking and manoeuvring** menu items
  - **Light** - Restoration of the **light** menus
  - **Mirrors and wipers** - Restoration of the **Mirrors and wipers** menu
  - **Opening and closing** - Restoration of the **Opening/closing** menu items
  - **Instrument cluster** - Restoration of the **instrument cluster** menu

If one of the above menu items is selected, the system will ask you whether you really want to restore the settings.

- **Cancel** - Return to higher-level menu
- **Reset** - Restore the settings

Index

A

Additional keyboard languages 14
Additional telephone 32
Adjust vehicle systems
Assistance systems 50
ESC system 50
Multi-function display 51
Alphanumeric with keyboard 8
AM 16
Anti-theft protection 4
Audio
Media 22
Radio 16
Audio source 24
Automatic driving light in rain 51
Automatic locking 51
Automatic rear window wiping 51
Automatic windscreen wiping in rain 51
AUX 27

B

Bluetooth
Settings 15
Switch on/off 15
Update 15
Visibility 15
Bluetooth - profile 32
Bluetooth Player 25
Breakdown service 39
Button CAR 49

C

Call list
Call list 42
Comfort turn signal 51
COMING HOME 51
Communication 30
Component protection 4
Conditions for coupling 35
Conference call 43
Connect device
connected to a telephone 38
connected to two telephones 38
more options of the telephone search 38
no telephone connected 38
Control lever 9
Coupled device
connected to a telephone 35
connected to two telephones 36
more options of the telephone search 36
Couple device
no telephone connected 35
Couple telephone
Telephone to the device 36

D

DAB 16
Additional information 17
Radio text and pictures presentation 17
Settings 20
Data transmission of mobile devices 14
Date 14
Daytime driving light 51
Declaration of Conformity 4
Delete the telephone from the list of paired devices 37
Description of the device 5
Device
connect to the telephone 37
Disconnection 39
Pair with your telephone 34
Device menu
Radio 16
Device menus
Device Settings 13
Media 22
MirrorLink 45
Pictures 29
Sound 12
Telephone 30
Device operation
Control lever 9
Device screen 7
MAXI DOT display 8
Multifunction steering wheel 9, 11
device screen
keyboard 8
Device screen 13
Area 7
important information 5
Maintenance 5
Operation 7
Dial telephone number 39
Digital radio reception 20
Door release 51
Driving data 49, 51
DTMF 42

F

Factory settings 15, **52**
Fatigue detection 50
File formats
Media 27
File Formats
Pictures 29
FM 16
Settings 20
Frequency range 17
See main menu 16
Front Assist 50
Function keys 7
Function problems
MirrorLink 47
Telephone 33

I

Images
- Display 30
- Select source 29
- Settings 30
- Supported file formats 29

Image viewer 29
Important notes 4
Info service 39
Input screen with keyboard 8
Instrument cluster 51
Instrument illumination 51
Introductory information 4

K

keyboard 8
Keyboard 14

L

Language characters 14
LEAVING HOME 51
Light sensor - Light switch-on time 51
List
- of available stations 17
- of telephone contacts 40
- With folder / track list 23

Low tire pressure warning 49

M

Main menu
- Media 22
- MirrorLink 47
- Radio 16
- SMS 44
- Telephone 31

Main telephone 32
MAXI DOT-Display
- Telephone 11

MAXI DOT display
- Media 9
- operation 8
- Radio 9

Media 22
- Audio source 24
- AUX 27
- Bluetooth Audio 25
- Browser 23
- File formats 27
- Foreword 22
- List 23
- Main menu 22
- Multifunction steering wheel 9
- Multimedia database 23
- Operation 22
- Playback 22
- Requirements and limitations 27
- safe removal of the signal source 15
- SD memory card 25
- Select audio source 25
- Settings 24
- supported file formats 27
- supported sources 27
- USB 26

Menu CAR 49
MirrorLink 45
- Connection conditions 46
- Data transmission 14
- Function problems 47
- Operation 47
- Settings 47
- Start function 46

Multi-function display 51
Multi-media
- AUX 27

Multifunction steering wheel
- Media 9
- Radio 9
- Telephone 11

Multimedia
- USB 26

Multimedia database 23
Mute 6

O

Operation
- Media 22
- MirrorLink 47
- Pictures 29
- Radio 16
- Telephone 31

P

Pair device
- Pairing confirmation 37

Pair the telephone
- with your device 34

Parking aid 50
Pictures 29
- Operation 29
- safe removal of the signal source 15

Playback
- Media 22

R

Radio 16
- DAB settings 20
- FM - settings 20
- Frequency range 17
- List of available stations 17
- Main menu 16
- Multifunction steering wheel 9
- Operation 16
- Preface 16
- Save station 18
- Search for station 18
- Select station 18
- Settings 20

Station Logo 19
Traffic programme (TP) 19
Radio station
Logo 19
Save station 18
Search for station 18
Select station 18
Radio station logo 19

S

Safe removal of the signal source 15
Save radio station 18
Screen
see device screen 5
Screen display 7
SD memory card 25
Select frequency range
See main menu 16
Select radio station
See main menu 16
Select source
Images 29
Media 25
Service 52
Set the vehicle systems
Light 51
Settings
Additional keyboard languages 14
Bluetooth 15
DAB 20
Device 12, 13
Device screen 13
FM 20
Images 30
Keyboard 14
Language 13
Manage favourites 41
Media 24
MirrorLink 47
Radio 20
Restore factory settings 15
Software Update 15
Sound 12
System Information 15
Telephone 33
Time and date 14
Units 14
User profile 41
Volume 6
Setting vehicle systems
Parking and manoeuvring 50
Restore factory settings 52
Setup 13
Set vehicle systems
Tyres 50
Windscreen wipers 51
SMS 44
new 44
Operation 43
received 45
Software Update 15
Sound 12
Speed restriction for winter tyres 50
START-STOP 49
Station
See main menu 16
Status line 7
Switching the unit off 5
Switching the unit on 5

T

TCS 50
telephone
conditions for coupling 35
Telephone 30
Additional telephone 32
Bluetooth - profile 32
Breakdown service 39
Call list 42
Conference call 43
Connection - a connected telephone 38
Connection - more options of the telephone search 38
Connection - no telephone connected 38
Connection - two telephones connected 38
Connect telephone to the device 36
connect to the device 37
Coupling - connected telephone 35
Coupling - more options of the telephone search 36
Coupling - no telephone connected 35
Coupling - two telephones connected 36
Delete the telephone from the list of paired devices 37
Dial telephone number 39
Disconnection 39
Enter telephone number 39
Function problems 33
Functions 42
Info service 39
Main menu 31
Main telephone 32
Multifunction steering wheel 11
Operation 31
Pairing confirmation 37
Settings 33
Speed dialling a telephone number 41
Telephone book 40
Telephone conversation 42
Telephone number prefix 39
Text messages (SMS) 43, 44
Telephone book 40
Telephone conversation 42
Telephone functions 42
Telephone number 39
Telephone number prefix 39
Text messages 43, 44
new 44
received 45
Time 14

Tire pressure monitoring 49
Touch screen 5
Traffic programme (TP) 19
Tyre pressure display 50
Tyre pressure monitoring 50

U

Unit menus 6
Unit operation 7
Device screen 7
Units 14
USB 26

V

Vehicle Equipment 4
Vehicle ID no. 52
Vehicle settings 49
Vehicle status 49
Vehicle systems 49
Vehicle system settings
Opening and closing 51
VIN number 52
Volume 6
Volume setting 6

W

Warning messages 49

ŠKODA AUTO a.s. pursues a policy of constant product and model development. We trust that you will understand that changes to models in terms of shape, equipment and engineering, may be introduced at any time. The information about appearance, performances, dimensions, weight, standards and functions of the vehicle is correct at the time of publication. Some equipment might only be introduced at a later date, or might only be offered in certain markets; information is provided by ŠKODA Partners. It is therefore not possible for legal claims to be made based on the data, illustrations and descriptions contained in this Owner's Manual.

Reprinting, reproduction, translation, or any other use, either in whole or in part, is not permitted without the written consent of ŠKODA AUTO a.s..

ŠKODA AUTO a.s. expressly reserves all rights relating to copyright laws.

Subject to change.

Issued by: ŠKODA AUTO a.s.

© ŠKODA AUTO a.s. 2014

www.skoda-auto.com

Bolero: Fabia
Infotainment anglicky 08.2014
S00.5614.30.20
6V0012720EA



6V0012720EA